
Fuel Pump Installation

1. Remove the current fuel pump and hoses from the engine. Retain and reuse the fuel tank hose and pulse hose when installing the new pump.


2. Cut the outlet hose on its pump end so the total length from end to

end is approximately 7 inches.

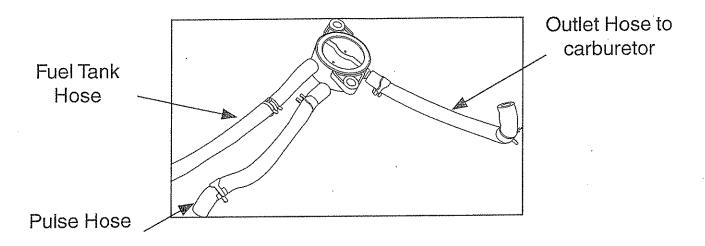

3. Connect the three hoses to the new fuel pump as shown above. Secure the hoses with hose clamps.

4. Install the pump as shown below. Make sure all hoses are fully installed and secured with the hose clamps on each end.

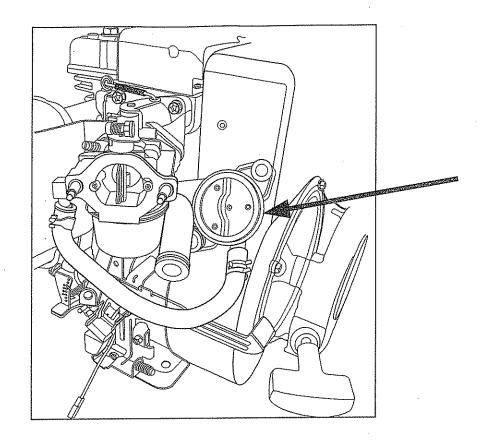

5. When the air cleaner base is reinstalled, tuck the fuel pump behind the base to prevent the outlet hose from interfering with the throttle lever.