



# Parts Manual

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Mfg. No: 126M02-6863-F1



---




















<b>Model Components</b>	<b>Page</b>
Air Cleaner, Exhaust System.....	4
Blower Housing, Flywheel, Ignition, Rewind Starter.....	8
Blower Housing/Shrouds.....	10
Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Pistion Group, Valves.....	12
Carburetor.....	16
Controls, Electrical, Flywheel Brake, Governor Spring.....	18
Electric Starter, Gasket Kits, Gasket and Carburetor Overhaul Kits.....	22
Fuel Supply.....	24
Replacement Engine - US & Canada.....	26

Not For  
Reproduction

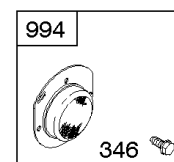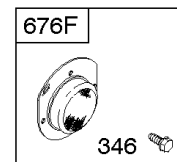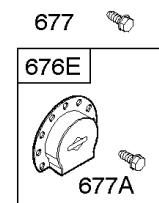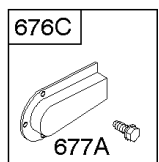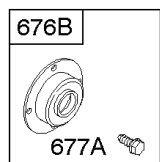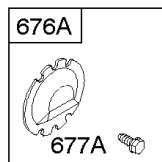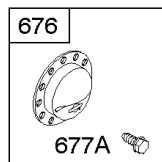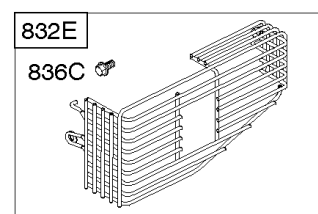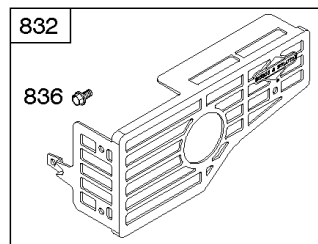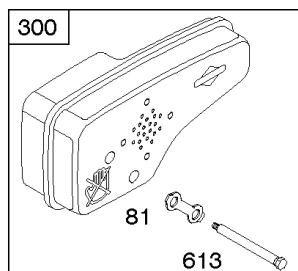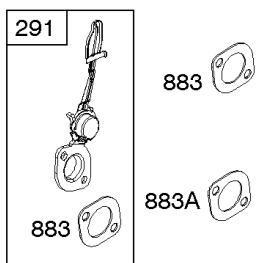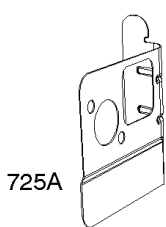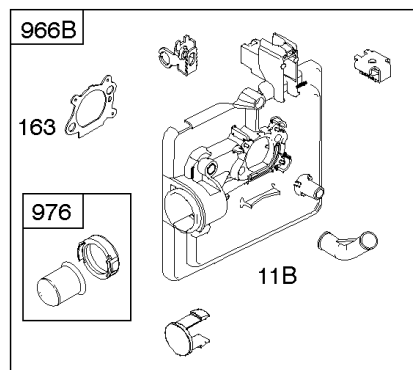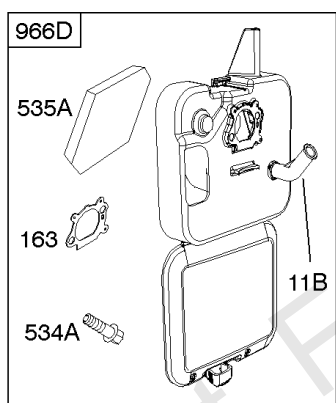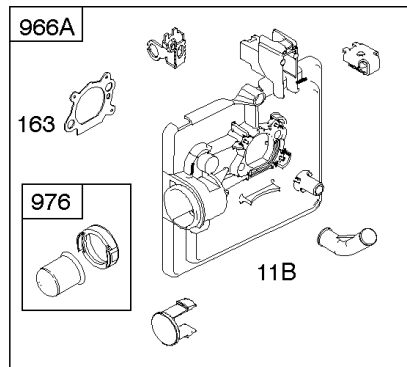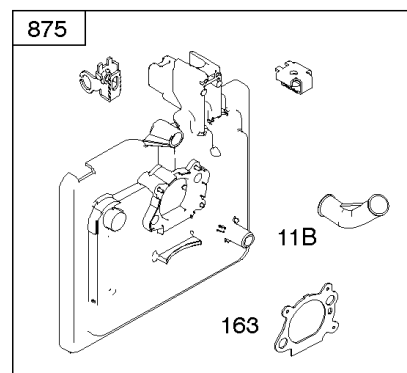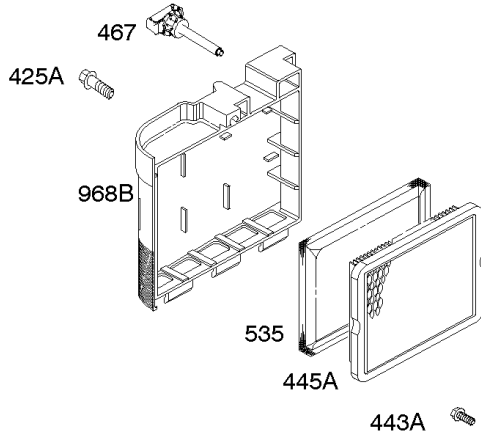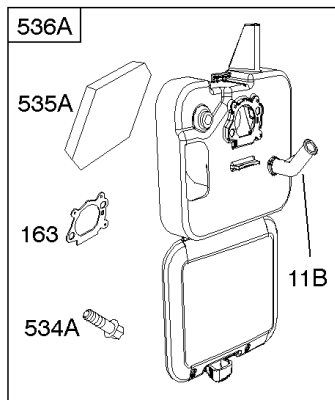

## Air Cleaner, Exhaust System

           
 
 
 
 
 
 
 
 
REF NO	PART NO	QTY	DESCRIPTION
11B	691923		TUBE, Breather
81	691740		LOCK, Muffler Screw
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
291	593208		THERMOSTAT
300	593581		MUFFLER -Used After Code Date 13121500
300	593819		MUFFLER -Used After Code Date 13121500
300	692038		MUFFLER -Used Before Code Date 13121600
300	790828		MUFFLER -Used Before Code Date 13121600
346	593440		SCREW -(Spark Arrestor)
425A	690670		SCREW -(Air Cleaner Cover)
443A	692523		SCREW -(Air Cleaner Primer Base)
445A	491588S		FILTER, A/C Cartridge
467	790842		KNOB, Air Cleaner Cover
534A	798294		SCREW -(Air Cleaner)
535	493537S		FILTER, Air Cleaner Foam
536A	798293		CLEANER, Air -(3 point mounting) -Used Before Code Date 14012700
613	691340		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.25 Inch Shoulder Length)
613	790833		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.08 Inch Shoulder Length)
676	396548		DEFLECTOR, Muffler
676A	393756		DEFLECTOR, Muffler -(Side Outlet)
676B	397931		DEFLECTOR, Muffler
676E	393760		DEFLECTOR, Muffler
676C	493871		DEFLECTOR, Muffler
676F	590745		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector) (Thread Forming)
677A	593440		SCREW -(Muffler Deflector) (Self-Drilling & Tapping)
725	590459		SHIELD, Heat
725A	590460		SHIELD, Heat
832	593875		GUARD, Muffler
832E	793568		MUFFLER
836	690664		SCREW -(Muffler Guard)
836C	790745		SCREW -(Muffler Guard)
875	593580		BASE, Air Cleaner -(Primer) (2 Point Mounting) -Used After Code Date 14012600
883	691881		GASKET, Exhaust
883A	793497		GASKET, Exhaust
966B	795259		BASE-AIR CLEANER PRIM -(Primer) (3 point mounting) -Used Before Code Date 14012700

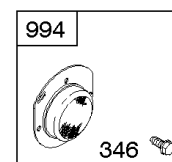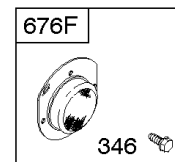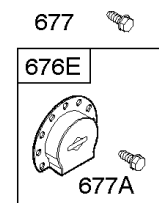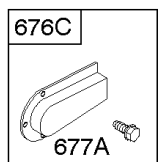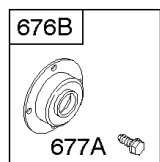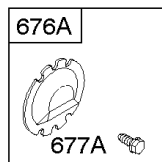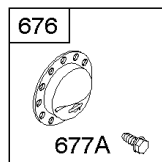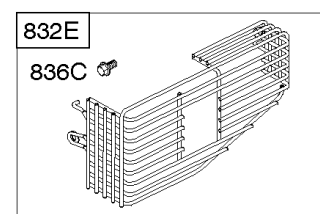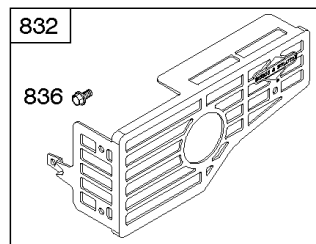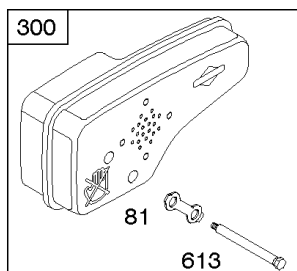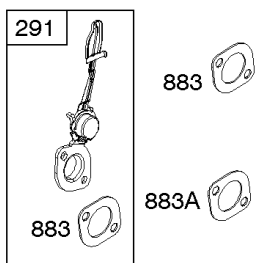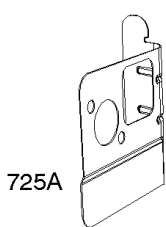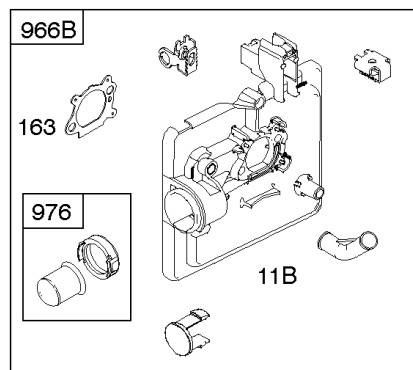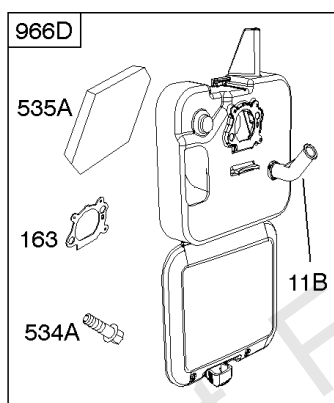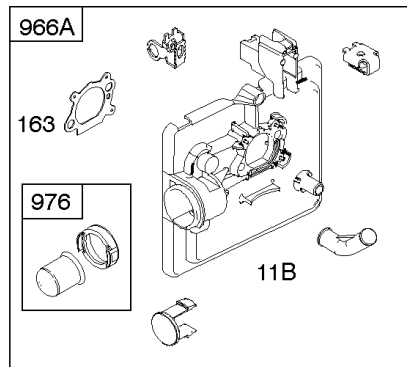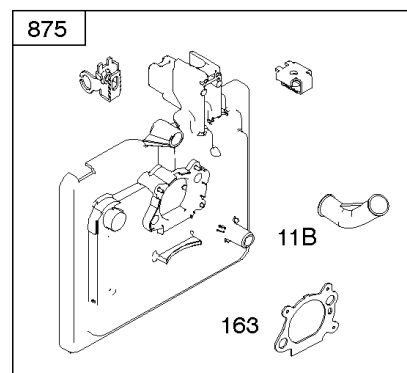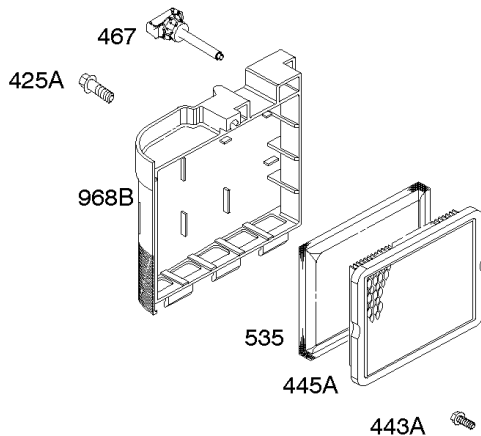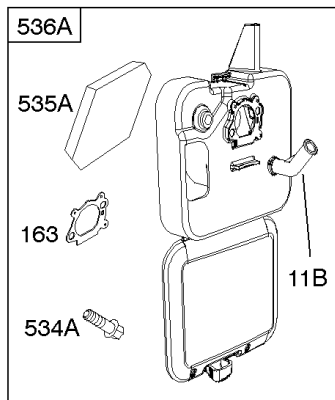

## *Air Cleaner, Exhaust System*

REF NO	PART NO	QTY	DESCRIPTION
966D	593945		BASE, Air Cleaner -(Primer) -Used After Code Date 14012600
968B	692298		COVER, Air Cleaner
976	694395		PRIMER, Carburetor
994	398067		ARRESTOR-SPARK

         Not For Reproduction











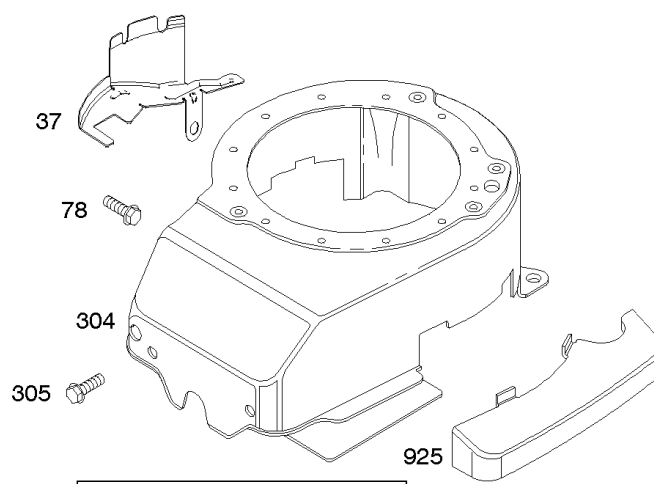
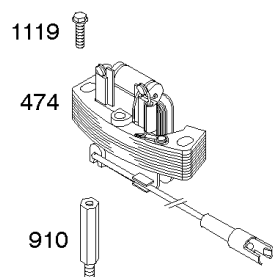
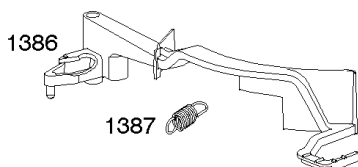
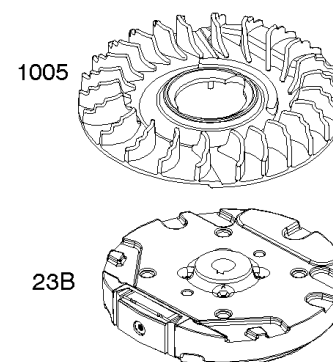
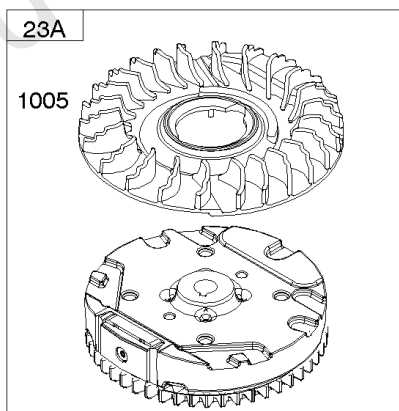
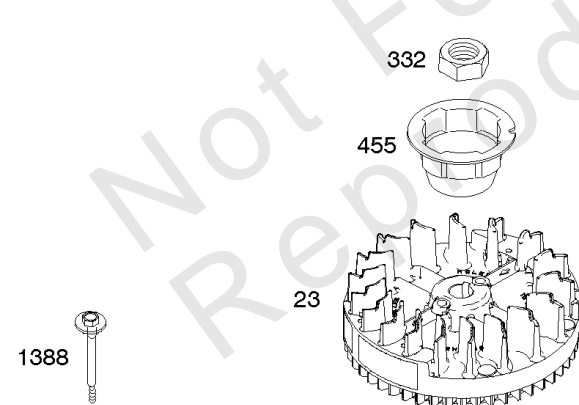
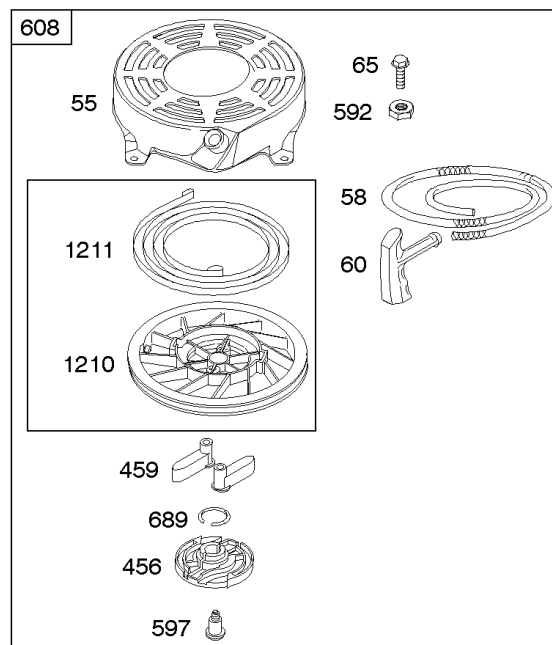
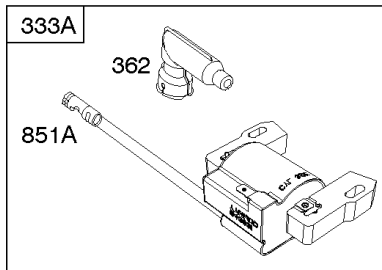
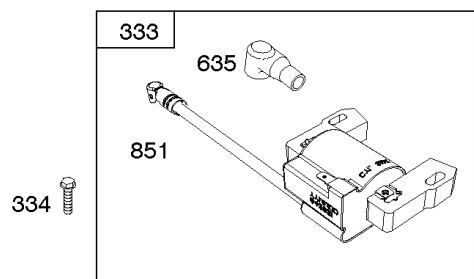


1036 EMISSIONS LABEL



## Blower Housing, Flywheel, Ignition, Rewind Starter

                   REF NO	PART NO	QTY	DESCRIPTION
23	691987		FLYWHEEL
23B	790536		FLYWHEEL
37	793756		GUARD-FLYWHEEL
55	691421		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(Cut To Required Length)
60	281434S		GRIP, Starter Rope
60C	799716		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
78	691108		SCREW -(Flywheel Guard)
304	790826		HOUSING, Blower
305	691108		SCREW -(Blower Housing)
332	690662		NUT -(Flywheel)
333	590454		ARMATURE-MAGNETO
333A	590455		ARMATURE, Magneto
334	691061		SCREW -(Magneto Armature)
362	793351		SHIELD-SPARK PLUG
363	19069		PULLER, Flywheel
455	791960		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
474	691991		ALTERNATOR
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	497680		STARTER, Rewind
635	66538S		BOOT, Spark PLug
689	691855		SPRING-FRICTION
851	493880S		TERMINAL-SPARK PLUG
851A	692424		TERMINAL, Spark Plug
910	691094		STUD -(Alternator)
925	795403		COVER-LINKAGE
946	691738		STOP, Rope
1005	691346		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1119	692979		SCREW -(Alternator)
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)
1386	790848		VANE, Air -(Autochoke System)
1387	790849		SPRING, Air Vane
1388	790850		SCREW -(Air Vane) (Auto Choke System)

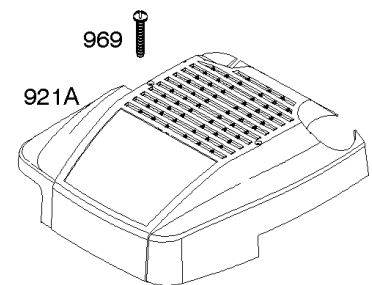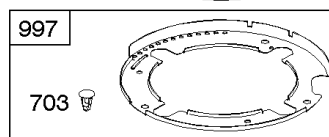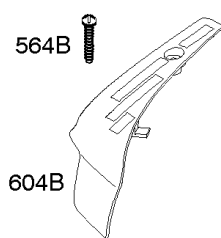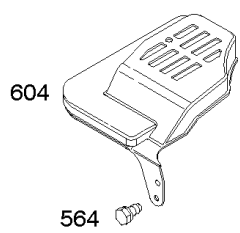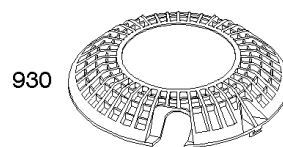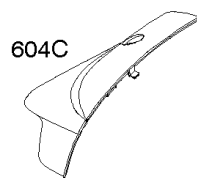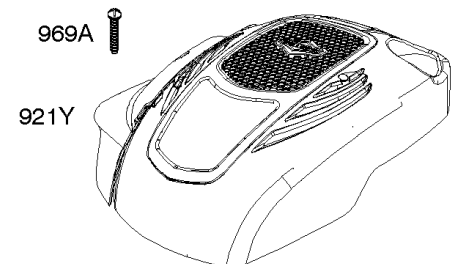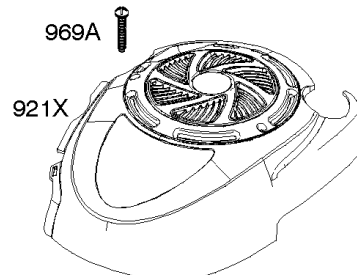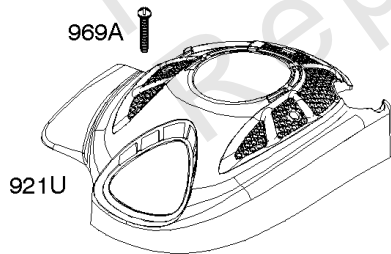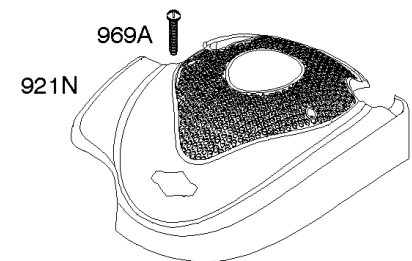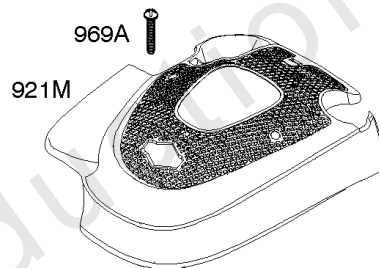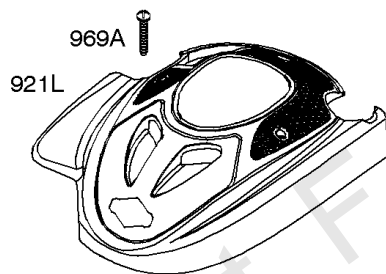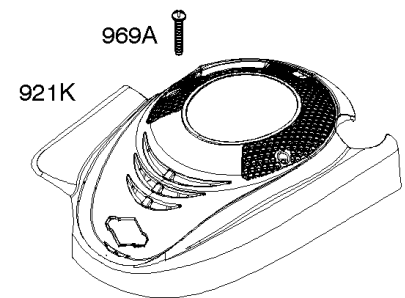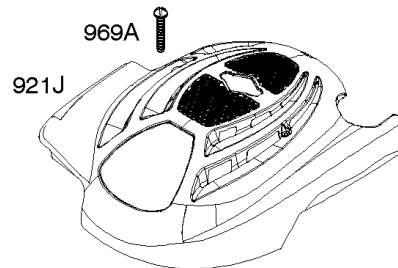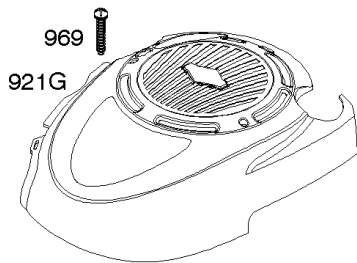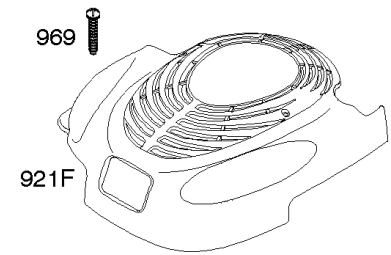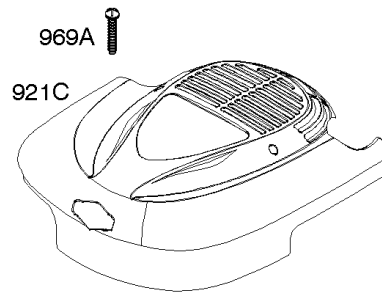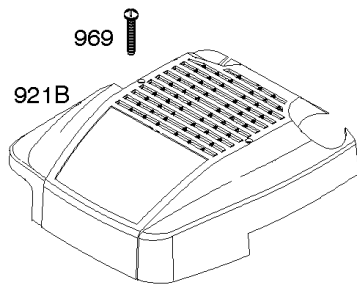


## Blower Housing/Shrouds

REF NO	PART NO	QTY	DESCRIPTION
563	691138		SCREW -(Debris Screen Guard)
564	690664		SCREW -(Control Cover)
564B	698589		SCREW -(Control Cover)
604	691757		COVER-CONTROL
604B	790703		COVER, Control
604C	792418		COVER, Control
703	696309		CLIP
921B	692931		HOUSING, Blower
921Y	591955		HOUSING, Blower
921C	695889		HOUSING, Blower
921F	697343		HOUSING, Blower
921K	699984		HOUSING, Blower
921J	790036		HOUSING, Blower
921L	791026		HOUSING, Blower
921M	792652		HOUSING, Blower
921N	792675		HOUSING, Blower
921U	794355		HOUSING, Blower
921G	795064		HOUSING, Blower
921X	796706		HOUSING, Blower
930	691919		GUARD, Rewind
949	696306		GUARD, Debris Screen
969	690700		SCREW -(Blower Housing)
969A	691138		SCREW -(Blower Housing)
997	696310		SHIELD, Debris

1319 WARNING LABEL

 1330 REPAIR MANUAL

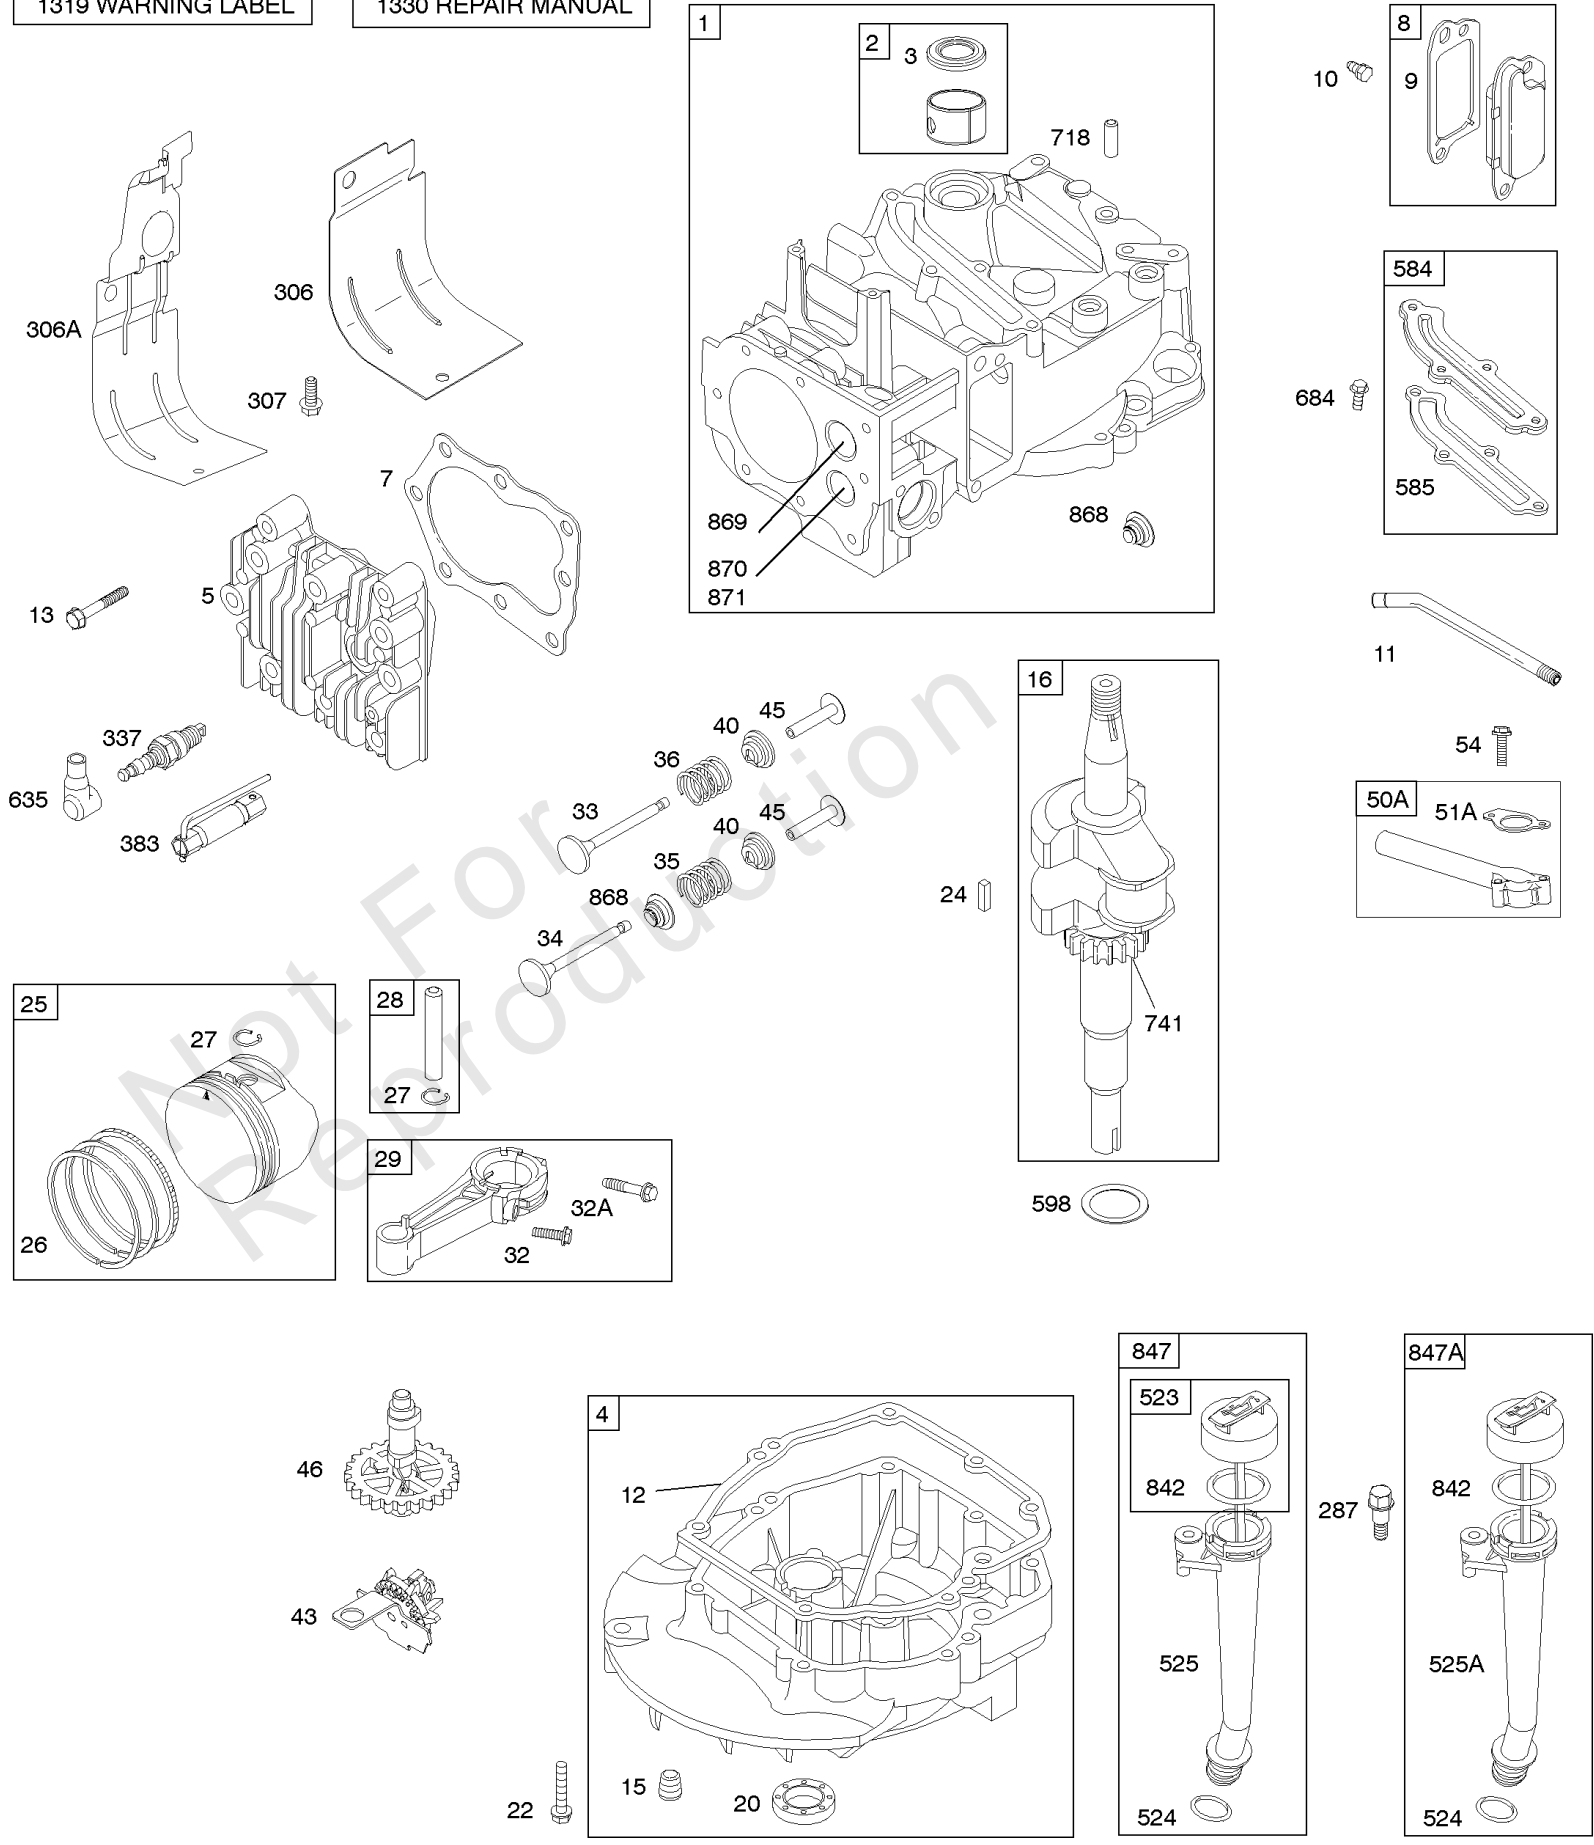


## Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Pistion Group, Valves

REF NO	PART NO	QTY	DESCRIPTION
1	592645		CYLINDER ASSEMBLY
2	796961		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
5	590411		HEAD, Cylinder
7	799875		GASKET, Cylinder Head
8	590395		BREATHER ASSEMBLY
9	699833		GASKET-BREATHER
10	691125		SCREW -(Breather Assembly)
11	691781		TUBE-BREATHER
12	692232		GASKET, Crankcase
13	590422		SCREW -(Cylinder Head)
15	691680		PLUG, Oil Drain -(3/8"-18 NPTF - Internal 3/8" Sq)
15	690946		PLUG, Oil Drain -(3/8"-18 NPTF-External 7/16" Sq)
16	797017		CRANKSHAFT
20	399781S		SEAL, Oil -(PTO Side)
22	691092		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	590404		PISTON ASSEMBLY -(Standard)
25	590405		PISTON ASSEMBLY -(.020 Oversize)
26	590402		SET, Ring -(Standard)
26	590403		SET, Ring -(.020 Oversize)
27	691588		LOCK, Piston Pin
28	298909		PIN, Piston
29	797306		ROD, Connecting
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
33	590394		VALVE-EXHAUST
34	590393		VALVE-INTAKE
35	691270		SPRING, Valve -(Intake)
36	691270		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
43	691997		SLINGER, Governor/Oil
45	690548		TAPPET, Valve
46	691449		CAMSHAFT
50A	794305		MANIFOLD, Intake
51A	794306		GASKET, Intake
54	691650		SCREW -(Intake Manifold)
287	690940		SCREW -(Dipstick Tube)


1319 WARNING LABEL

 1330 REPAIR MANUAL

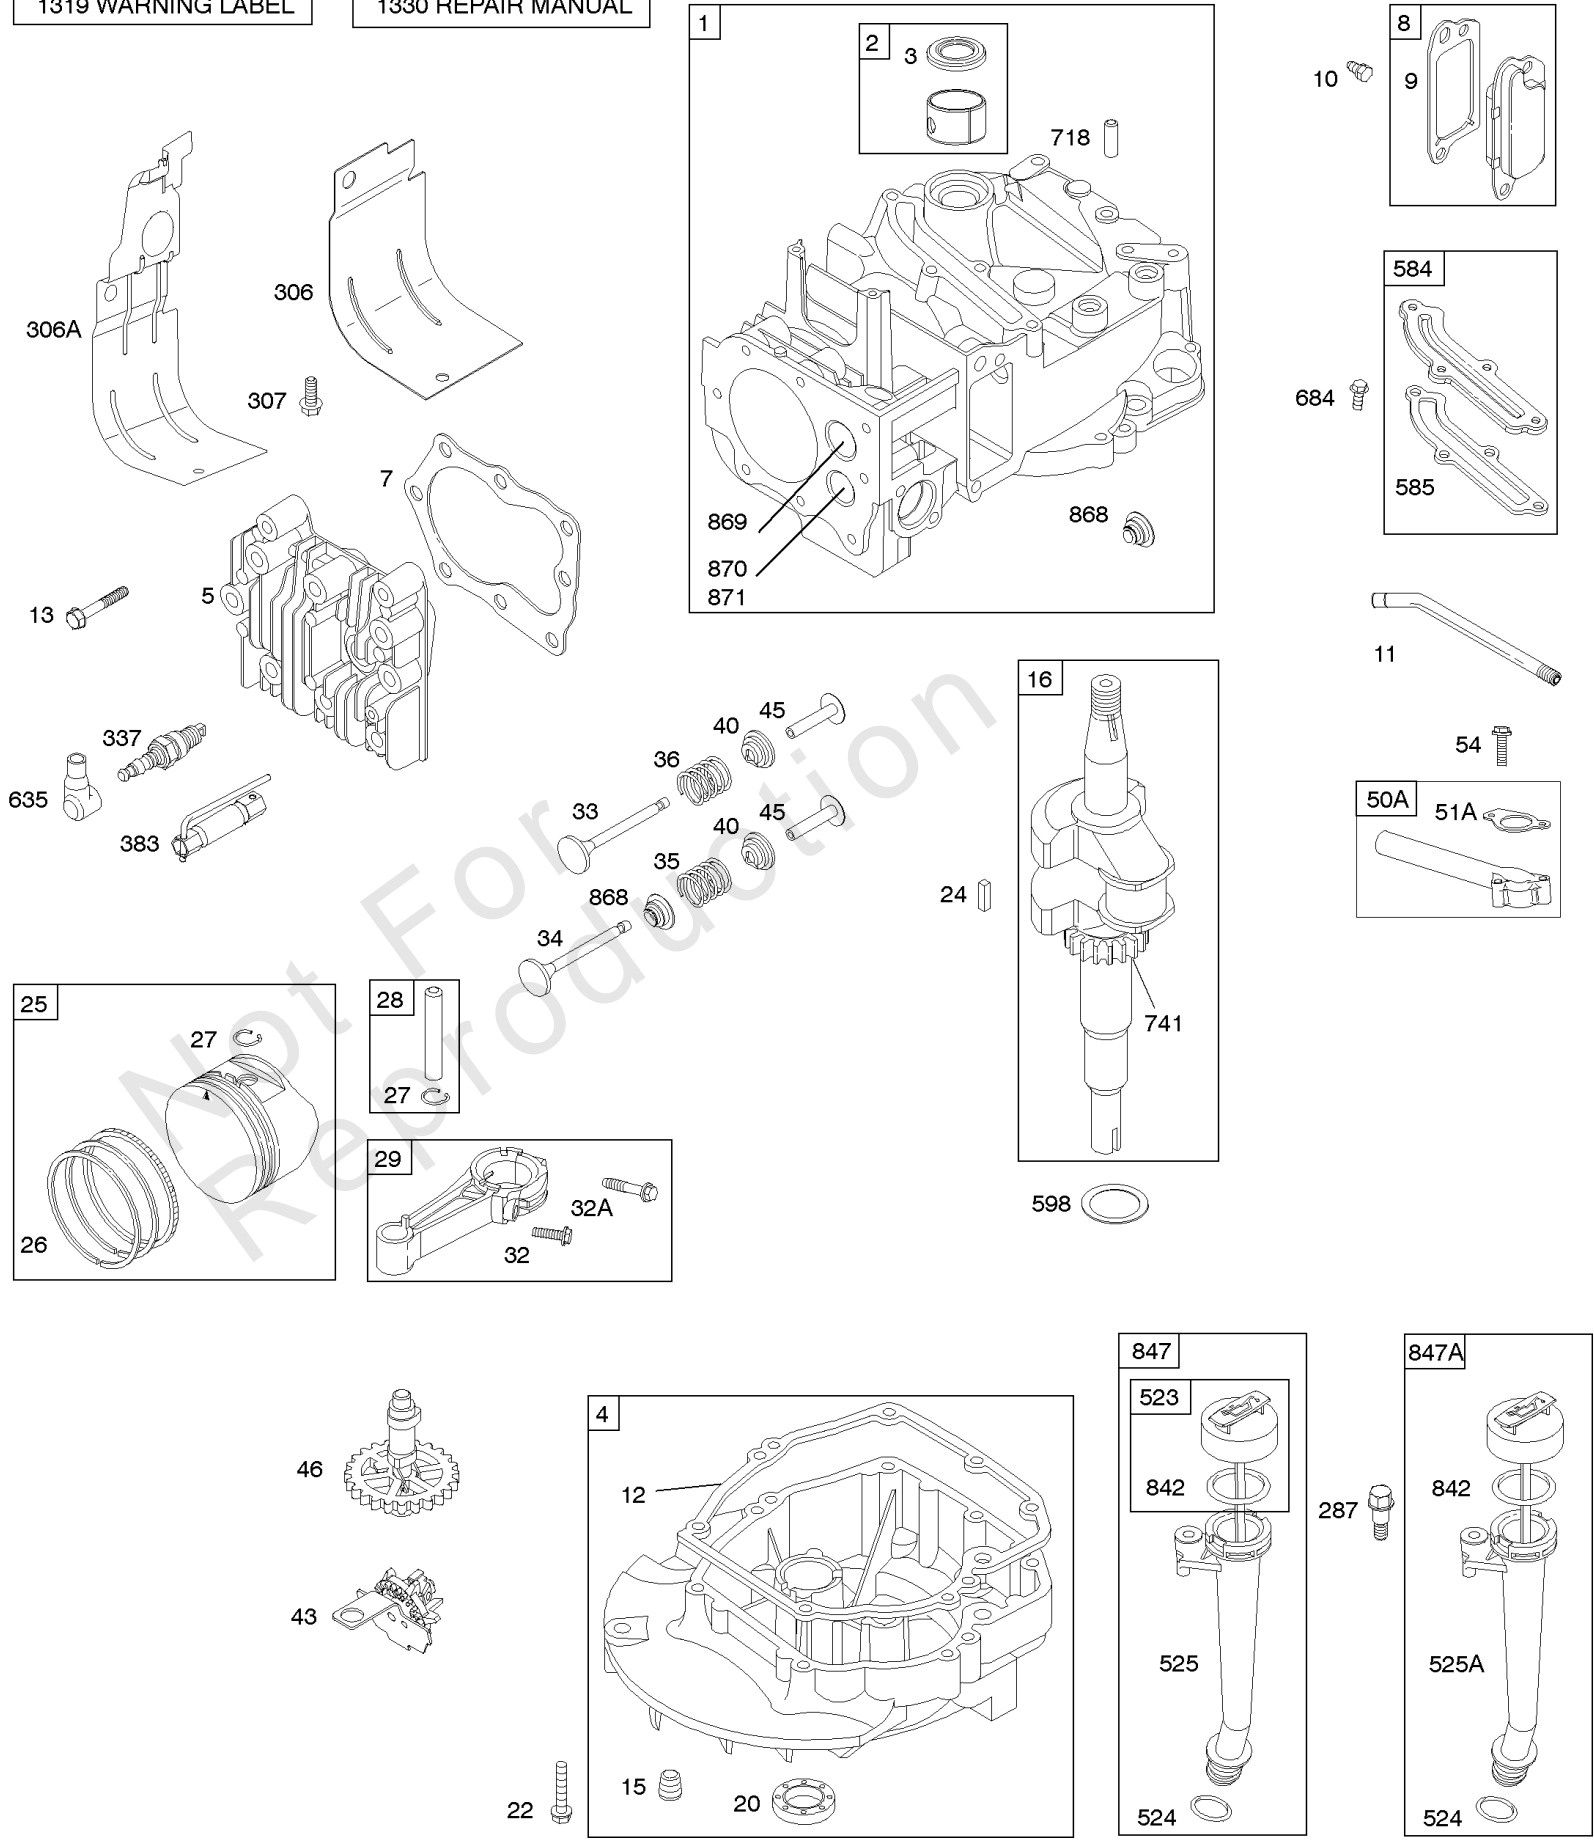


## Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Pistion Group, Valves

 
REF NO	PART NO	QTY	DESCRIPTION
306	690450		SHIELD, Cylinder
306A	790836		SHIELD, Cylinder
307	690345		SCREW -(Cylinder Shield)
337	591910		PLUG, Spark
383	89838S		WRENCH-SPARK PLUG
523	499621		DIPSTICK
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
525	495265		TUBE, Dipstick
525A	593806		TUBE, Dipstick
584	697734		COVER-BREA PASSAGE
585	691879		GASKET-BREA PASSAGE
598	592587		SHIM, End Play -(Crankshaft or Camshaft Bearing) (0.012)
635	66538S		BOOT, Spark PLug
684	690345		SCREW -(Breather Passage Cover)
718	690959		PIN, Locating
741	797521		GEAR, Timing -(Metal)
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		DIPSTICK/TUBE ASSY
847A	593808		DIPSTICK/TUBE ASSEMBLY -(Mow N Stow)
868	590410		SEAL, Valve
869	691155		SEAT, Valve -(Intake)
870	690380		SEAT, Valve -(Exhaust)
871	590409		BUSHING, Valve Guide
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

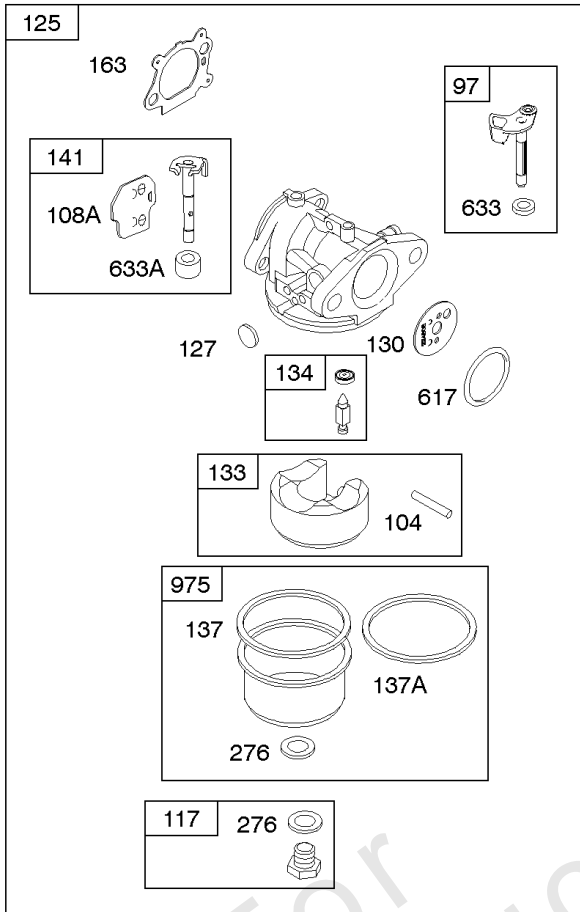


276  
118

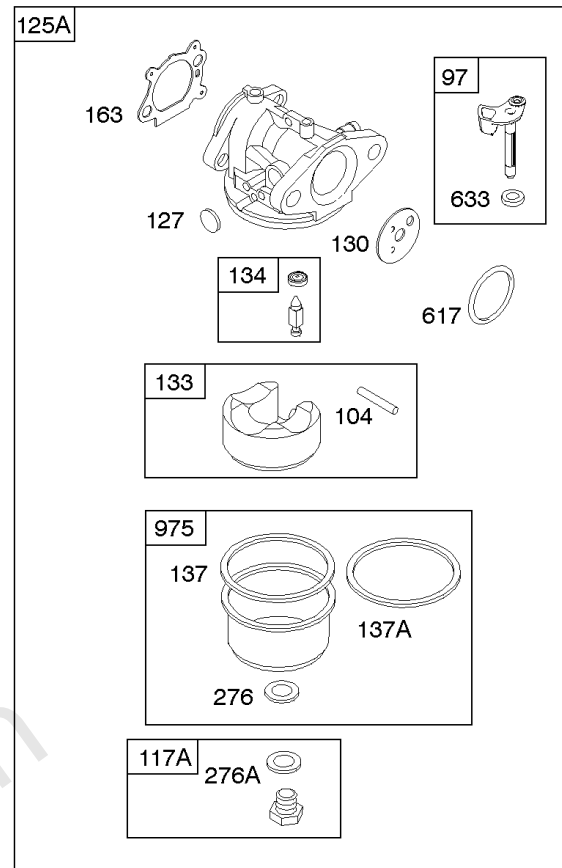 

118A  
276A

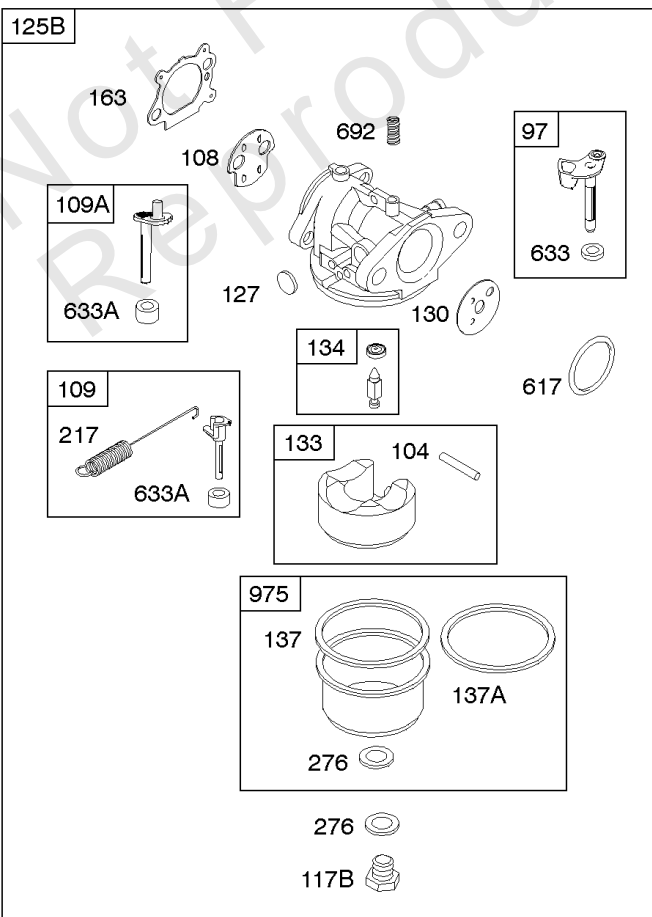 

118B  
276A

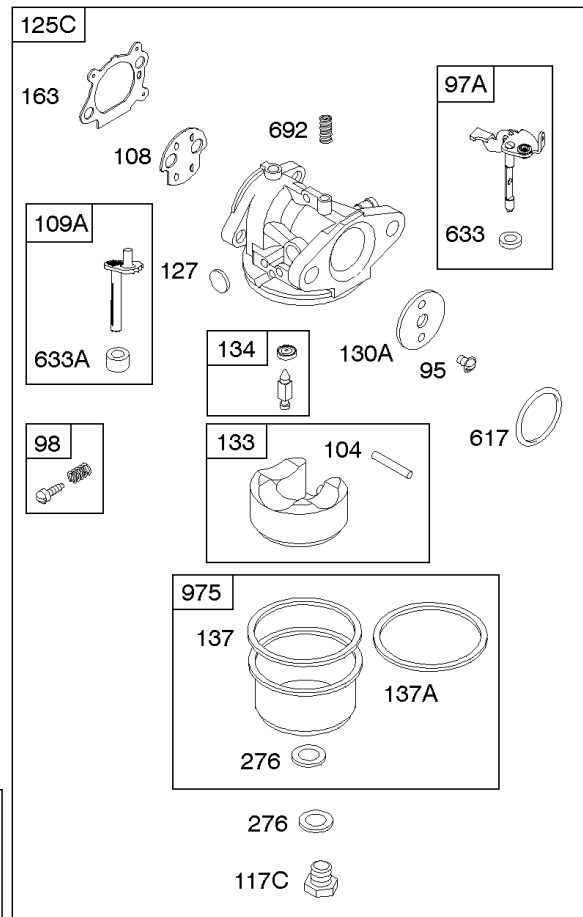 


118C  
276A




## Carburetor

 REF NO	PART NO	QTY	DESCRIPTION
95	691636		SCREW -(Throttle Valve)
97	696565		SHAFT, Throttle -(Plastic)
98	398185		KIT-IDLE SPEED -(Idle Speed) (Lmt 26, 27, 28, 31)
104	797622		PIN-FLOAT HINGE
108	691182		VALVE-CHOKE
108A	795935		VALVE, Choke
109A	498593		SHAFT, Choke
117	590440		JET, Main -(Standard)
118	798661		JET, Main -(High Altitude)
125	799866		CARBURETOR -(Autochoke System)
127	694468		PLUG, Welch -(Bowl Vent)
130	696564		VALVE, Throttle
133	398187		FLOAT-CARBURETOR
134	398188		KIT-NEEDLE/SEAT -(Mow N Stow)
137	796610		GASKET, Float Bowl
137A	693981		GASKET-FLOAT BOWL -(1/16)
141	796193		KIT, Choke Shaft
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
217	690354		SPRING, Choke Return
276	271716		WASHER-SEALING
276A	797632		WASHER, Sealing
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL-CHOKE/THR SHAFT -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
692	590931		SPRING, Detent
975	796611		BOWL, Float

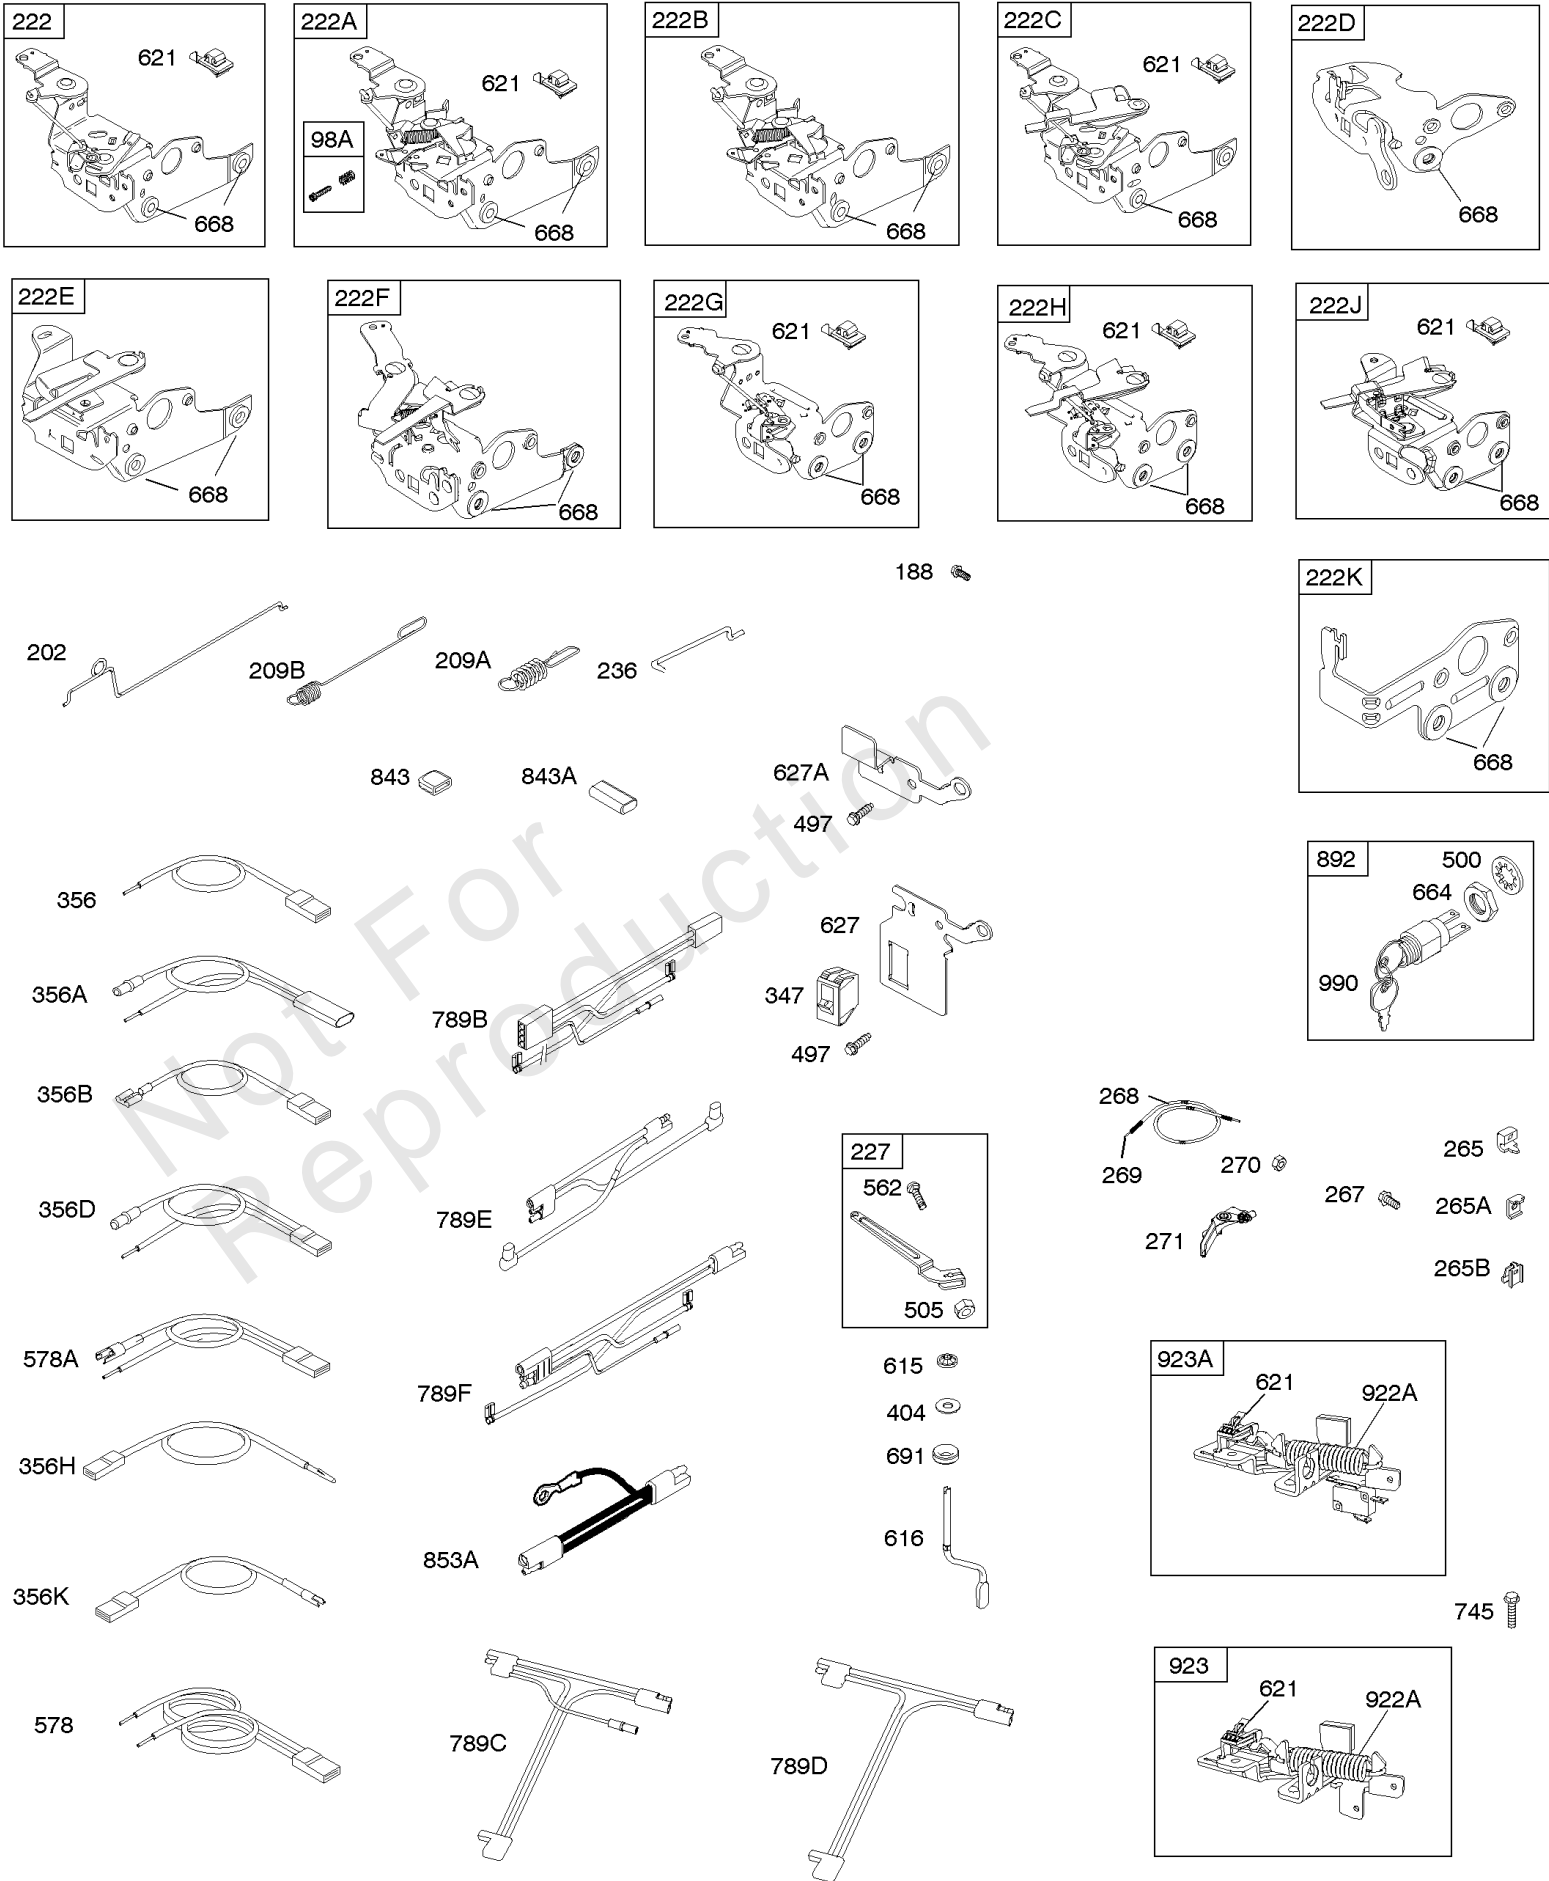

## Controls, Electrical, Flywheel Brake, Governor Spring




 
REF NO	PART NO	QTY	DESCRIPTION
98A	493280		KIT-IDLE SPEED -(Idle Speed)
188	693399		SCREW -(Control Bracket)
202	691829		LINK, Mechanical Governor
209A	795883		SPRING, Governor
209B	699056		SPRING, Governor
222K	593582		BRACKET-CONTROL -(Fixed Speed)
227	690783		LEVER-GOV CONTROL
236	691826		LINK, Lockout
265	690798		CLAMP, Casing
265A	691024		CLAMP, Casing
265B	692179		CLAMP-CASING
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
347	691396		SWITCH, Rocker
356	692390		WIRE, Stop
356A	795609		WIRE, Stop
356B	693010		WIRE, Stop
356D	496381		WIRE, Stop
356H	690791		WIRE, Stop
356K	696030		WIRE, Stop
404	690272		WASHER -(Governor Crank)
497	690664		SCREW -(Stopswitch Bracket)
500	691086		WASHER -(Key Switch)
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever) (Governor Control Lever)
578	398153		WIRE ASSEMBLY
578A	695283		WIRE ASSEMBLY
615	690340		RETAINER, Governor Shaft
616	698801		CRANK-GOVERNOR
621	692310		SWITCH, Stop
627	792565		BRACKET-STOPSWITCH
627A	793211		BRACKET, Stopswitch
664	691087		NUT -(Key Switch)
668	493823		SPACER -(Includes 2)
691	593837		SEAL, Governor Shaft
745	691648		SCREW -(Brake)
789B	792685		HARNESS, Wiring

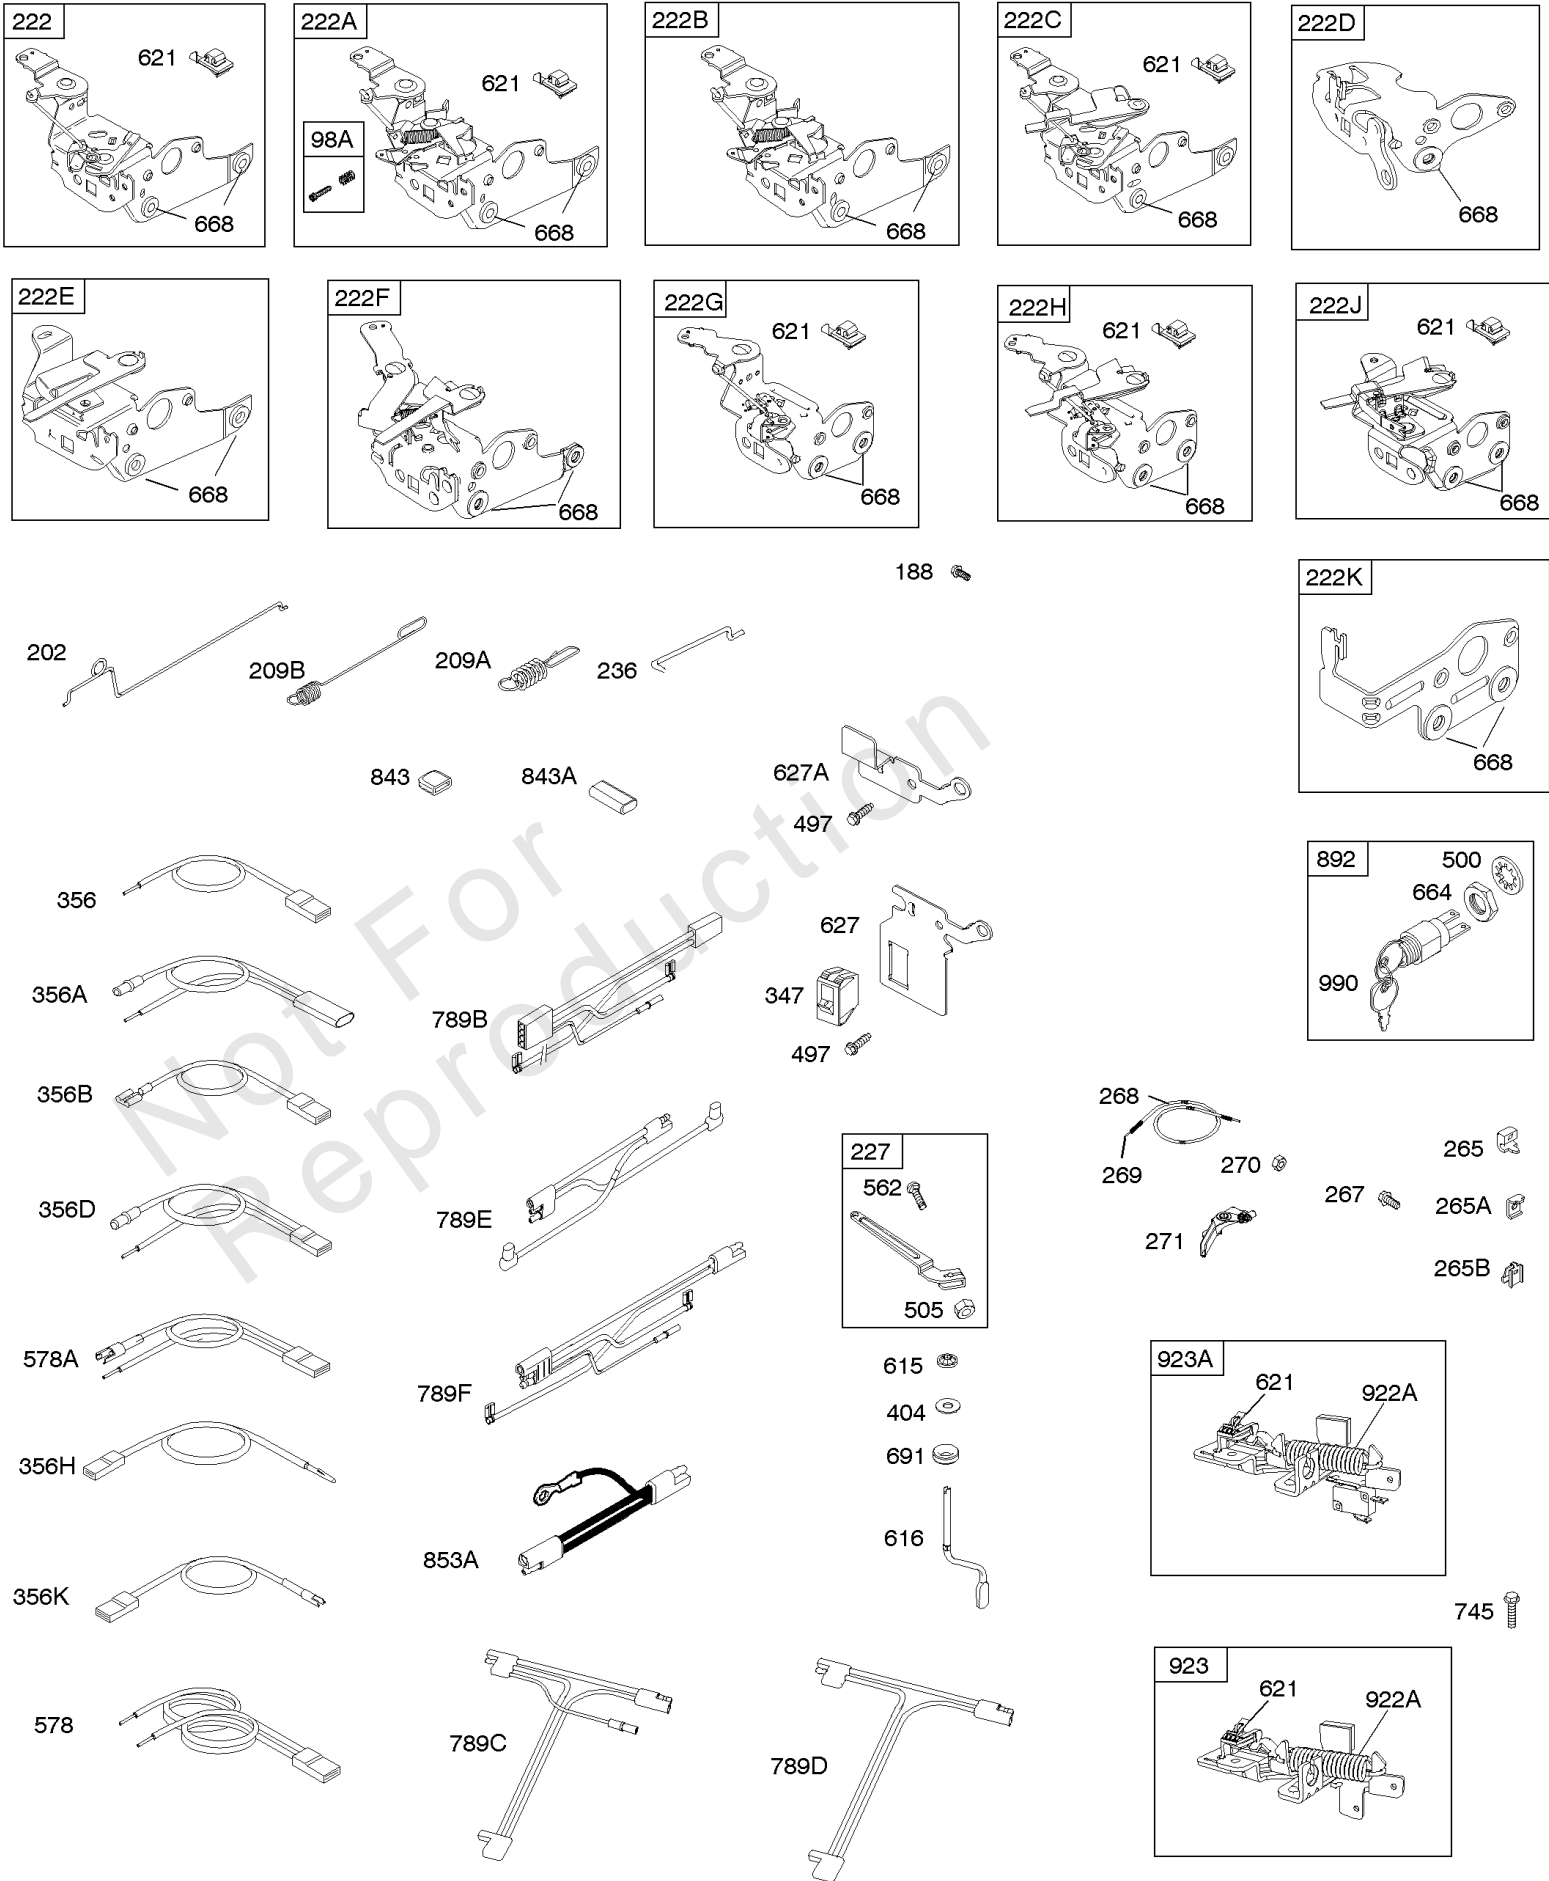

## Controls, Electrical, Flywheel Brake, Governor Spring









REF NO	PART NO	QTY	DESCRIPTION
789C	796385		HARNES, Wiring
789D	796574		HARNES, Wiring
789F	594393		HARNES, Wiring
843	691884		SLEEVE, Lever -(Speed Control)
843A	691895		SLEEVE, Lever -(Choke)
853A	695897		ADAPTER, Wire
892	690646		SWITCH, Key
922A	692135		SPRING, Brake
923	796136		BRAKE -(Rewind Start)
923A	796387		BRAKE -(Electric Start)
990	691959		SET, Key

    Not For Reproduction

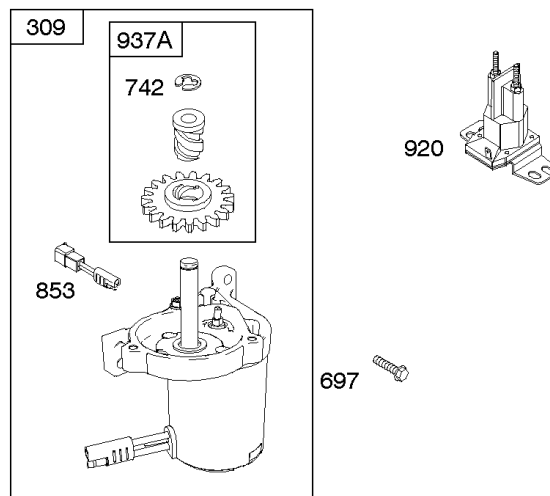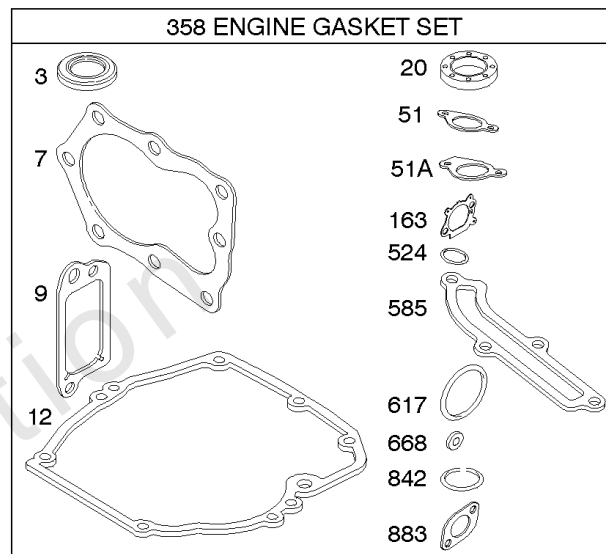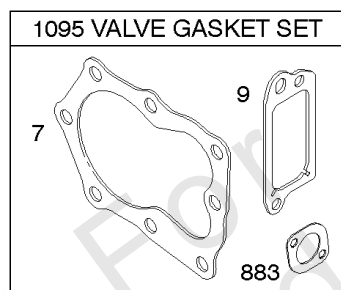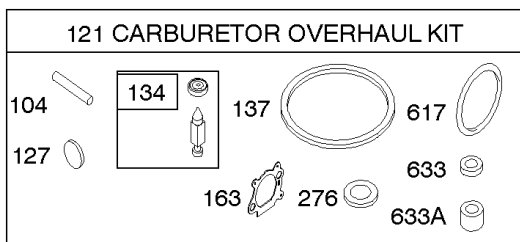

## Electric Starter, Gasket Kits, Gasket and Carburetor Overhaul Kits

        REF NO	PART NO	QTY	DESCRIPTION
3	299819S		SEAL, Oil -(Magneto Side)
7	799875		GASKET, Cylinder Head
9	699833		GASKET-BREATHER
12	692232		GASKET, Crankcase
20	399781S		SEAL, Oil -(PTO Side)
51	272199S		GASKET, Intake
51A	794306		GASKET, Intake
104	797622		PIN-FLOAT HINGE
121	498260		KIT, Carburetor Overhaul
127	694468		PLUG, Welch -(Bowl Vent)
134	398188		KIT-NEEDLE/SEAT -(Mow N Stow)
137	796610		GASKET, Float Bowl
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
276	271716		WASHER-SEALING
309	799045		MOTOR-STARTER
358	590508		GASKET SET, Engine
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)
585	691879		GASKET-BREA PASSAGE
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL-CHOKE/THR SHAFT -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
668	493823		SPACER -(Includes 2)
697	691127		SCREW -(Starter Motor) (Drive Cap) (1/4-20x.75)
742	93941		RETAINER, E Ring
842	691031		SEAL, O-Ring -(Dipstick Tube)
853	695268		ADAPTER, Wire
883	691881		GASKET, Exhaust
920	691656		SOLENOID, Starter
937A	799420		SPLINE, Starter
1095	590507		GASKET SET, Valve

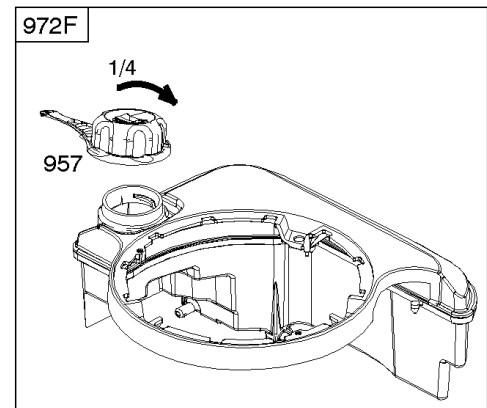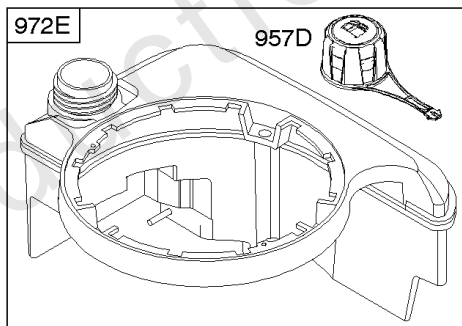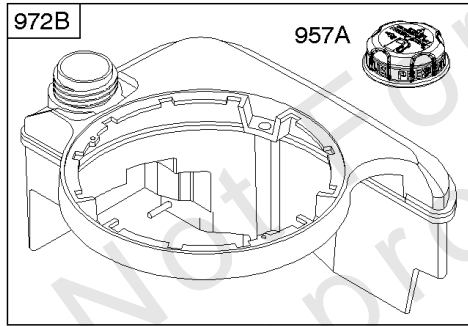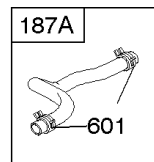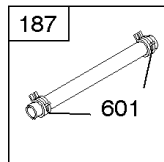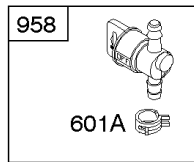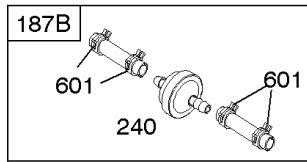



## Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791873		LINE-FUEL -(Molded)
187B	791891		LINE-FUEL -(Includes Filter)
190	690940		SCREW -(Fuel Tank)
240	298090S		FILTER, Fuel
601	791850		CLAMP, Hose
601A	691038		CLAMP, Hose
670	692294		SPACER, Fuel Tank
957	591003		CAP, Fuel Tank -(1/4 Turn Cap - Red)
957	799585		CAP, Fuel Tank -(1/4 Turn Cap - Black)
957A	692046		CAP, Fuel Tank -(Threaded)(Vented)
957D	796577		CAP-FUEL TANK
958	698183		VALVE, Fuel Shut Off
972B	699374		TANK, Fuel -(Threaded)
972F	590490		TANK, Fuel -(1/4 Turn Cap - Black)
972E	796578		TANK, Fuel -(Flourinated)
1059	692311		KIT, Screw/Washer

## Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	126M021625	1	Replacement Engine
	799984	1	Replacement Short Block
	-----		Top No-Load Speed: 3100 -Trim: ALL
	-----		Service Note: This Service Engine is NLA. Contact Your Engine Distributor For a Replacement

Not For Reproduction

