

 
 
 
 
 


Parts Manual

Mfg. No: 19E412-1131-E1

Model Components	Page
Air Cleaner, Muffler.....	4
Alternators, Engine/Valve Gasket Sets.....	6
Blower Housing/Shrouds, Rewind.....	8
Cam, Crankshaft, Cylinder, Valves, Piston/Rings, Crankcase Cover/Sump, Head, Breather.....	12
Carburetor, Carburetor Overhaul Kits.....	18
Controls, Fuel Tank, Springs/Links, Fuel Hoses.....	22
Electric Starter, Flywheel, Ignition.....	26
Replacement Engine - US & Canada.....	30

 
 

 
Not For
Reproduction

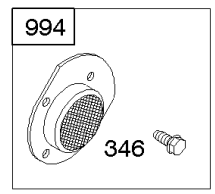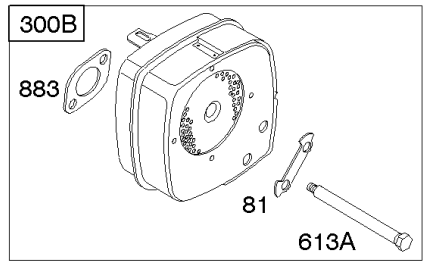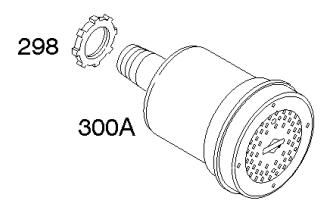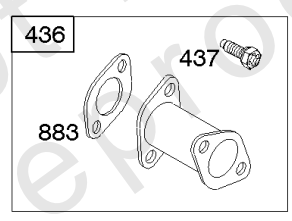
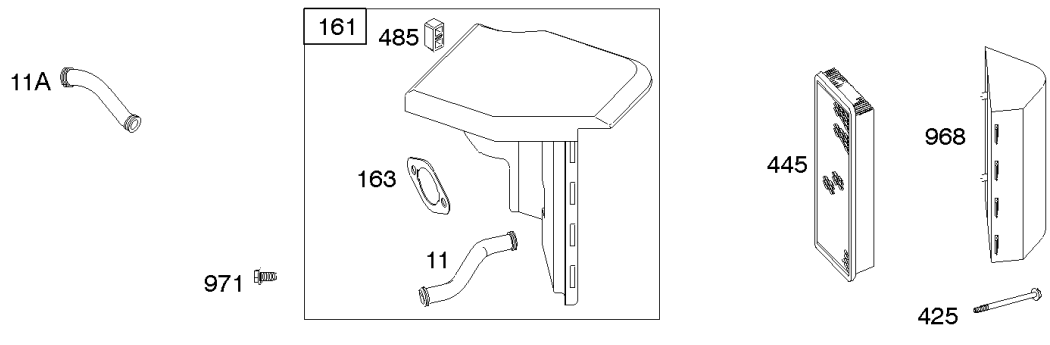


Not For
Reproduction



Air Cleaner, Muffler

REF NO	PART NO	QTY	DESCRIPTION
11	691907		TUBE, Breather -Used After Code Date 95040200
11A	691899		TUBE, Breather -Used After Code Date 95010100 -Used Before Code Date 95040300
81	691729		LOCK, Muffler Screw
161	498544		BASE-AIR CLEANER
163	692277		GASKET-AIR CLEANER -(Air Cleaner)
298	690453		LOCKNUT -(Muffler and Elbow)
300A	692025		MUFFLER -(Round Lo Tone)
346	690661		SCREW -(Spark Arrestor)
425	691671		SCREW -(Air Cleaner Cover)
436	497140		MANIFOLD, Exhaust
437	691665		SCREW -(Exhaust Manifold)
445	691643		FILTER, A/C Cartridge
485	692295		KNOB, Air Cleaner Cover -(Air Cleaner)
883	692237		GASKET-EXHAUST
968	691925		COVER, Air Cleaner
971	691003		SCREW -(Air Cleaner Base to Carburetor/Throttle Body)
994	399541		ARRESTOR, Spark

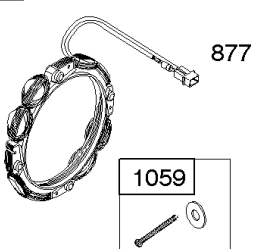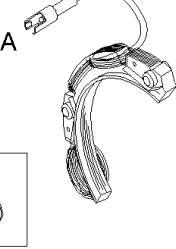DUAL CIRCUIT	DC ONLY
<p>474</p>  <p>877</p> <p>1059</p>	<p>474A</p>  <p>877A</p> <p>1059</p>
<p>877B</p> 	<p>578A</p> 



 
 


  NOTE: ALL OLD STYLE STATORS USE REFERENCE NUMBER 1119 MOUNTING SCREW

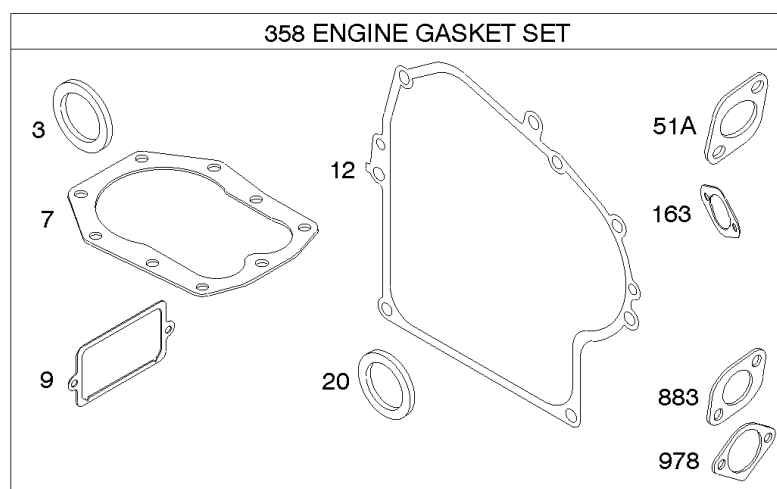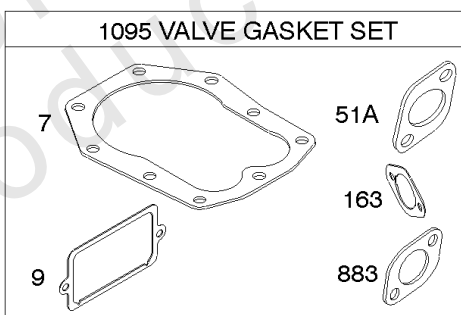





Alternators, Engine/Valve Gasket Sets

REF NO	PART NO	QTY	DESCRIPTION
3	391086S		SEAL, Oil -(Magneto Side)
7	272163S		GASKET, Cylinder Head
9	27803S		GASKET, Breather
12	27876		GASKET, Crankcase -(.005)
12	27877		GASKET, Crankcase -(.009)
12	692221		GASKET, Crankcase -(.015)(Standard)
20	391086S		SEAL, Oil -(PTO Side)
51A	691885		GASKET-INTAKE -(Manifold To Engine)
163	692277		GASKET-AIR CLEANER -(Air Cleaner)
356	398838		WIRE, Stop
358	497070		GASKET SET, Engine
474	696459		ALTERNATOR -(Dual Circuit)
474A	696578		ALTERNATOR -(DC Only)
578A	692306		WIRE ASSEMBLY
877	393814		WIRE/CONNECTOR, Alternator -(DC Only)
877A	393456		WIRE/CONNECTOR, Alternator -(Dual Circuit)
877B	399916		WIRE/CONN-ALTERNATOR
883	692237		GASKET-EXHAUST
895	692309		SWITCH, Rotary
978	273326S		GASKET-OIL GARD
1059	698516		KIT, Screw/Washer
1095	498534		GASKET SET, Valve
1119	691183		SCREW -(Alternator)

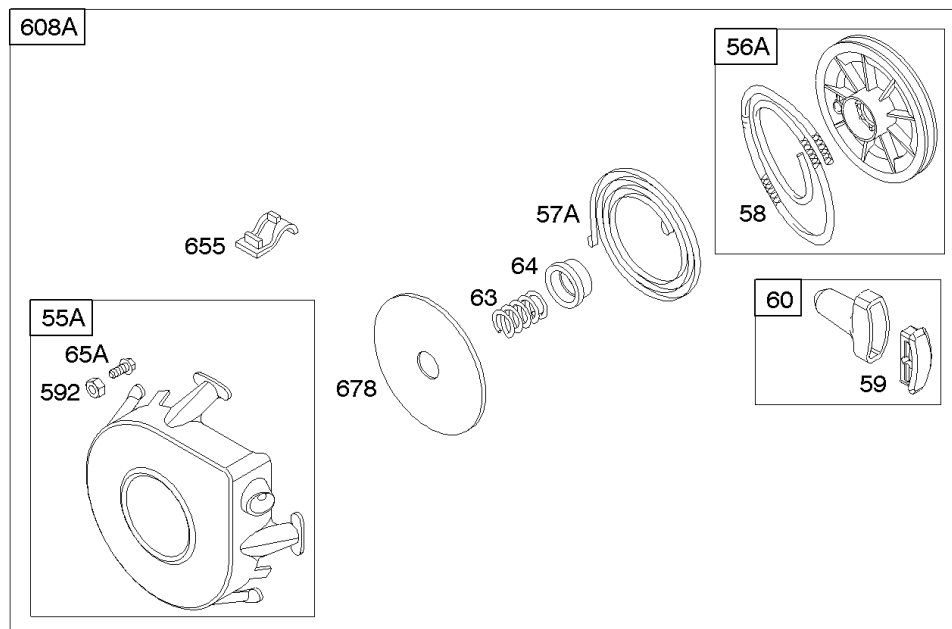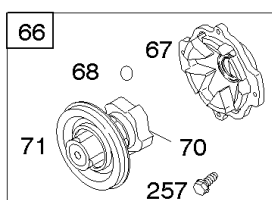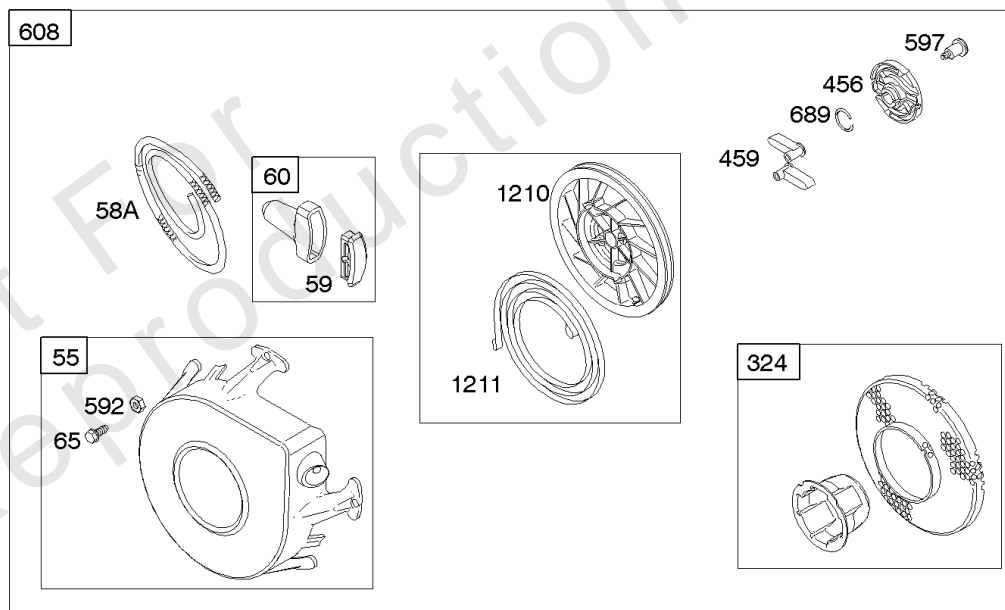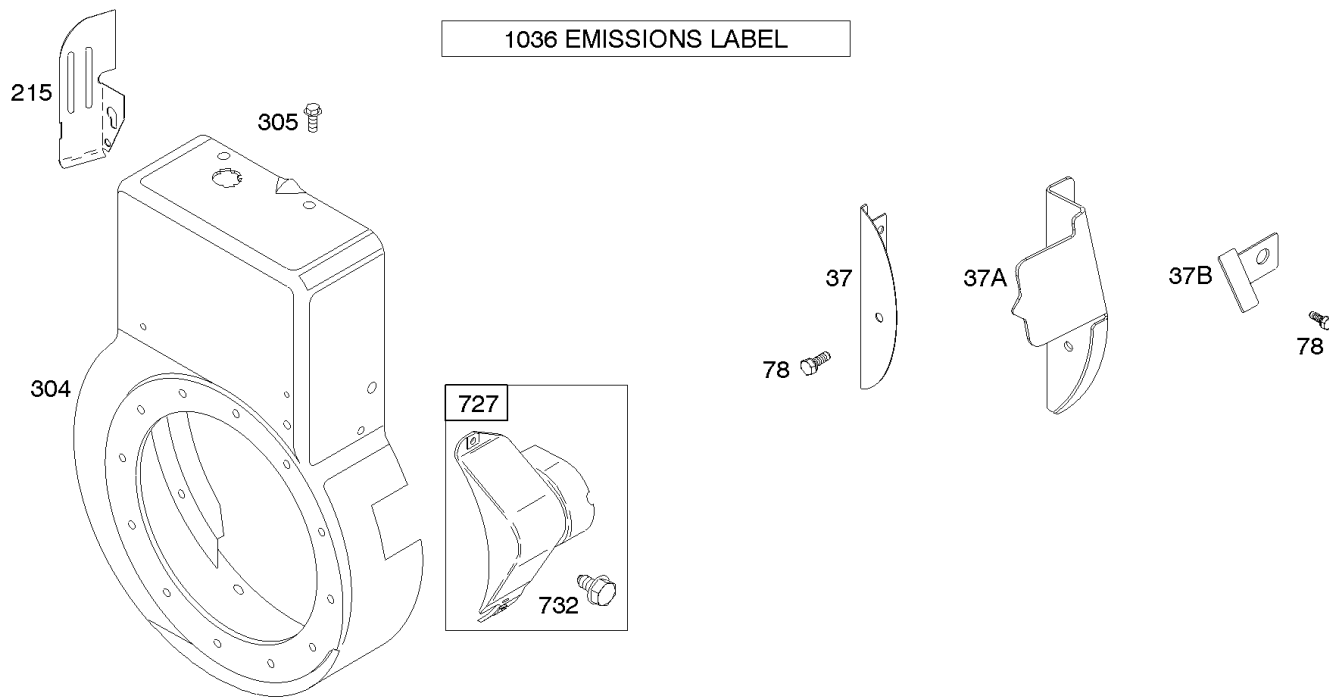    

Blower Housing/Shrouds, Rewind


REF NO	PART NO	QTY	DESCRIPTION
37	690411		GUARD, Flywheel
37A	690490		GUARD-FLYWHEEL
55	693904		HOUSING, Rewind Starter -Used After Code Date 98111500
55A	393576		HOUSING, Rewind Starter -Used Before Code Date 98111600
56A	295871		PULLEY, Starter -(63 Rope)
57A	490179		SPRING-REWIND STR
58	692188		ROPE, Starter -(63)(Cut to Required Length)
58A	695002		ROPE, Starter -(99)(Cut to Required Length)
58C	693389		ROPE, Starter -(Cut To Required Length)
59	490653		INSERT, Grip
60	490652		GRIP-STARTER ROPE
63	690547		SPRING, Ratchet -Used Before Code Date 99030100
64	691920		ADAPTER, Ratchet Spring -Used Before Code Date 99030100
65	692200		SCREW -(Rewind Starter) -Used After Code Date 99022800
65A	690837		SCREW -(Rewind Starter) -Used Before Code Date 99030100
66	399671		CLUTCH-STARTER -Used Before Code Date 99030100
67	394897		HOUSING, Clutch -Used Before Code Date 99030100
68	691604		BALL, Clutch -Used Before Code Date 99030100
70	691945		RATCHET-CLUTCH -Used Before Code Date 99030100
71	691359		COVER, Ratchet -Used Before Code Date 99030100
78	690364		SCREW -(Flywheel Guard)
215	691170		GUIDE, Air
257	691660		SCREW -(Starter Clutch)
304	491596		HOUSING, Blower
305	692198		SCREW -(Blower Housing)
324	695160		SCREEN/CUP ASSEMBLY
456	692299		PLATE-PAWL FRICTION -Used After Code Date 99022800
459	281505S		PAWL-RATCHET -Used After Code Date 99022800
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	693900		STARTER, Rewind -(70) -Used After Code Date 98111500
608A	390391		STARTER, Rewind -(63) -Used Before Code Date 98111600

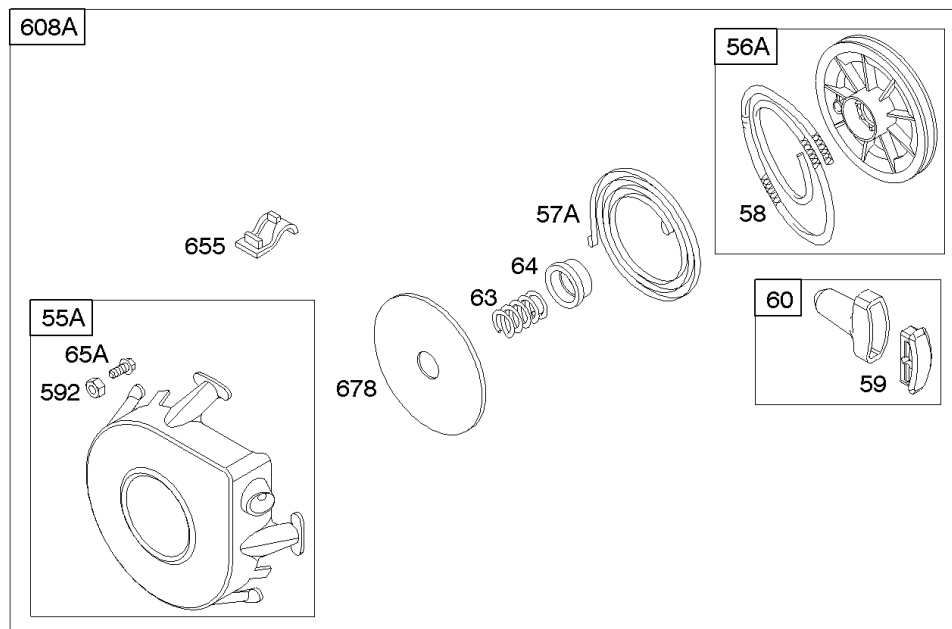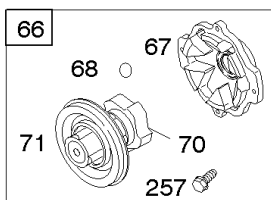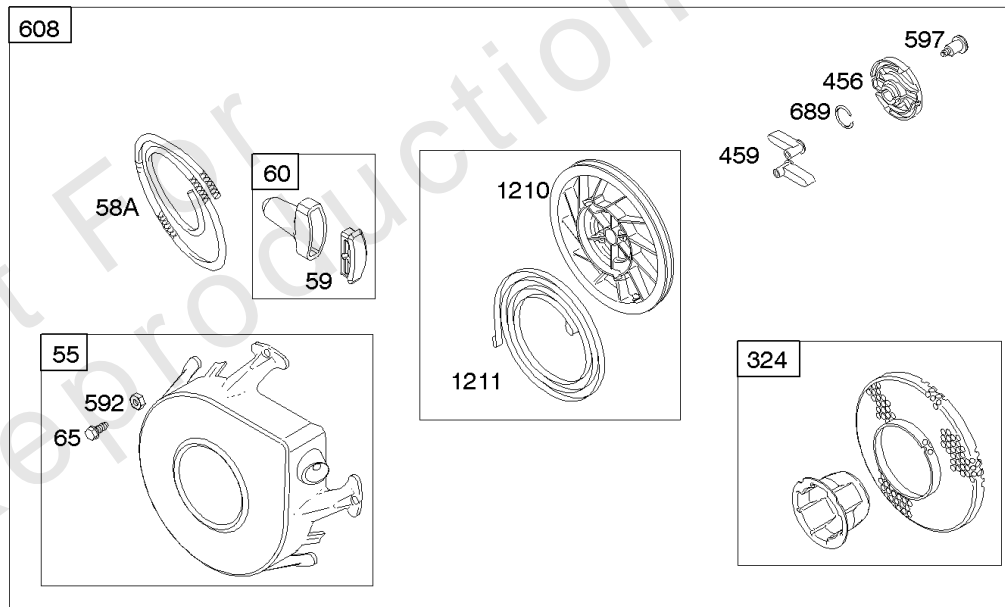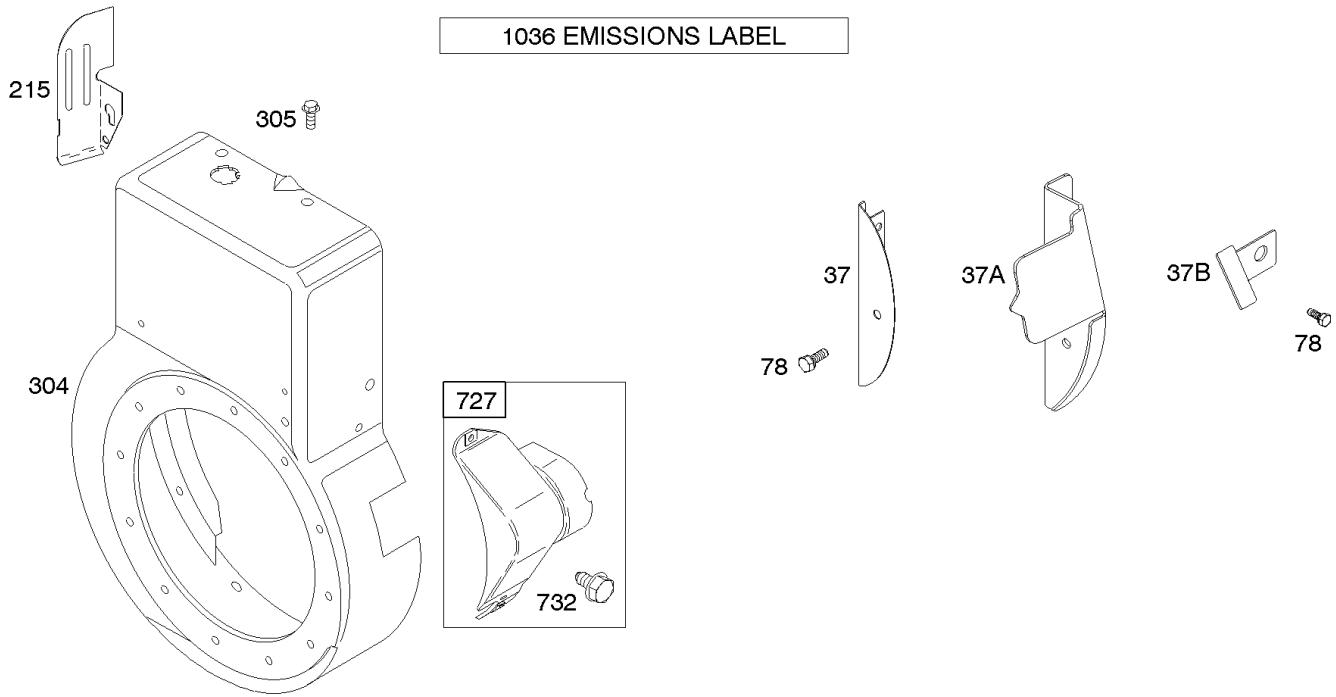    

Blower Housing/Shrouds, Rewind

REF NO	PART NO	QTY	DESCRIPTION
655	691734		ANCHOR-REWIND SPRING
678	490817		SPACER-REWIND -(Rewind) -Used Before Code Date 99030100
689	691855		SPRING-FRICTION -Used After Code Date 99022800
727	395405		COVER, Starter Drive
732	691097		SCREW -(Starter Drive Cover)
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)

 
Not For Reproduction

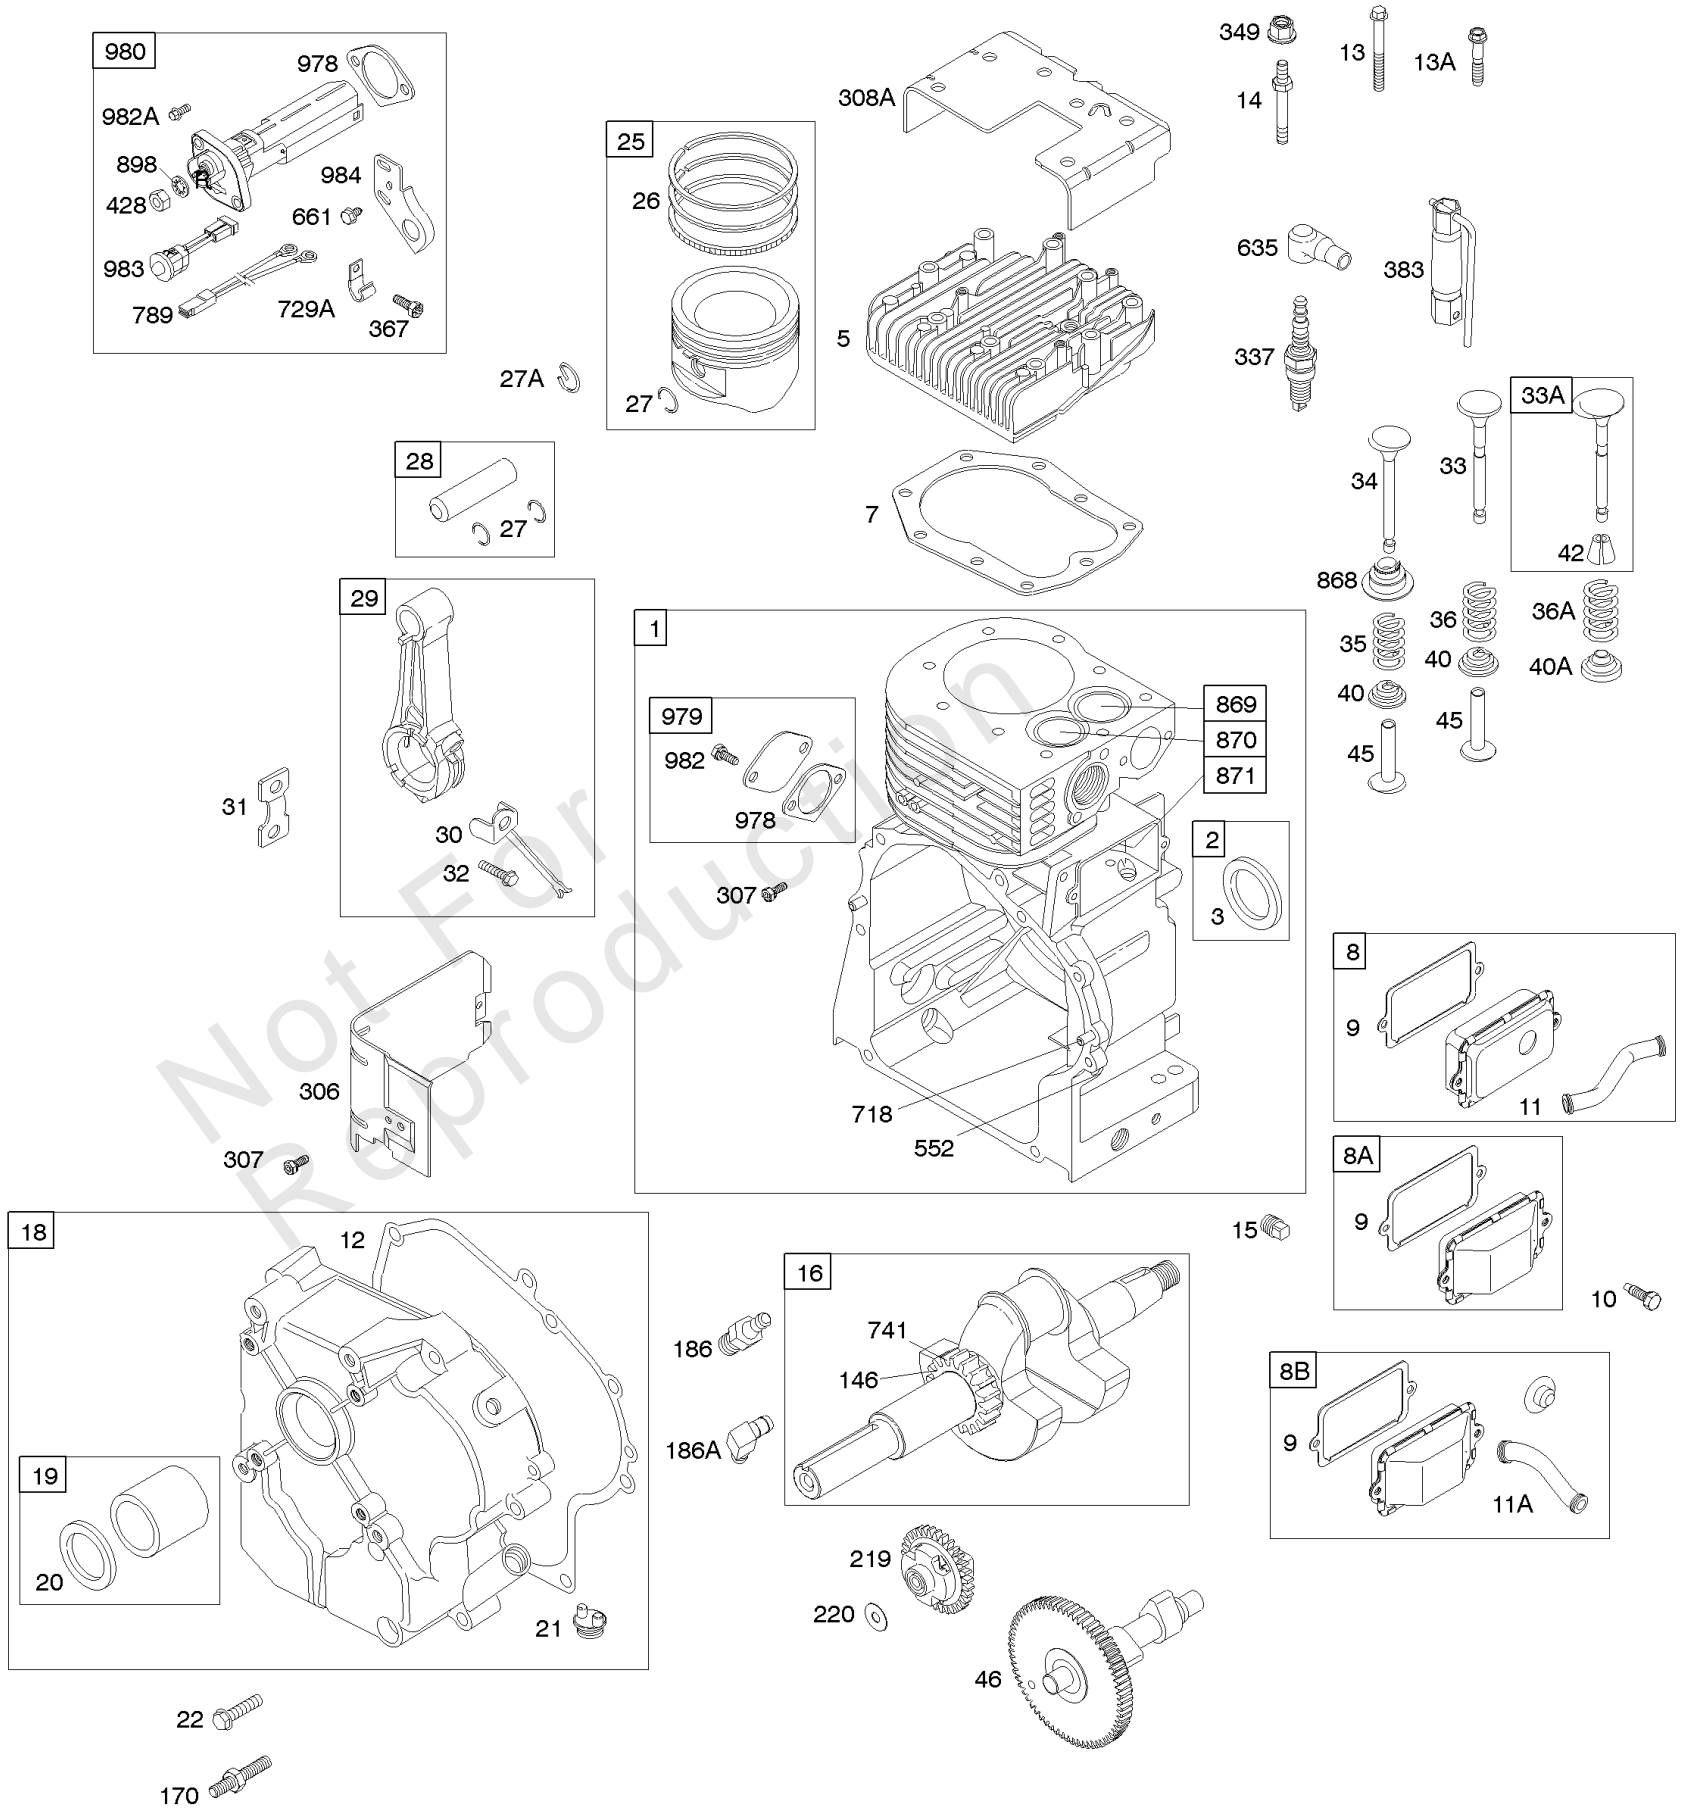

1058 OPERATOR'S MANUAL

Cam, Crankshaft, Cylinder, Valves, Piston/Rings, Crankcase Cover/Sump, Head, Breather


REF NO	PART NO	QTY	DESCRIPTION
1	495656		CYLINDER ASSEMBLY -(Includes Oil Gard Cover)
2	698340		KIT, Bushing/Seal -(Magneto Side)
3	391086S		SEAL, Oil -(Magneto Side)
5	691159		HEAD-CYLINDER
7	272163S		GASKET, Cylinder Head
8	498038		BREATHER ASSEMBLY -Used After Code Date 95040200
8A	495736		BREATHER ASSEMBLY -Used After Code Date 95010100 -Used Before Code Date 95040300
8B	497710		BREATHER ASSEMBLY -Used Before Code Date 95010200
9	27803S		GASKET, Breather
10	691666		SCREW -(Breather Assembly)
11	691907		TUBE, Breather -Used After Code Date 95040200
11A	691899		TUBE, Breather -Used After Code Date 95010100 -Used Before Code Date 95040300
12	27876		GASKET, Crankcase -(.005)
12	692221		GASKET, Crankcase -(.015)(Standard)
12	27877		GASKET, Crankcase -(.009)
13	691651		SCREW -(Cylinder Head)
13A	690904		SCREW -(Cylinder Head)
14	691690		STUD -(Cylinder Head) (Used In Positions 5 And 6)
15	690946		PLUG, Oil Drain -(Square Head)
15	690289		PLUG, Oil Drain -(Magnetic)
16	495790		CRANKSHAFT
18	496984		COVER, Crankcase
19	295964		KIT, Bushing/Seal -(PTO Side)
20	391086S		SEAL, Oil -(PTO Side)
21	281658S		CAP-OIL FILL
22	693972		SCREW -(Crankcase Cover/Sump)
22	691103		SCREW -(Crankcase Cover/Sump) (Used In Position 1)
25	499960		PISTON ASSEMBLY -(Standard)
25	499962		PISTON ASSEMBLY -(.020 Oversize)
26	299743		SET, Ring -(Standard)(Chrome)
26	690014		SET, Ring -(Standard)
26	690016		SET, Ring -(.020 Oversize)

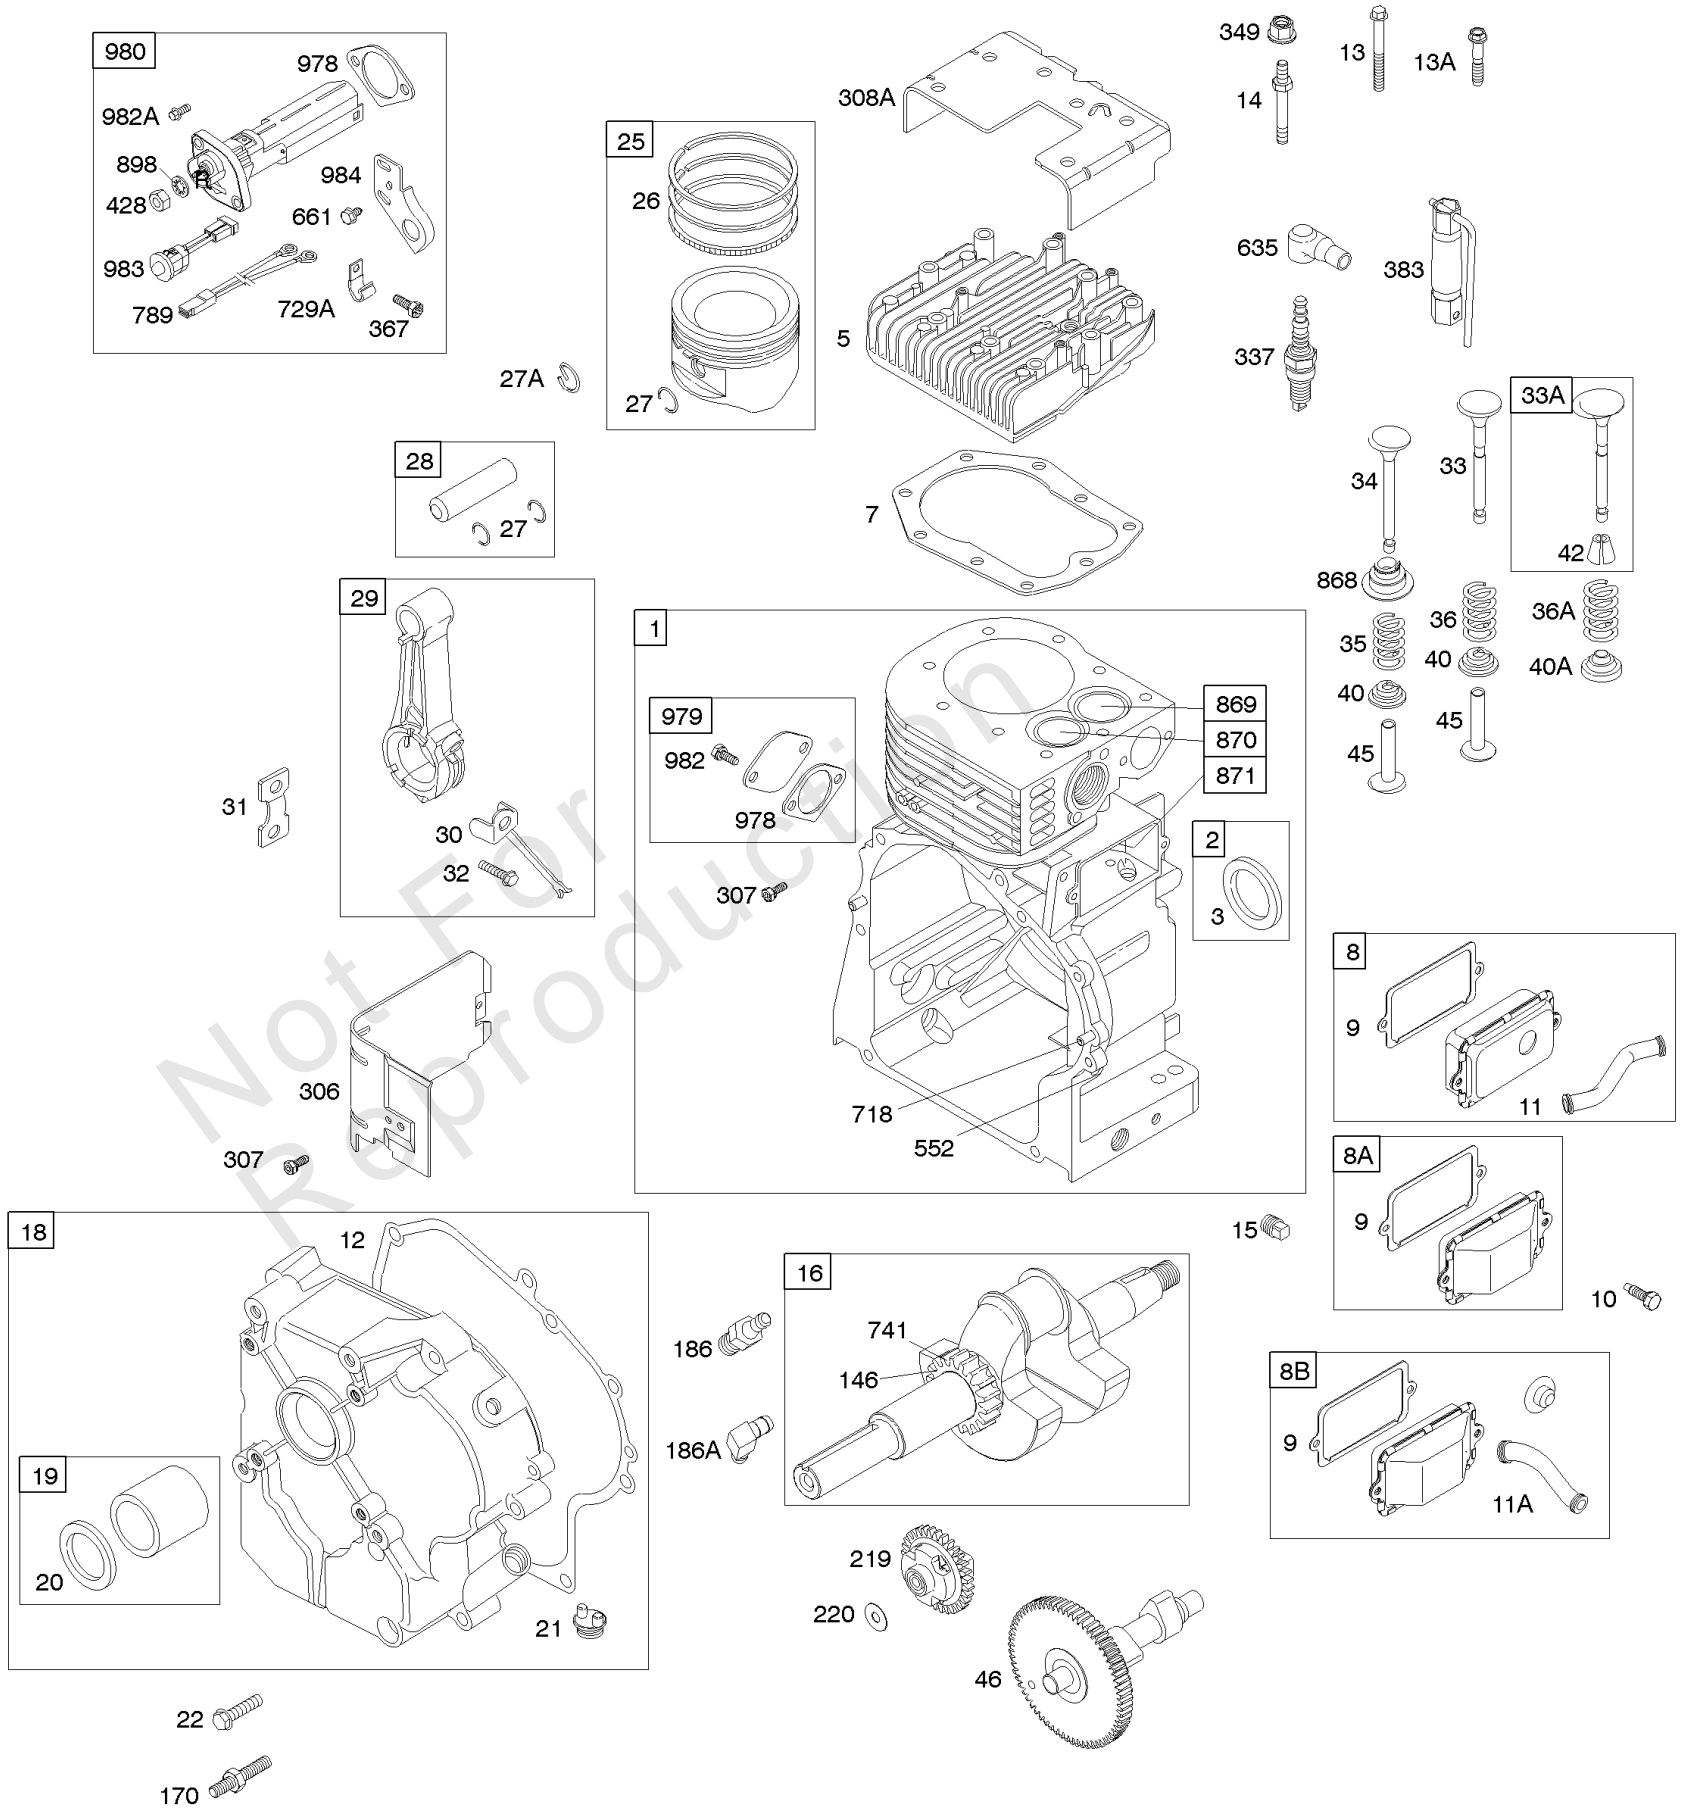 

1058 OPERATOR'S MANUAL

Cam, Crankshaft, Cylinder, Valves, Piston/Rings, Crankcase Cover/Sump, Head, Breather


REF NO	PART NO	QTY	DESCRIPTION
26	690017		SET, Ring -(.030 Oversize)
27	690975		LOCK, Piston Pin -Used After Code Date 96102700
27A	691073		LOCK, Piston Pin -Used Before Code Date 96102800
28	499302		PIN, Piston -(Standard) -Used After Code Date 96102700
28	499303		PIN, Piston -(.005 Oversize) -Used After Code Date 96102700
29	390401		ROD, Connecting -(Standard)
29	390773		ROD, Connecting -(.020 Undersize)
30	691728		DIPPER, Connecting Rod
31	222114		LOCK, Rod Screw
32	690352		SCREW -(Connecting Rod)
33	691287		VALVE, Exhaust
33A	691794		VALVE, Exhaust -Used Before Code Date 95041700
34	261055S		VALVE, Intake
35	691605		SPRING, Valve -(Intake)
36	691605		SPRING, Valve -(Exhaust)
36A	691597		SPRING, Valve -(Exhaust) -Used Before Code Date 95041700
40	690656		RETAINER, Valve -(Exhaust)
40A	691939		RETAINER-VALVE -(Exhaust) -Used Before Code Date 95041700
42	494553		KEEPER, Valve -(Exhaust) -Used Before Code Date 95041700
45	691793		TAPPET, Valve
46	691167		CAMSHAFT
146	690979		KEY, Woodruff
170	691695		STUD -(Crankcase Cover/Sump)
186	691764		CONNECTOR-HOSE -(Straight)
186A	691609		CONNECTOR, Hose -(90 Degree)
219	496786		GEAR-GOVERNOR
220	691724		WASHER -(Governor Gear)
306	496797		SHIELD-CYLINDER
307	691003		SCREW -(Cylinder Shield)
308A	691212		COVER-CYLINDER HEAD
337	496018S		PLUG-SPARK
349	691105		LOCKNUT -(Cylinder Head Cover)
367	691058		SCREW -(Wire Clip)

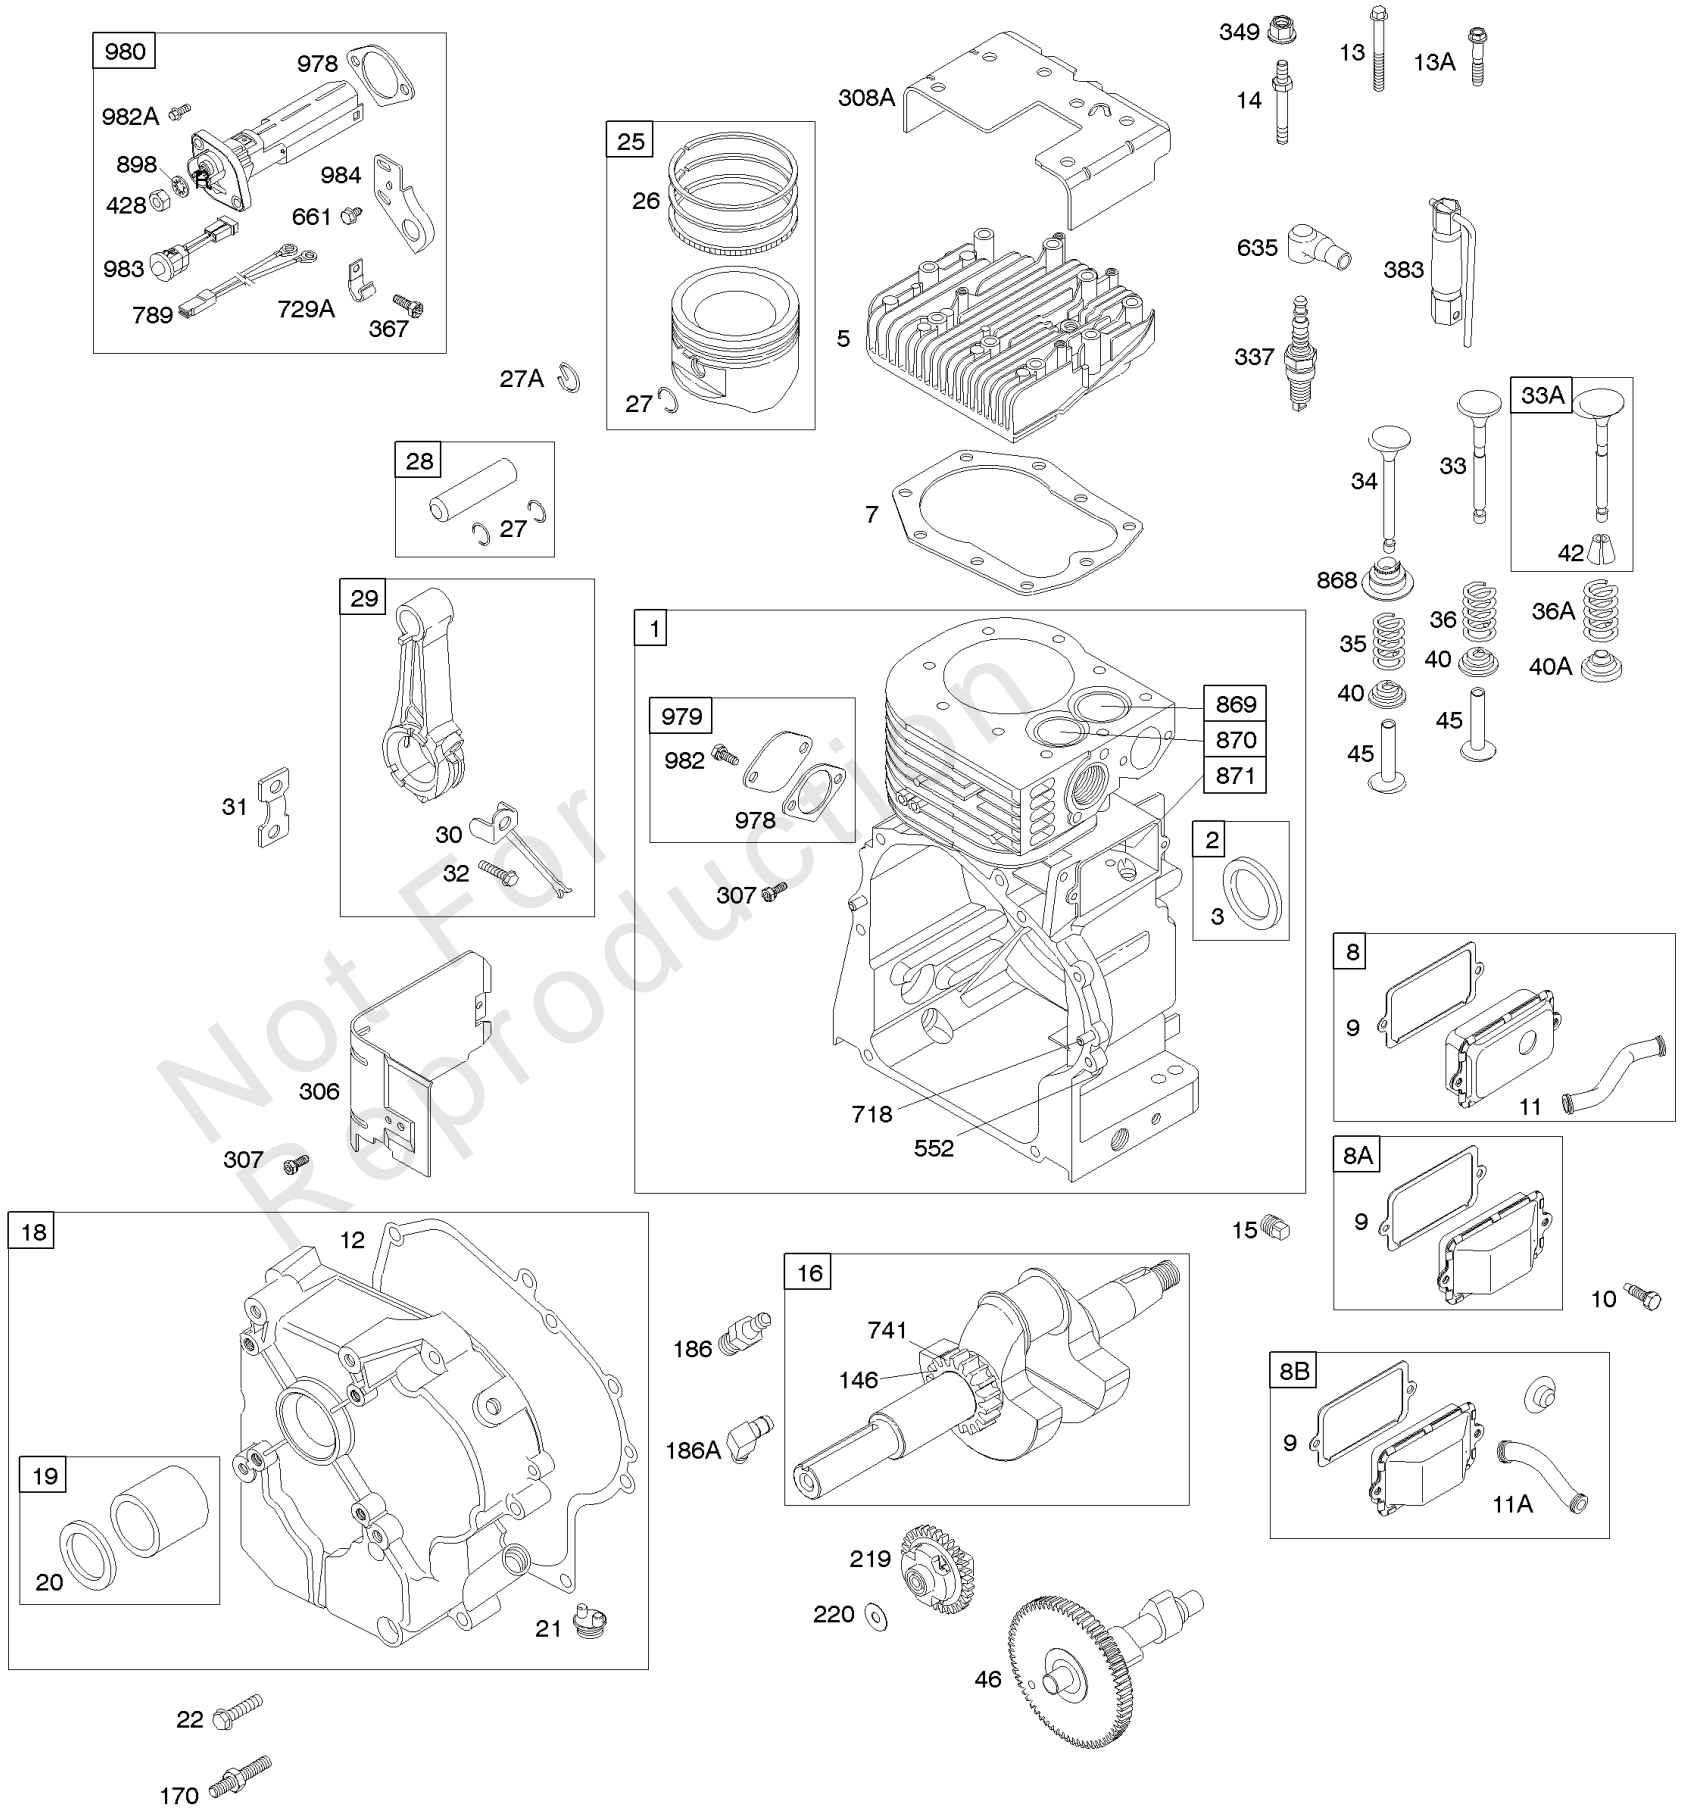 

1058 OPERATOR'S MANUAL


Cam, Crankshaft, Cylinder, Valves, Piston/Rings, Crankcase Cover/Sump, Head, Breather

REF NO	PART NO	QTY	DESCRIPTION
383	89838S		WRENCH-SPARK PLUG
428	691612		NUT -(Oil GARD Kit)
552	491986		BUSHING, Governor Crank -(1/4 I.D.)
635	66538S		BOOT, Spark PLug
661	690661		SCREW -(Oil Gard Light Bracket)
718	690959		PIN, Locating
729A	690430		CLIP, Wire
741	691288		GEAR, Timing
789	398661		HARNESS, Wiring
868	692036		SEAL, Valve
869	691844		SEAT-VALVE -(Intake)
870	691844		SEAT-VALVE -(Exhaust)
871	231218		BUSHING, Valve Guide -(Intake)
871	261961		BUSHING, Valve Guide -(Exhaust)
898	691077		WASHER -(Oil GARD Kit)
978	273326S		GASKET-OIL GARD
979	691382		COVER, Oil Guard
980	398182		KIT, Oil Gard
982	690351		SCREW -(Oil GARD) (Oil GARD Cover)
982A	690350		SCREW -(Oil GARD) (Oil GARD Kit)
983	398660		LIGHT, Indicator
984	692340		BRACKET, Oil Guard Light
1058	274786		MANUAL, Operator's

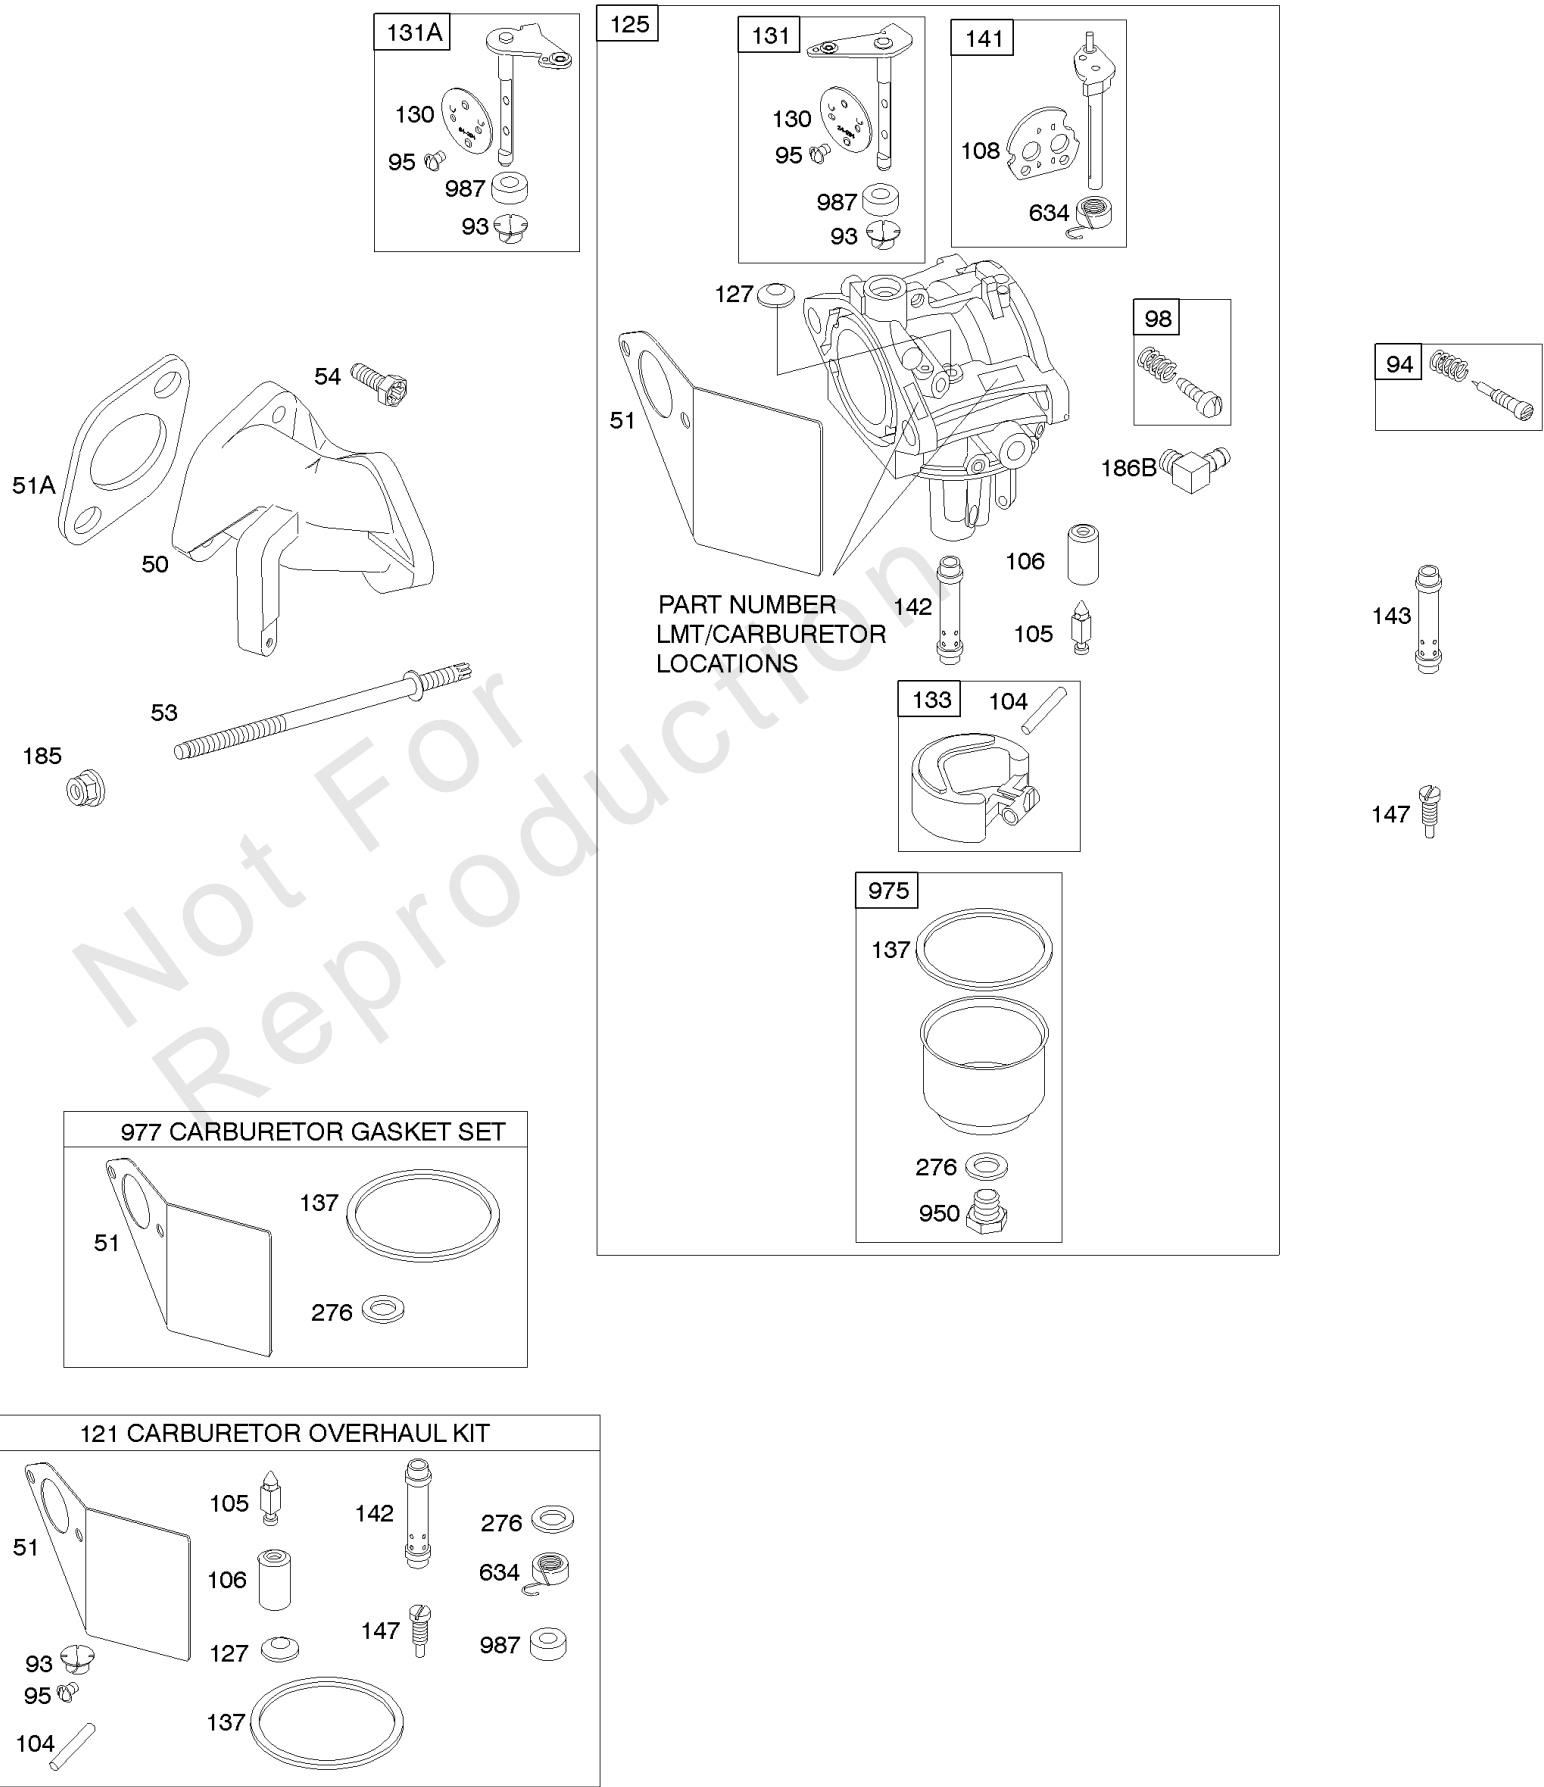 



















Carburetor, Carburetor Overhaul Kits

REF NO	PART NO	QTY	DESCRIPTION
50	691157		MANIFOLD, Intake
51	691886		GASKET, Intake -(Manifold To Carburetor)
51A	691885		GASKET-INTAKE -(Manifold To Engine)
53	691672		INSULATOR -(Carburetor)
54	690953		SCREW -(Intake Manifold)
93	690602		BUSHING, Throttle Shaft
94	494383		KIT, Idle Mixture -(LMT 102, 113, 114, 116)
94	496589		KIT, Idle Mixture -(LMT 172)
94	498836		KIT, Idle Mixture -(LMT 141)
95	691636		SCREW -(Throttle Valve)
98	495800		KIT, Idle Speed -(Idle Speed) (Lmt 54, 55, 91)
104	690525		PIN, Float Hinge
105	691782		VALVE, Float Needle
106	691780		SEAT, Inlet
108	690467		VALVE, Choke
121	497166		KIT, Carburetor Overhaul -Used Before Code Date 94062400
121	497849		KIT, Carburetor Overhaul -Used After Code Date 94062300
125	690115		CARBURETOR -(LMT 186)
125	499029		CARBURETOR -(LMT 116, 141, 172)
125	497164		CARBURETOR -(LMT 102, 113, 114) -Used Before Code Date 94090100
127	694524		PLUG, Welch
130	691750		VALVE, Throttle
131	497846		KIT, Throttle Shaft
131A	497159		KIT, Throttle Shaft -Used Before Code Date 94090100
133	494381		FLOAT, Carburetor
137	281165S		GASKET, Float Bowl
141	497160		KIT, Choke Shaft
142	497564		NOZZLE, Carburetor -(LMT 113, 114, 116)
142	498716		NOZZLE, Carburetor -(LMT 141)
142	690128		NOZZLE, Carburetor -(LMT 186)
142	691477		NOZZLE, Carburetor -(LMT 172)
142	497197		NOZZLE, Carburetor -(LMT 102)
143	497848		NOZZLE, Carburetor -(High Altitude) (LMT 113, 114, 116)
143	499032		NOZZLE, Carburetor -(High Altitude) (LMT 141)
143	499826		NOZZLE, Carburetor -(High Altitude) (LMT 172)

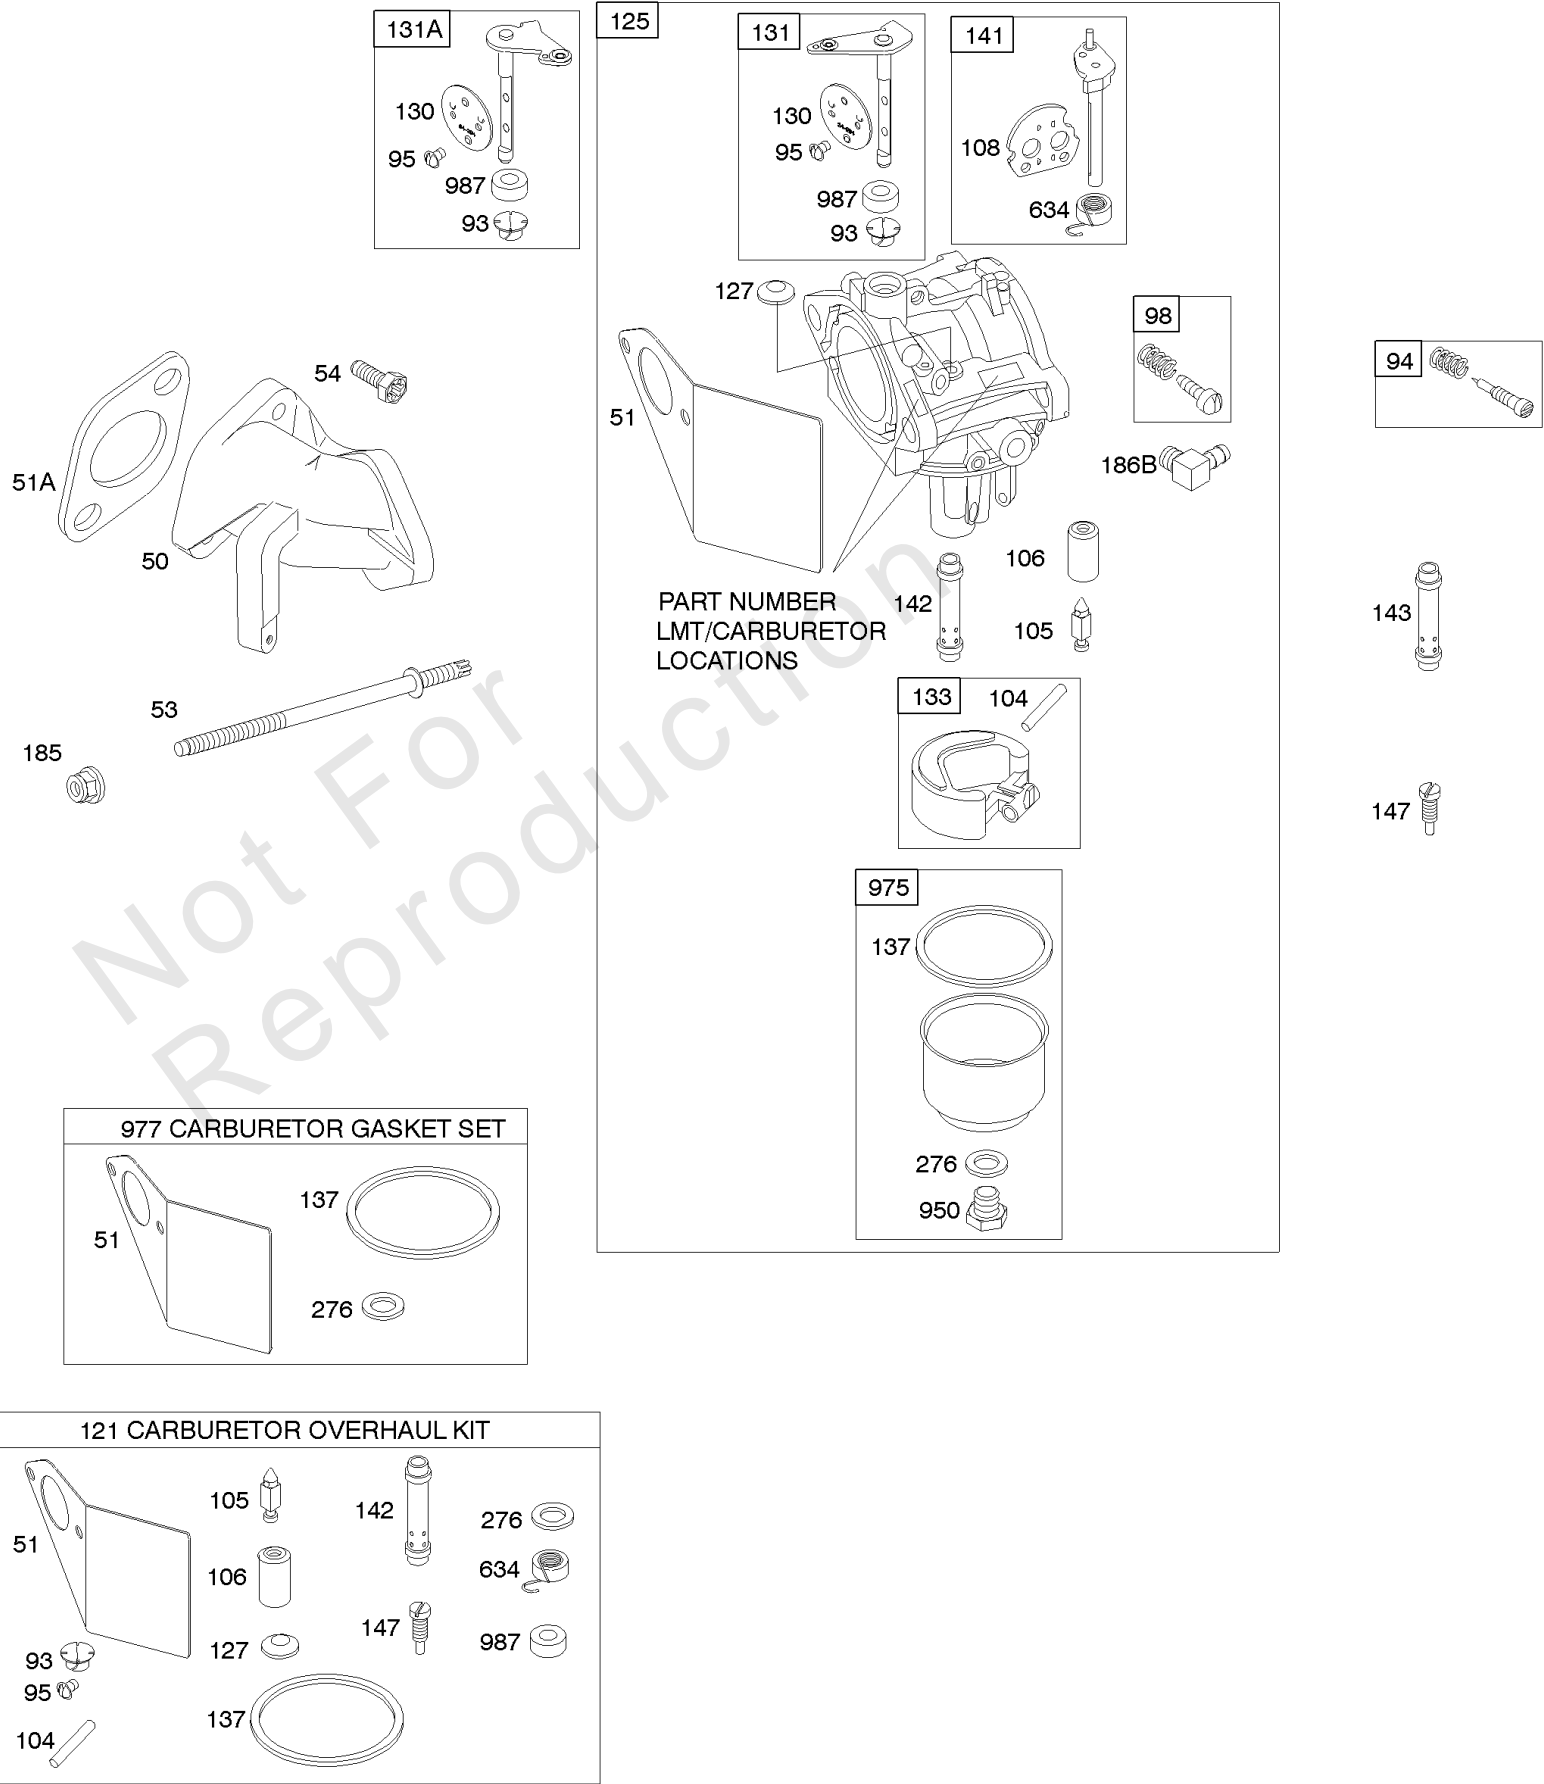 



Carburetor, Carburetor Overhaul Kits

REF NO	PART NO	QTY	DESCRIPTION
143	690129		NOZZLE, Carburetor -(High Altitude) (LMT 186)
143	497198		NOZZLE, Carburetor -(High Altitude) (LMT 102)
147	497472		JET, Pilot -(LMT 102, 113, 114, 116)
147	691259		JET-PILOT -(LMT 141)
185	690958		NUT -(Air Cleaner Base)
186B	692317		CONNECTOR-HOSE -(Carburetor)
276	692255		WASHER, Sealing
634	690802		SPRING/SEAL ASSEMBLY
950	691657		SCREW -(Float Bowl)
975	495933		BOWL, Float -(Float Bowl)
977	497069		SET, Carburetor Gasket
987	691326		SEAL, Choke/Throttle Shaft

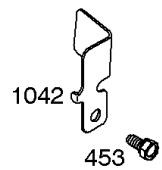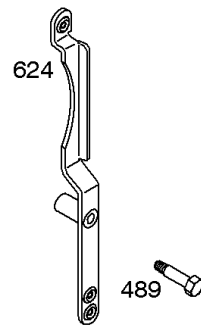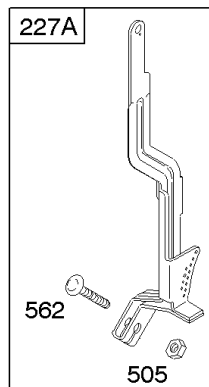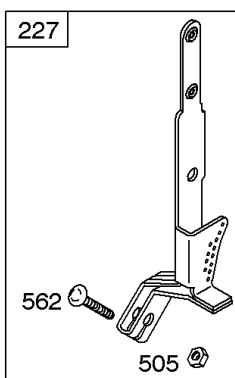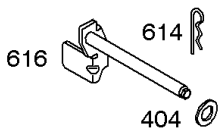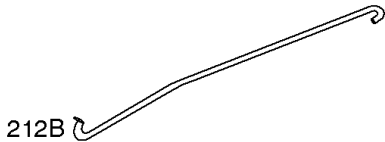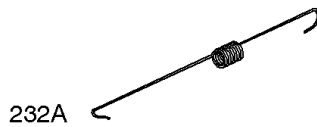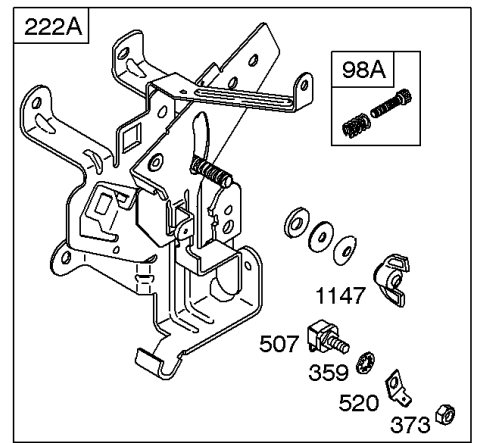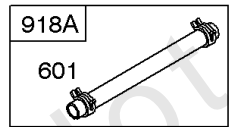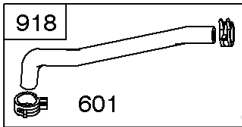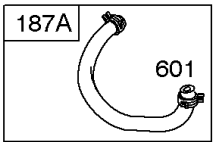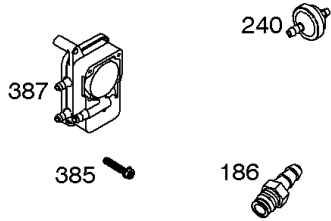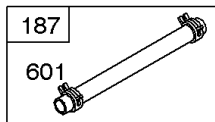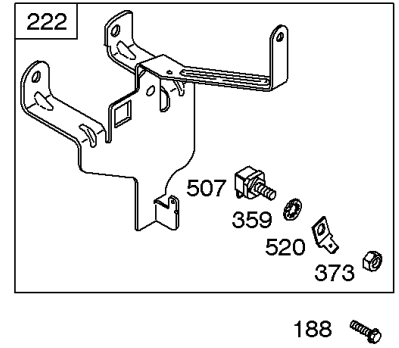              
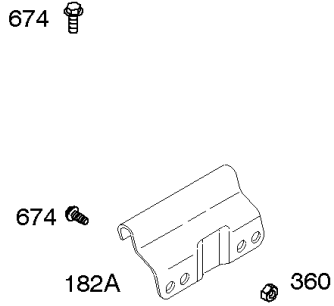 
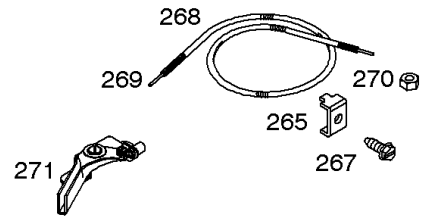 
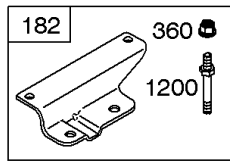 
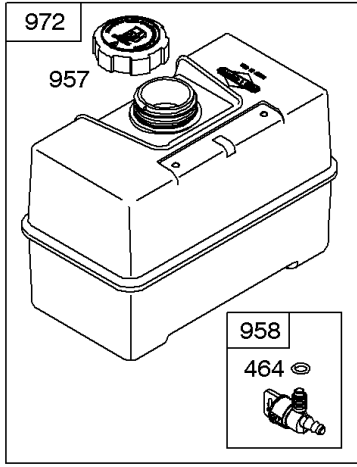 


Controls, Fuel Tank, Springs/Links, Fuel Hoses


REF NO	PART NO	QTY	DESCRIPTION
98A	493280		KIT-IDLE SPEED -(Idle Speed)
182	495664		BRACKET, Fuel Tank -(Upper)
182A	694592		BRACKET-FUEL TANK
186	691764		CONNECTOR-HOSE -(Straight)
187	791766		LINE, Fuel -(Cut To Required Length)
187A	497029		LINE, Fuel -(Molded)
188	691693		SCREW -(Control Bracket)
209	263054		SPRING, Governor -Used Before Code Date 97042800
209	692136		SPRING-GOVERNOR -Used After Code Date 97042700
212	691853		LINK, Throttle -(Linkage Lever To Throttle Shaft)
212A	691854		LINK, Throttle -(Governor Control Lever To Linkage Lever)
222	694182		BRACKET, Control -Used After Code Date 98111500
222A	691480		BRACKET, Control -Used After Code Date 97042700 -Used Before Code Date 98111600
222A	499724		BRACKET, Control -Used Before Code Date 97042800
227	692143		LEVER, Governor Control -(Short Lever)
227A	496253		LEVER, Governor Control -(Long Lever)
232	691848		SPRING/LINK, Governor
232A	691846		SPRING/LINK, Governor
240	394358S		FILTER, Fuel
265	691024		CLAMP, Casing
267	690804		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
359	691077		WASHER -(Ground Terminal)
360	691612		NUT -(Fuel Tank Bracket)
373	691612		NUT -(Ground Terminal)
385	691673		SCREW -(Fuel Pump)
387	692026		PUMP, Fuel
404	691691		WASHER -(Governor Crank)
427	690355		NUT -(Control Bracket)
453	691131		SCREW -(Electromagnetic Bracket)

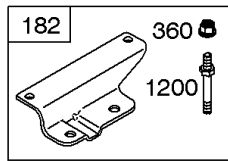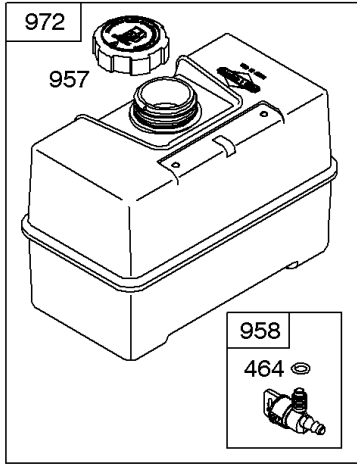  










674

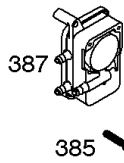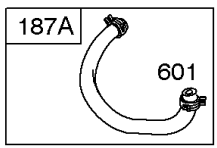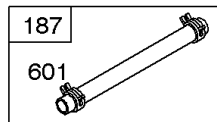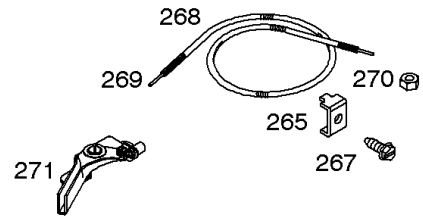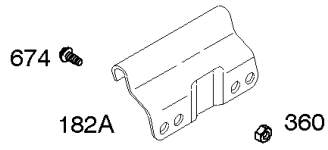     

240







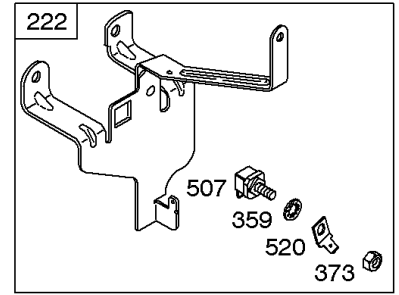 


188

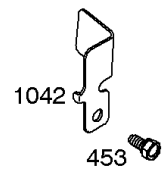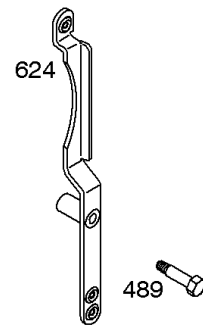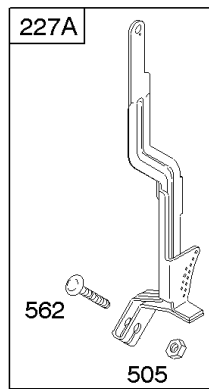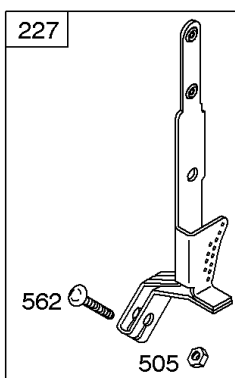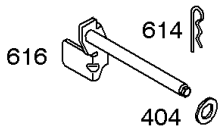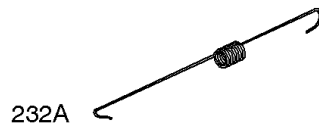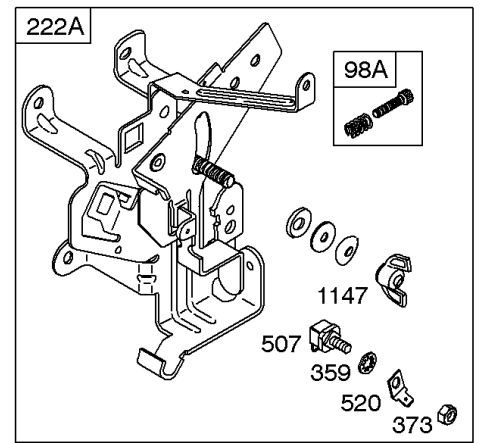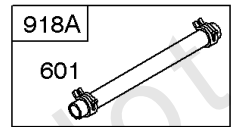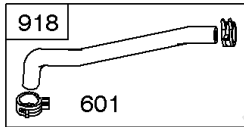         








Controls, Fuel Tank, Springs/Links, Fuel Hoses

REF NO	PART NO	QTY	DESCRIPTION
464	691898		SEAL, O-Ring -(Fuel Shut-off Valve)
489	691776		SCREW -(Linkage Lever)
505	691251		NUT -(Governor Control Lever)
507	691972		INSULATOR
520	691084		TERMINAL, Ground
562	691119		BOLT -(Governor Control Lever)
601	791850		CLAMP, Hose
614	691620		PIN, Cotter
616	691405		CRANK, Governor
624	691415		LEVER, Linkage
674	690708		SCREW -(Fuel Tank Bracket)
918	497457		HOSE, Vacuum
918A	393815		HOSE, Vacuum -(Cylinder To Impulse Pump)(Cut To Required Length)
957	493988S		CAP, Fuel Tank -(Plastic)
958	698182		VALVE, Fuel Shut Off
972	691993		TANK, Fuel -(4 Quart)
1042	691229		BRACKET, Electromagnetic
1147	690355		NUT -(Control Bracket)
1200	691690		STUD -(Fuel Tank Bracket)

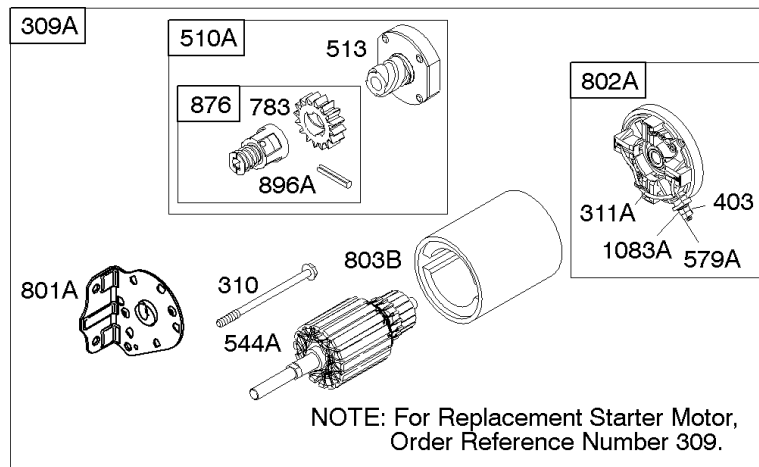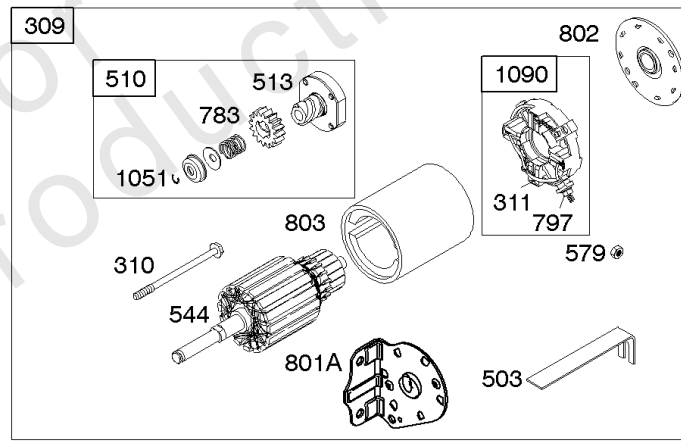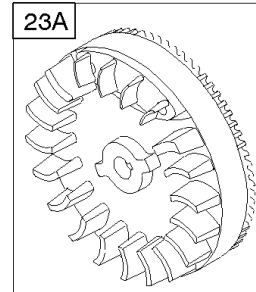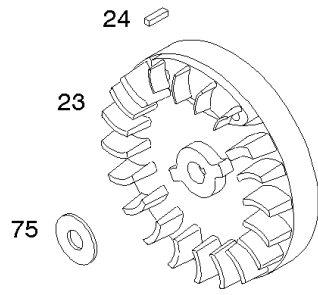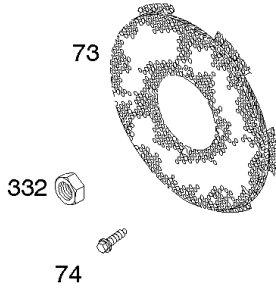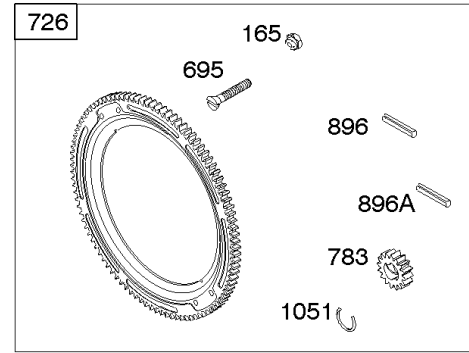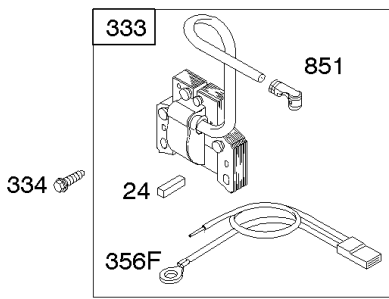       

Electric Starter, Flywheel, Ignition

REF NO	PART NO	QTY	DESCRIPTION
23	690615		FLYWHEEL -(Rewind Starter)
23A	691354		FLYWHEEL -(Electric Start)
24	222698S		KEY, Flywheel
73	691754		SCREEN-ROTATING
74	691627		SCREW -(Rotating Screen)
75	690582		WASHER -(Flywheel)
165	693148		NUT -(Ring Gear)
309	693054		MOTOR, Starter -(3 5/8) (Aluminum Ring Gear)
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309)
310	690323		SCREW -(Starter Motor) (3 5/8" Housing Length)
311	497608		SET, Brush
311A	395538		SET, Brush -(3 5/8 Housing)
332	693899		NUT -(Flywheel) -Used After Code Date 98111500
333	398811		ARMATURE, Magneto -(Magnetron Ignition)
334	691061		SCREW -(Magneto Armature)
356F	398808		WIRE, Stop -(Cut To Required Length)
363	19165		PULLER, Flywheel
403	690288		WASHER -(End Cap)
503	691532		STRAP, Starter
510	696541		DRIVE, Starter
510A	696540		DRIVE, Starter
513	692024		CLUTCH, Drive
544	692034		ARMATURE, Starter -(3 5/8 Housing)
544A	390837		ARMATURE, Starter -(3 5/8 Housing)
579	691029		NUT -(Starter Cable)
579A	691626		NUT -(Starter Cable)
695	693109		SCREW -(Ring Gear)
697	690372		SCREW -(Starter Motor) (Drive Cap)
726	696537		GEAR, Ring
729B	224723		CLIP, Wire -(Starter Motor)
729C	691224		CLIP, Wire -(Starter Motor)
783	695708		GEAR-PINION
797	691029		NUT -(Brush Retainer)
801A	691283		CAP, Drive

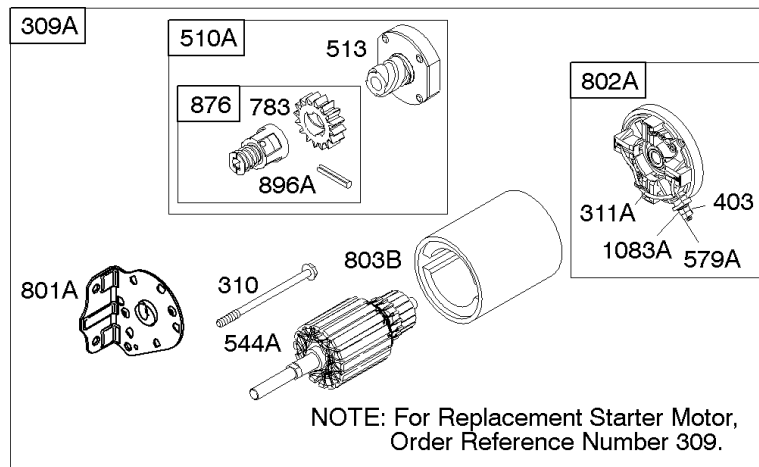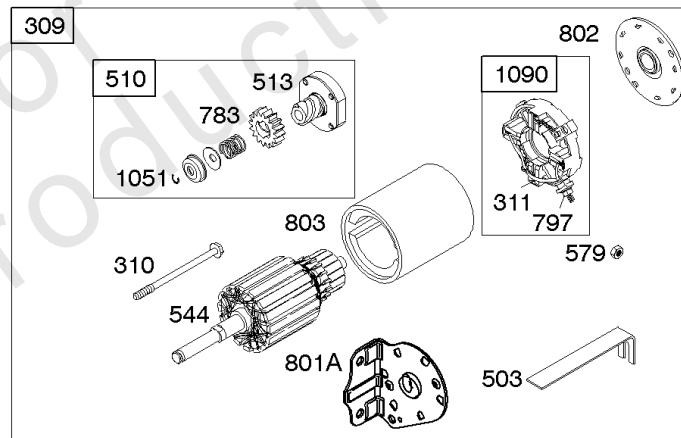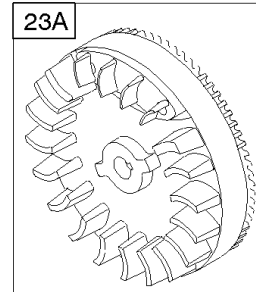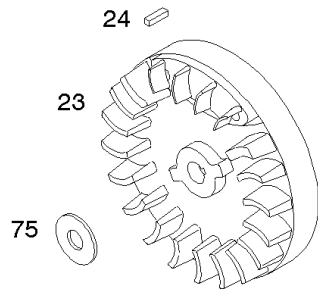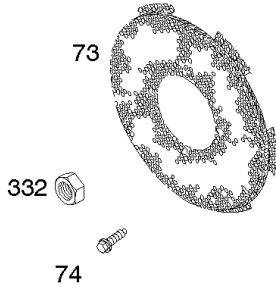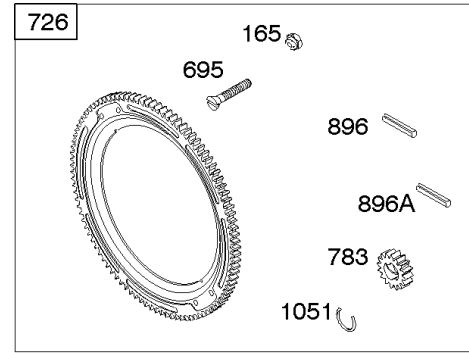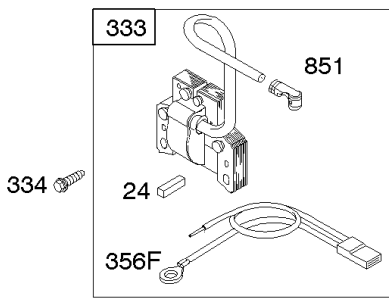       

Electric Starter, Flywheel, Ignition

REF NO	PART NO	QTY	DESCRIPTION
802	691286		CAP, End
802A	395537		CAP, End -(3 5/8 Housing)
803	-----		Housing-Starter -(For Replacement Starter Housing, Order Reference 309)
803B	398159		HOUSING, Starter -(3 5/8 Housing)
851	493880S		TERMINAL-SPARK PLUG
876	696539		KIT, Pinion Spring
896A	691641		PIN, Drive Retainer
1051	691265		RING, Retaining
1083A	690958		NUT -(End Cap)
1090	691293		RETAINER, Brush

Not For Reproduction

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
-----			No engine replacement. Repair engine with individual parts.
	497538	1	Replacement Short Block
-----			Top No-Load Speed: 3750 -Trim: 01
-----			Service Note: For all Go-Karts use only a Model 136200 series engine as a replacement, regardless of the original Model.

Not For Reproduction

