零件手册

制造编号： 121R02-0002-F1

Copyright © Briggs & Stratton. All Rights reserved

18-Apr-2024

模型组件

	页
凸轮轴，曲轴，缸体，操作手册，活塞/环/连杆，警告标签	4
化油器，化油器大修套件	6
发电线圈，电启动器，点火	8
垫片组 - 发动机，油底壳	10
导风罩，盖/护罩，飞轮，启动拉盘	12
排气系统	14
控制器，调速弹簧，恒温器	16
替代发动机-美国和加拿大	18
燃料供应，润滑	19
空气滤清器	21
缸头，垫片组合阀，阀门	23

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

凸轮轴，曲轴，缸体，操作手册，活塞/环/连杆，警告标签

制造编号： 121R02-0002-F1

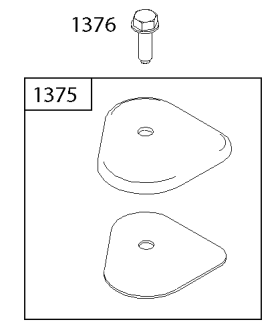

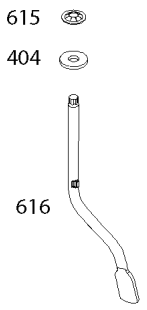



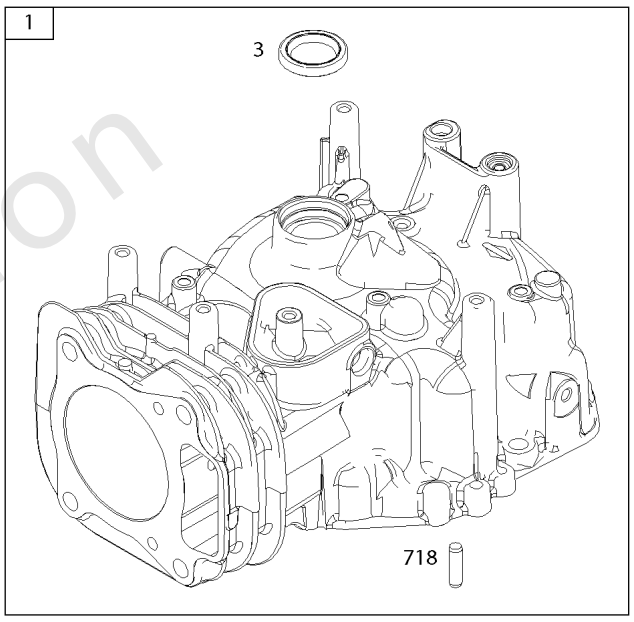

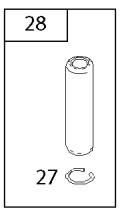

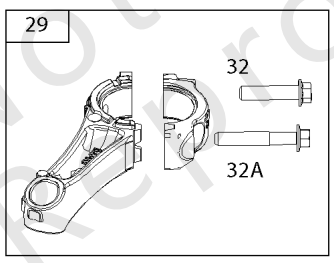

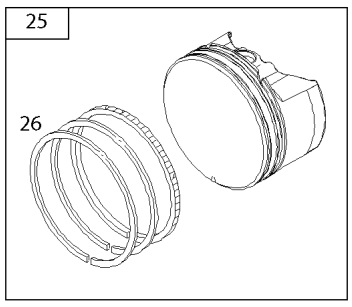

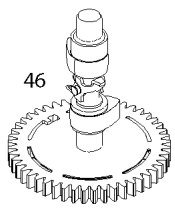

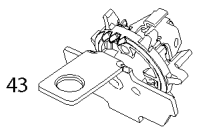

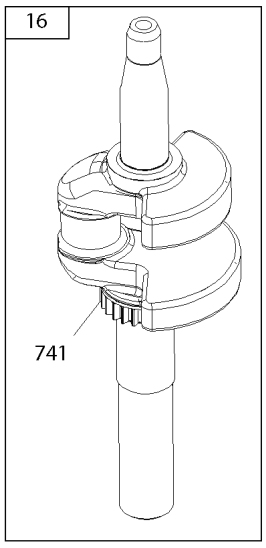

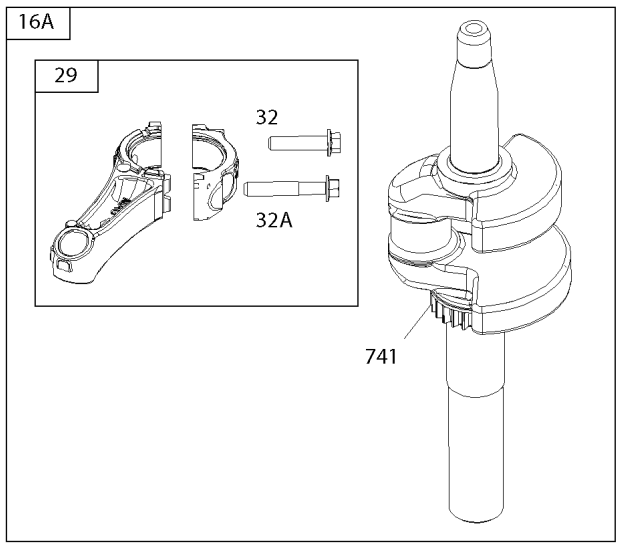

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

凸轮轴，曲轴，缸体，操作手册，活塞/环/连杆，警告标签

参考编号	零件号	数量	描述
1	798947		缸体组件
3	299819S		海豹油 -（磁铁侧）
16	597302	1	曲轴 -（日期代码18031900后使用）
16A	84002259	1	曲轴 -（日期代码18032000 -之前使用）
24	222698S		钥匙，飞轮
25	590404		活塞组件 -（标准）
25	590405		活塞组件 -（.020加大）
26	590402		套装，戒指 -（标准）
26	590403		套装，戒指 -（.020加大）
27	691588		锁，活塞销
28	298909		PIN. Piston
29	796470		杆，连接
32	691664		拧 -（连杆）
32A	695759		拧 -（连杆）
43	593913		抛油环，调速/机油
46	694039		凸轮轴
404	690272		垫圈 -（调速克兰克）
598	592587		垫片，结束游戏 -（曲轴或凸轮轴轴承）
615	690340		固定器，调速轴
616	798327		曲柄，调速
718	690959		销，定位
741	797521		齿轮，正时
1036	-----		Label-Emissions -（可从百力通授权经销商处获得）
1263	697124		簧片，呼吸
1264	793453		拧 -（呼吸簧）
1319	794467		标签，警告
1319A	797669		标签，警告
1375	796476		盖子，呼吸器里德
1376	794451		拧 -（呼吸簧片盖）

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

化油器，化油器大修套件

制造编号： 121R02-0002-F1

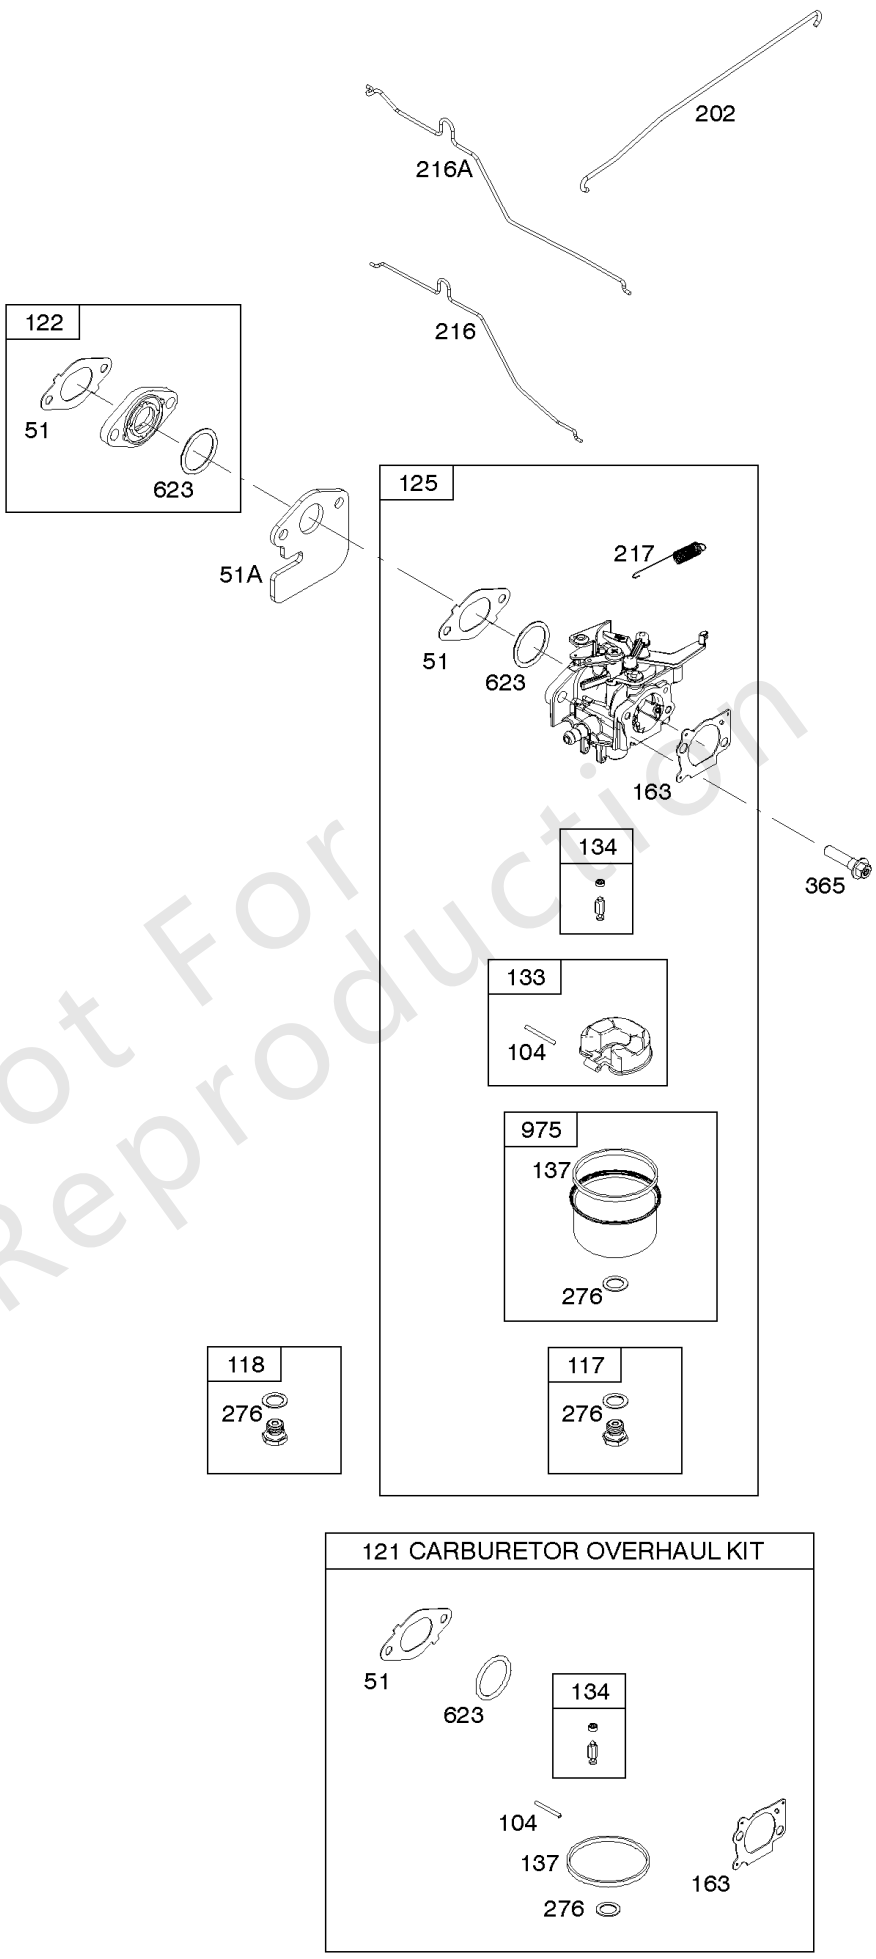

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

化油器，化油器大修套件

参考编号	零件号	数量	描述
51	796596		垫片，进气管
51A	590398		垫片，进气管
104	797622		Pin-Float Hinge
117	798660		喷嘴，主 -（标准）代码日期14012600后使用
117	799178		喷嘴，主 -（标准）在代码日期14012700 -之前使用
118	799604		喷嘴，主 -（高海拔）在代码日期14012700 -之前使用
118	799607		喷嘴，主 -（高海拔）代码日期14012600后使用
121	592172		套件，化油器大修
122	796595		垫片，化油器
125	593599		化油器
133	797626		浮子，化油器
134	799177		套件，针/座椅
137	797625		垫片，浮子碗
163	691894		垫片，空气滤清器 -（空气滤清器）
202	796657		连接，机械调速器
216A	798944		连接，阻风门
217	799179		弹簧，阻风门 回位
276	797632		垫片，密封
365	699484		拧 -（化油器）
623	793628		密封圈，O形圈 -（化油器垫片）
975	797631		碗，浮子

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

发电线圈，电启动器，点火

制造编号： 121R02-0002-F1

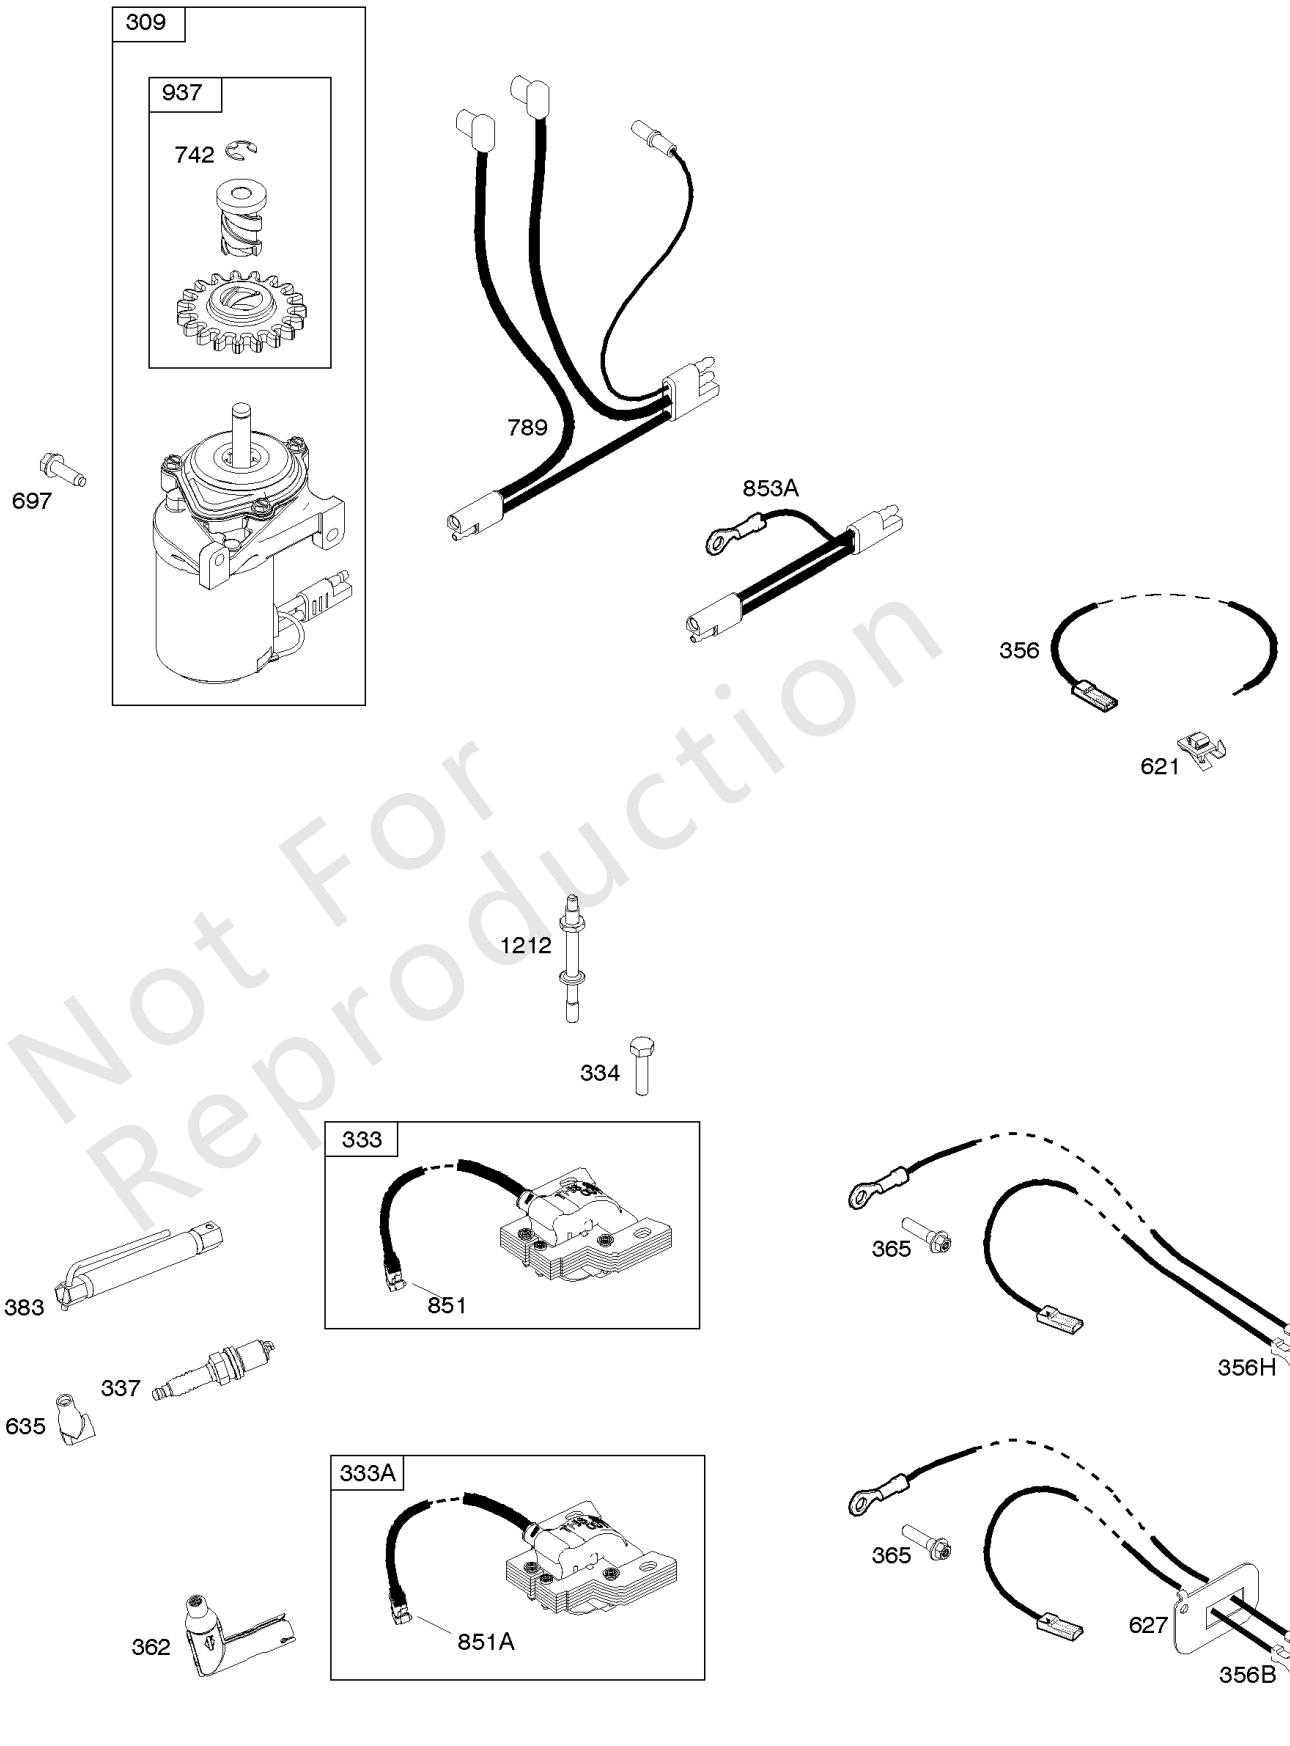

Not For Reproduction

发电线圈，电启动器，点火

参考编号	零件号	数量	描述
333	796499		电枢，磁电机 - (90度点火终端)
334	793454		拧 - (磁电枢)
337	594264		塞，火花
347A	798939		开关，摇杆
356G	798942		线，停止
356H	798943		线，停止
362	799646		护罩，火花塞
365	699484		拧 - (化油器)
383	19576S		扳手，火花塞
621	692310		转，停
635	66538S		帽，火花塞
697	691127		拧 - (启动马达) (驱动器盖)
742	93941		固定器，E戒指
851	493880S		TERMINAL-SPARK PLUG
851A	692424		端子，火花塞
853A	695897		适配器，电线
1212	796537		螺柱 - (导风罩房)

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

垫片组 - 发动机，油底壳

制造编号： 121R02-0002-F1

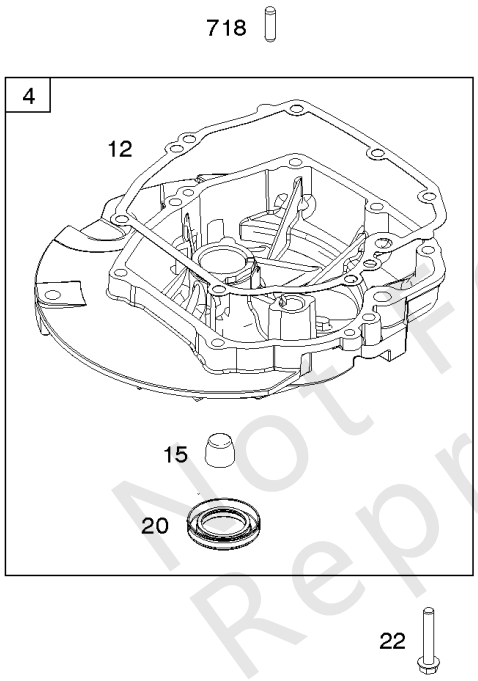

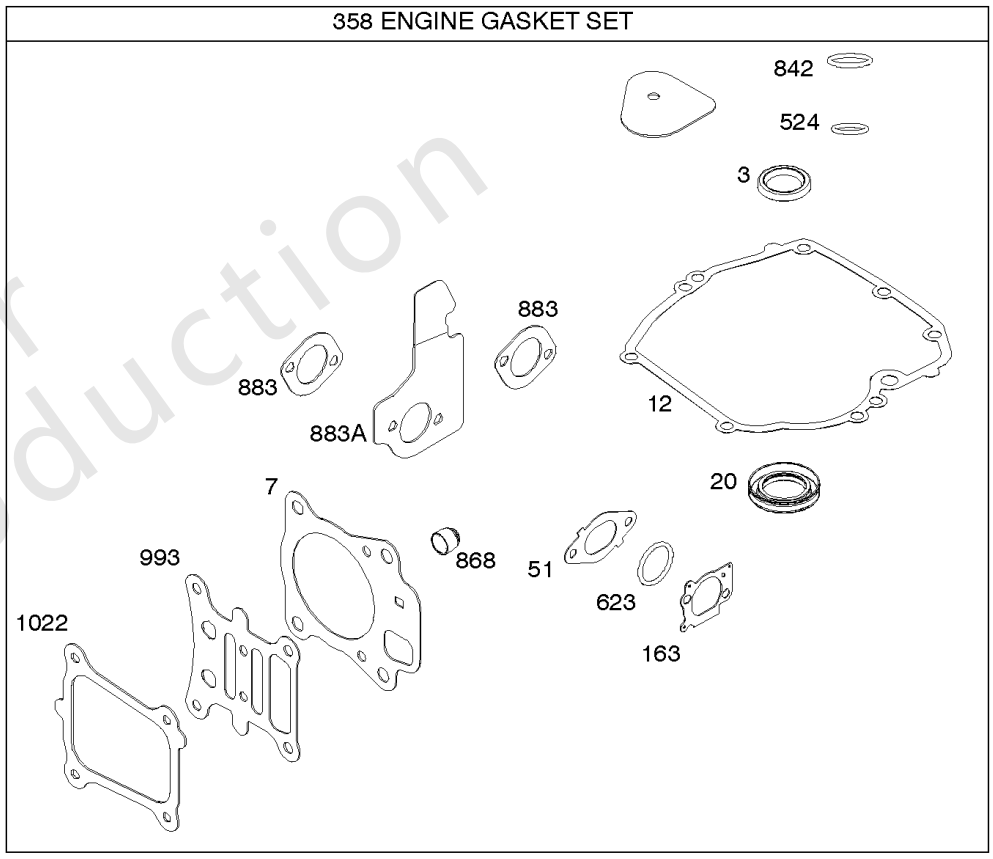

Not for Reproduction

Copyright © Briggs & Stratton. All Rights reserved

垫片组 - 发动机，油底壳

参考编号	零件号	数量	描述
3	299819S		海豹油 -（磁铁侧）
4	493279		油底壳，发动机
7	796475		垫片，缸头
12	692232		垫片，曲轴箱盖
15	691680		插头，排油 -（方形插座）
20	399781S		海豹油 -（PTO方）
22	691092		拧 -（曲轴箱盖/油底壳）
51	796596		垫片，进气管
163	691894		垫片，空气滤清器 -（空气滤清器）
358	799495		垫片包，发动机
524	692296		Seal-Dipstick Tube -（试纸管）
623	793628		密封圈，O形圈 -（化油器垫片）
718	690959		销，定位
842	691031		密封圈，O形圈 -（试纸管）
868	795440		Seal-Valve
883	793497		垫片，排气
883A	796677		垫片，排气
993	796473		垫片，缸头板
1022	796480		垫片，摇杆盖

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

导风罩，盖/护罩，飞轮，启动拉盘

制造编号： 121R02-0002-F1

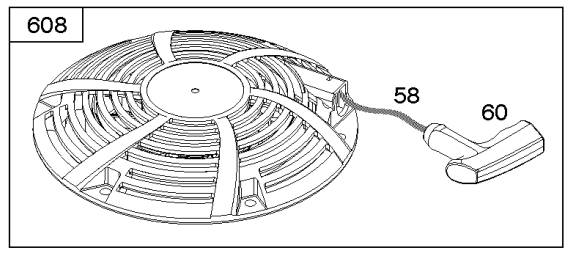



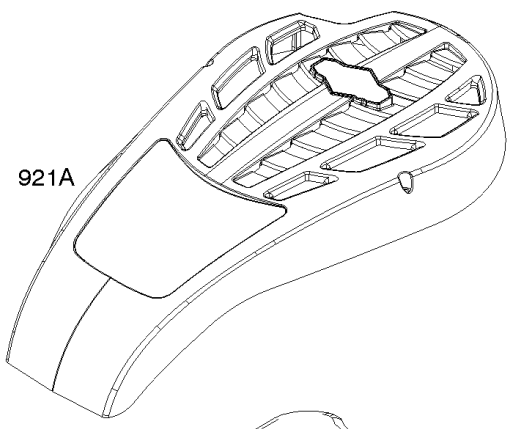

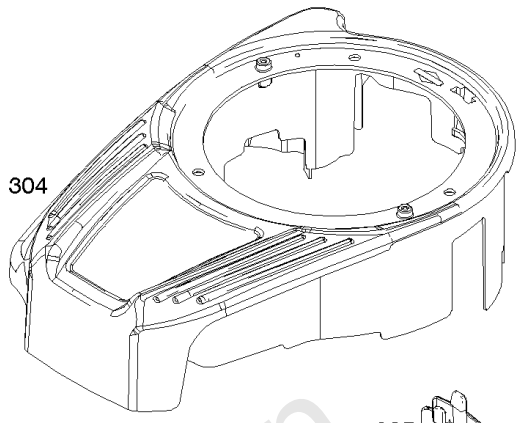

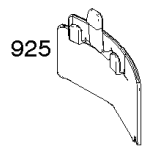

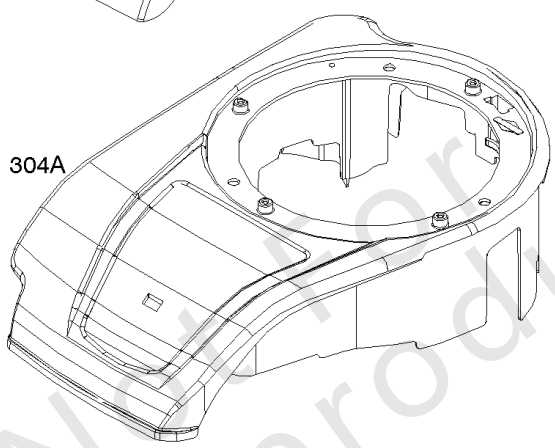

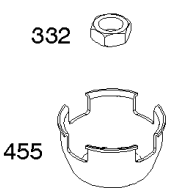

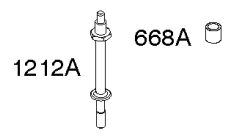







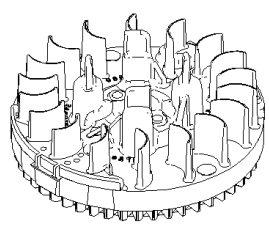

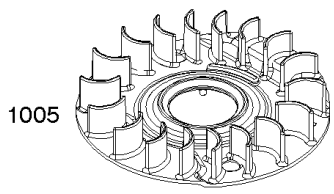

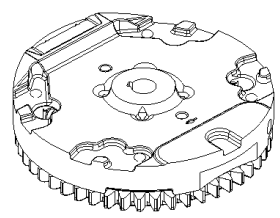

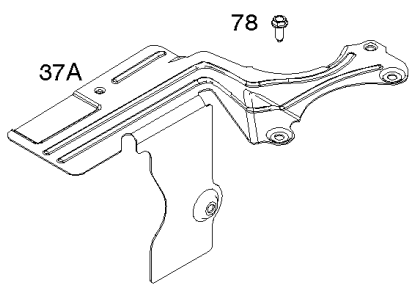

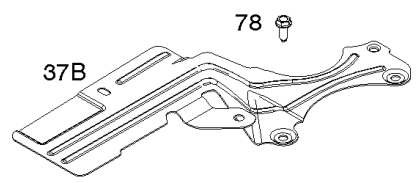

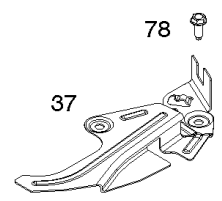

Not for Reproduction

Copyright © Briggs & Stratton. All Rights reserved

导风罩，盖/护罩，飞轮，启动拉盘

参考编号	零件号	数量	描述
23B	796621		飞轮 - (铸铁)
37B	799155		护卫，飞轮
58	697316		绳，启动 - (88-5 / 8) (切成所需长度)
60	281434S		紧握，启动 绳
60A	799716		紧握，启动 绳
75	691736		垫圈 - (飞轮)
78	793480		拧 - (飞轮护罩)
304	796692		壳，导风罩 - (自绕回弹开始)
332	690662		坚果 - (飞轮)
363	19069		拉拔器，飞轮
455	796615		杯，飞轮
608	796497		启动，自绕回弹
668A	797383		垫片
925	796531		盖子，联动
1005	796614		风扇，飞轮
1212	796537		螺柱 - (导风罩房)
1212A	793479		螺柱 - (导风罩房)
1335	793481		坚果 - (导风罩房)

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

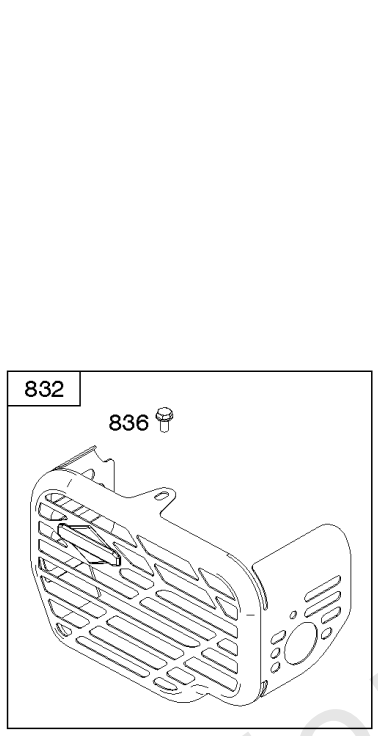

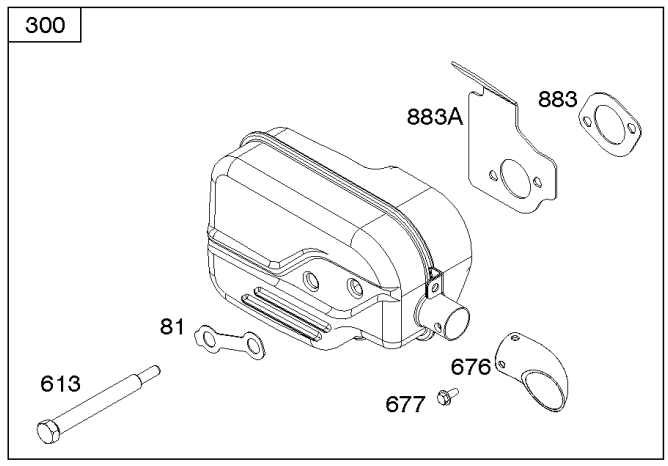



Not For Reproduction

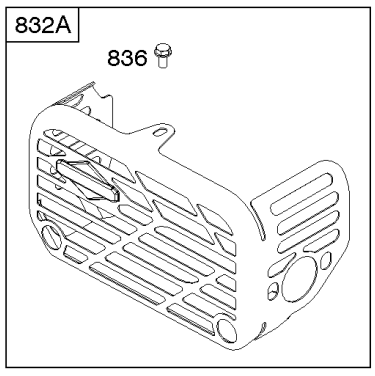

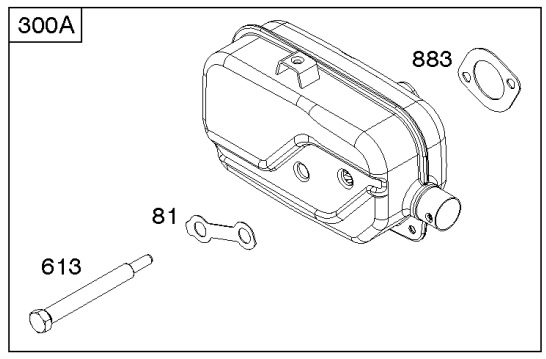



排气系统

参考编号	零件号	数量	描述
81	691740		锁，消音器螺丝
300A	798940		围巾
613	796496		拧 - (围巾)
676	692010		消除器，消音器
676A	799187		消除器，消音器
677	690661		拧 - (消音器导流板)
832A	593411		保护，围巾
836	793500		拧 - (消音器卫队)
837	797735		垫片 - (围巾)
883	793497		垫片，排气
883A	796677		垫片，排气
994	690813		捕捉器，火花

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

控制器，调速弹簧，恒温器

制造编号： 121R02-0002-F1

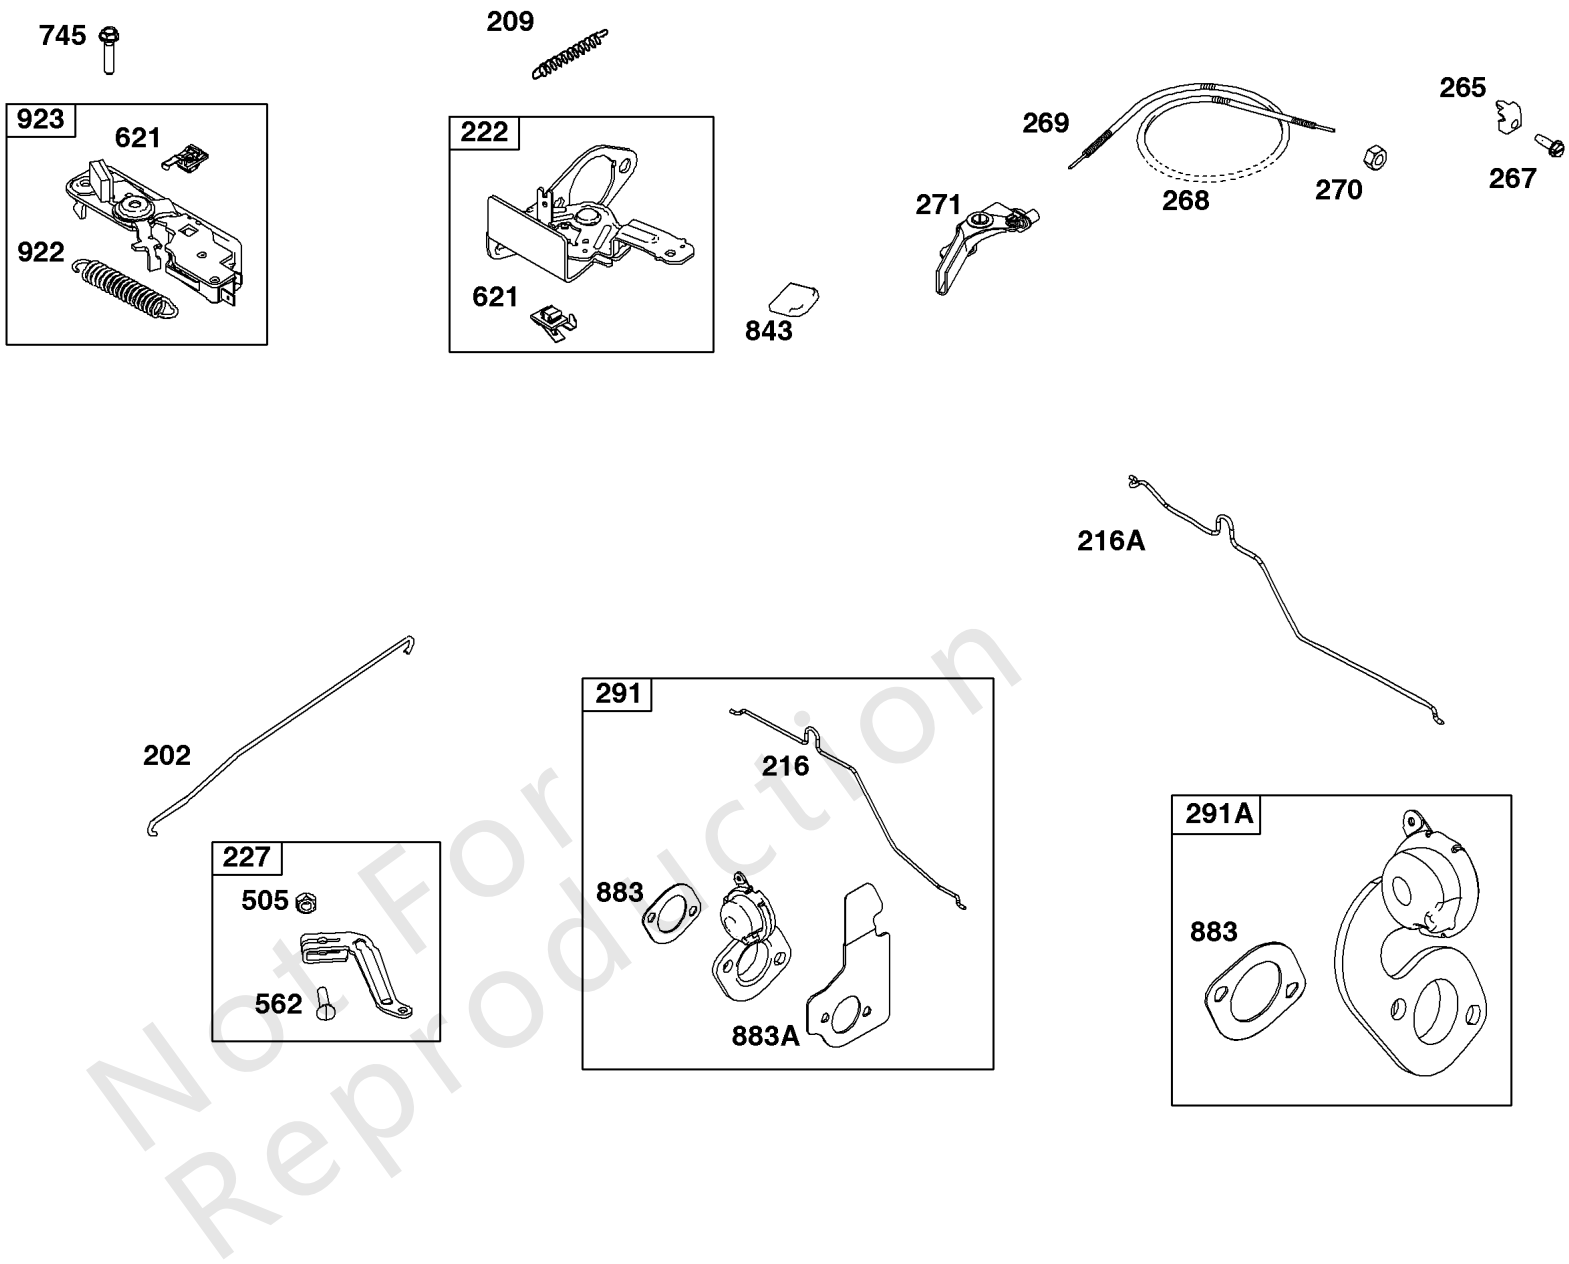

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

控制器，调速弹簧，恒温器

参考编号	零件号	数量	描述
202	796657		连接，机械调速器
209	793604		调速斯普林
216A	798944		连接，阻风门
222	796482		支架，控制 -（手动摩擦，远程和固定速度控制）
227	796487		杠杆，调速控制
265	691024		夹子，线
267	691044		拧 -（线夹）
268	691025		外壳，控制线 -（切成所需长度）
269	691026		电线，控制 -（切成所需长度）
270	691027		坚果 -（控制线套管）
271	691028		杠杆，控制
291A	798938		温控器
505	793515		坚果 -（调速控制杆）
562	793514		螺栓 -（调速杠杆）
621	692310		转，停
745	793491		拧 -（刹车）
883	793497		垫片，排气
883A	796677		垫片，排气
922	692135		弹簧，刹车
923	796635		刹车

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

替代发动机-美国和加拿大

参考编号	零件号	数量	描述
	121S022022	1	更换发动机
	798772	1	更换短块
	-----		Top No-Load Speed: 3800 -类型：全部
	-----		Service Note: Transfer Muffler and/or Spark Arrester Assembly from the original engine if suitable for additional service or add new parts as required
	-----		Service Note: Transfer the Blower Housing , Rewind Assembly and related parts from the original engine to replacement engine.

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

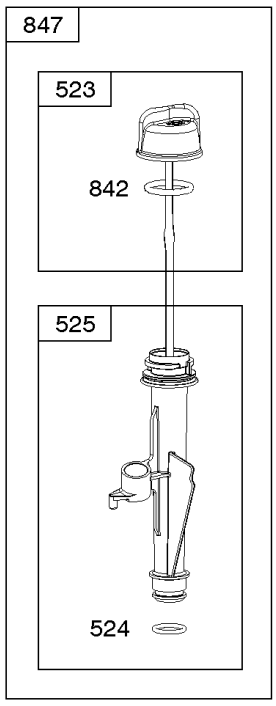

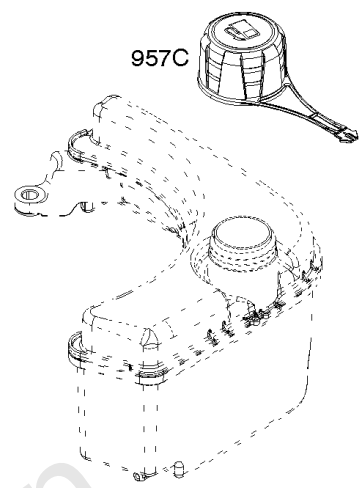

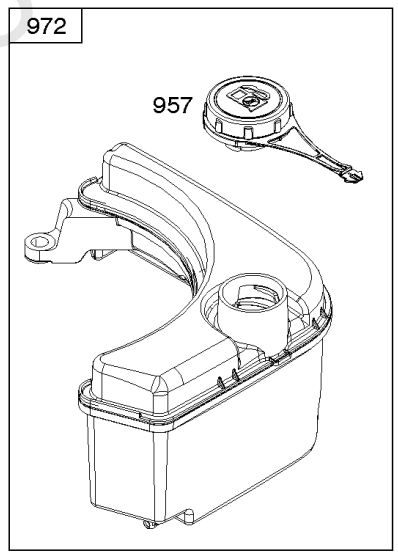

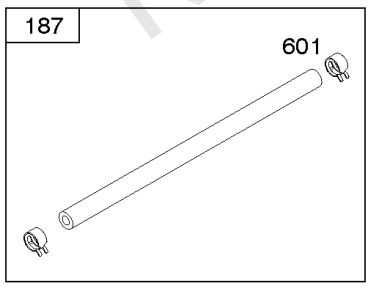

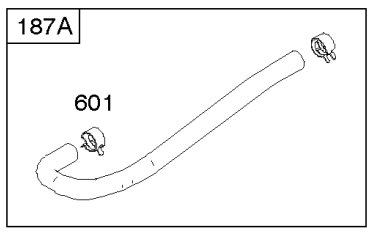



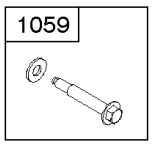

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

燃料供应，润滑

参考编号	零件号	数量	描述
187	791766		管，燃油 -（切成所需长度）
187A	796491		管，燃油 -（成型软管）
523	796503		机油尺
524	692296		Seal-Dipstick Tube -（试纸管）
525	796502		管子，机油尺
601	791850		夹子，软管
670	793485		垫片，油箱
842	691031		密封圈，O形圈 -（试纸管）
847	796501		机油尺 / 管子组装
957	799585		盖，油箱
957C	796577		帽燃油箱
972	590949		油箱，燃料 -（塑料）
1059	793471		套件，螺丝/垫圈

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

空气滤清器

制造编号： 121R02-0002-F1

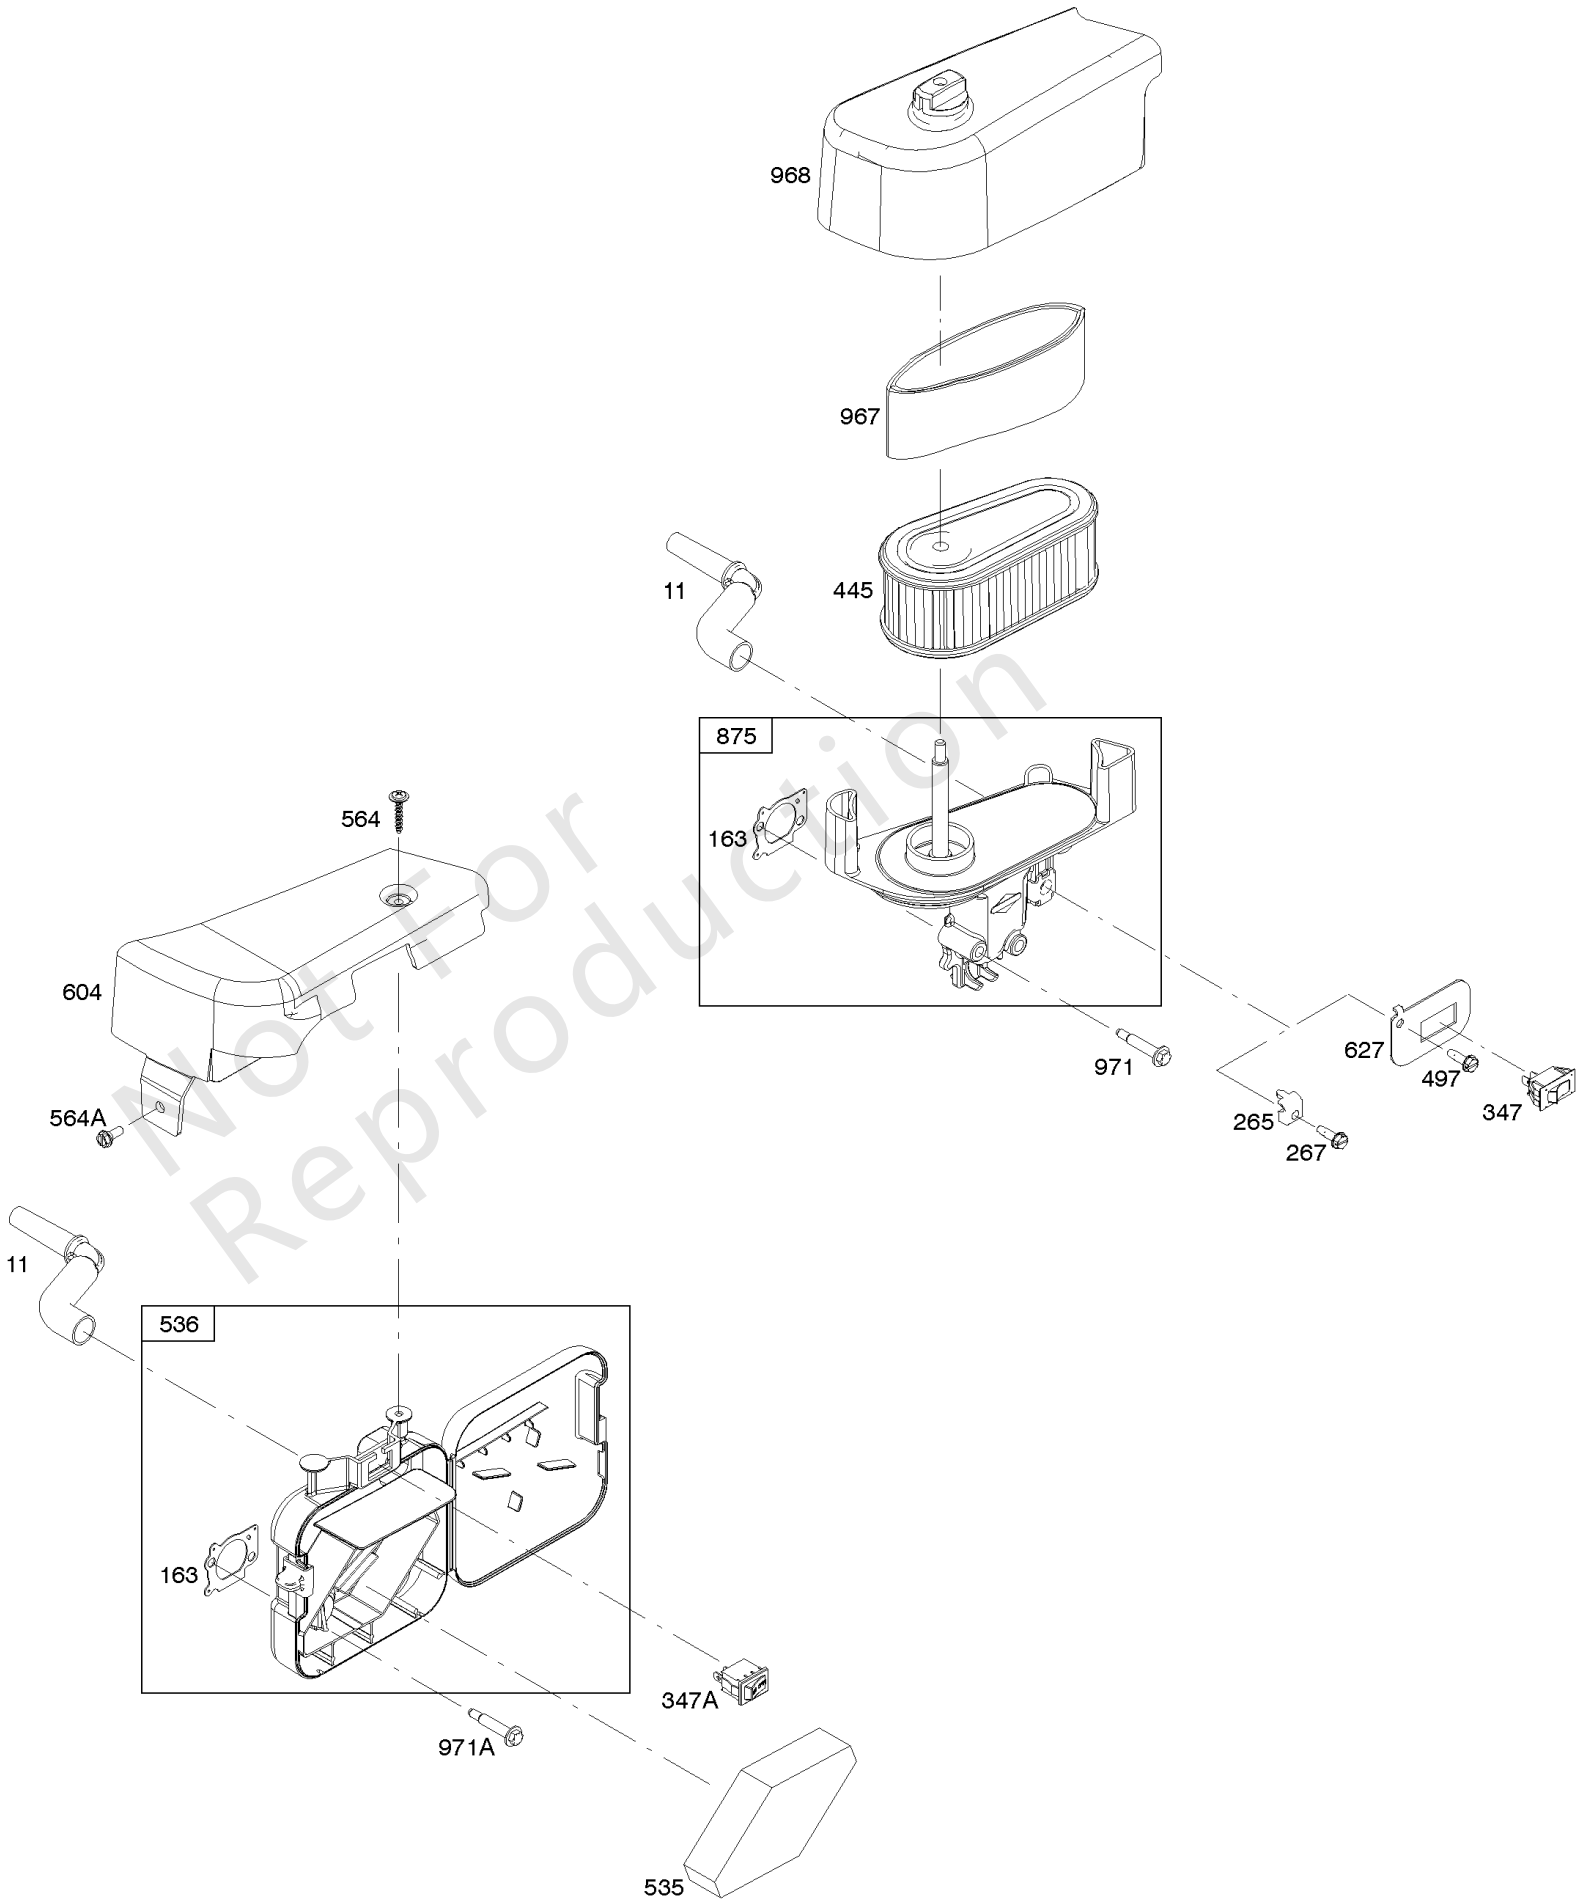

Not for reproduction

空气滤清器

参考编号	零件号	数量	描述
11	796478		管子，呼吸器
163	691894		垫片，空气滤清器 - (空气滤清器)
265	691024		夹子，线
267	691044		拧 - (线夹)
347A	798939		开关，摇杆
445	795066		过滤器，空气滤清器盒
535	797301		过滤器，空气过滤器泡沫
536	799025		清洁剂，空气
564	690351		拧 - (控制盖)
564A	799026		拧 - (控制盖)
604	799024		盖子，控制
875	796492		底座，空气滤清器
967	796254		过滤器，预滤
968	796493		盖子，空气滤清器
971A	798294		拧 - (空气滤清器底座到化油器/节气门体)

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

缸头，垫片组合阀，阀门

制造编号： 121R02-0002-F1

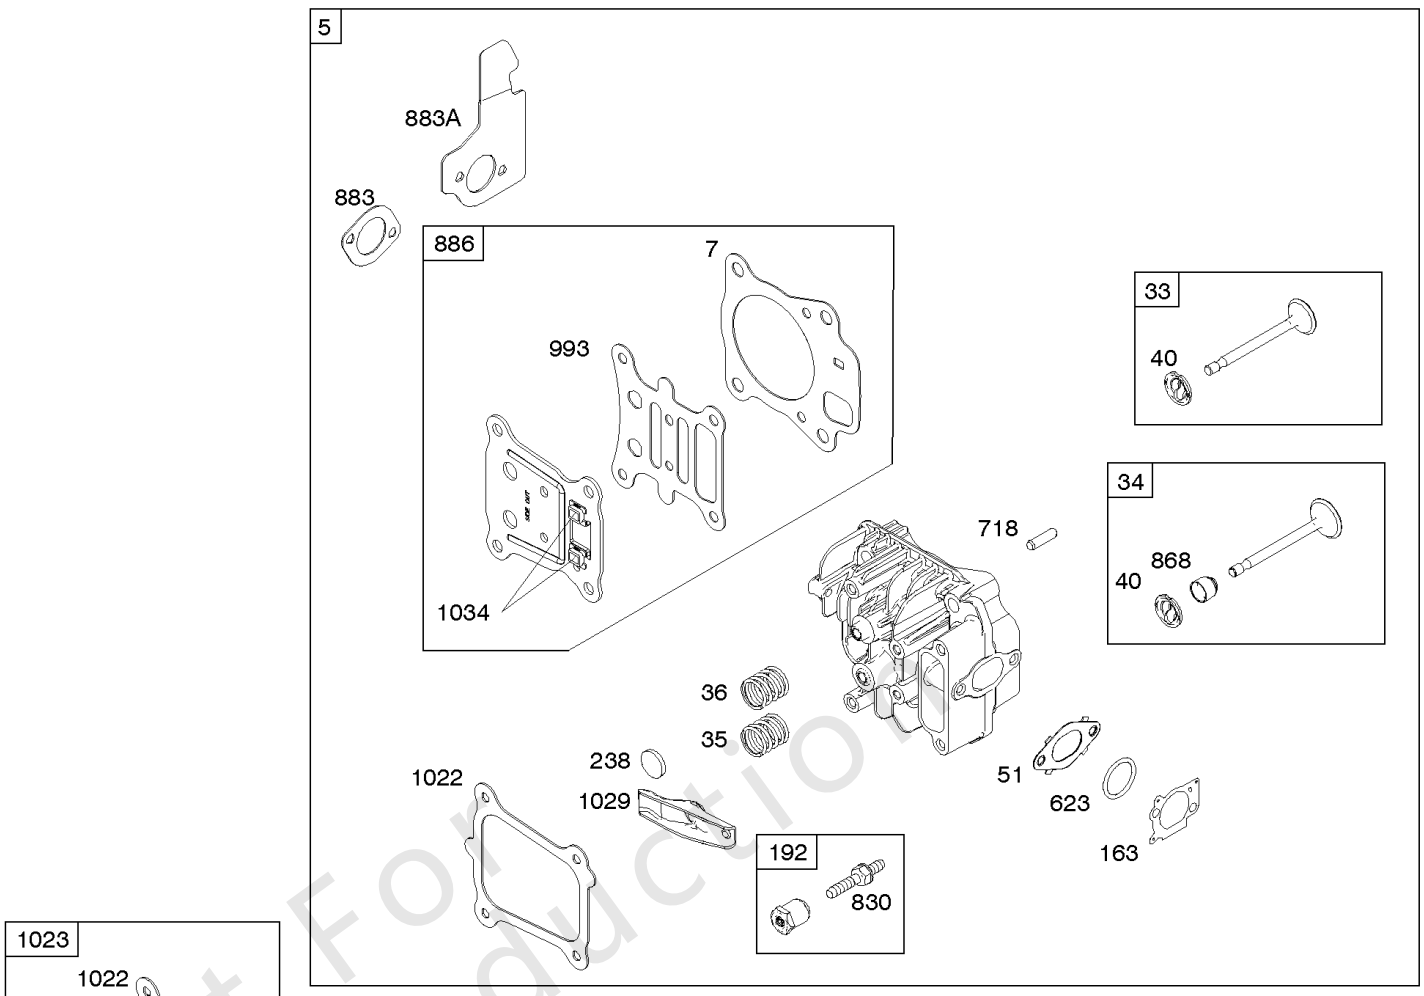

914

1095 VALVE GASKET SET

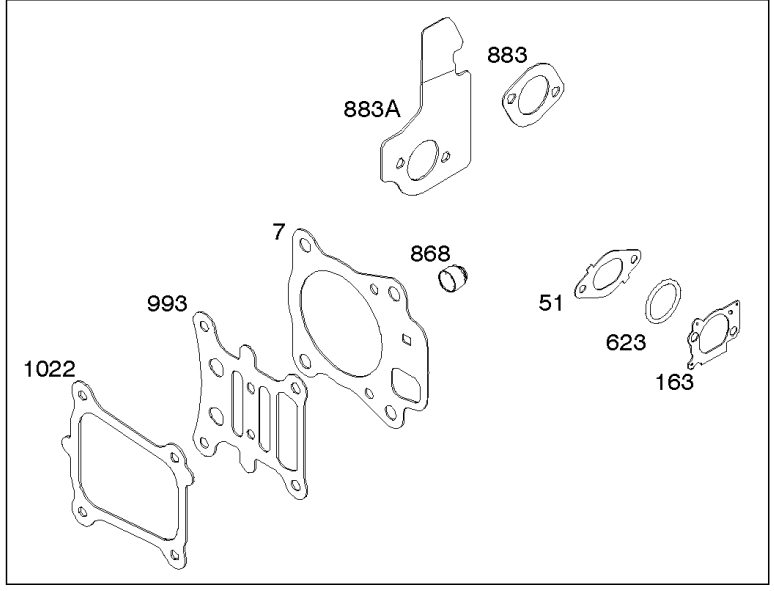

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

缸头，垫片组合阀，阀门

参考编号	零件号	数量	描述
5	796471		头，缸体
7	796475		垫片，缸头
13	799277		拧 -（缸头）
33	499642		排气阀门
34	795443		阀门，摄入量
35	691304		弹簧，阀门 -（录取）
36	691304		弹簧，阀门 -（排气）
40	692194		保持器，阀门
45	690977		挺杆，阀门
51	796596		垫片，进气管
163	691894		垫片，空气滤清器 -（空气滤清器）
192	796631		调节器。摇臂
238	691300		盖，阀门
337	594264		塞，火花
383	19576S		扳手，火花塞
623	793628		密封圈，O形圈 -（化油器垫片）
635	66538S		帽，火花塞
718	690959		销，定位
830	796472		螺柱，摇臂 -（摇臂）
868	795440		Seal-Valve
883	793497		垫片，排气
883A	796677		垫片，排气
886	799492		套件，缸头/板垫片
914	794451		拧 -（摇杆盖）
993	796473		垫片，缸头板
1022	796480		垫片，摇杆盖
1023	796479		盖子，摇杆
1026	796481		杆，推
1029	691230		臂，摇杆
1034	691343		Guide-Push Rod
1095	799496		垫片包，阀门

Not For Reproduction

Copyright © Briggs & Stratton. All Rights reserved

Copyright © Briggs & Stratton. All Rights reserved

18-Apr-2024