






Parts Manual












Mfg. No: 128T02-0740-B3

Model Components	Page
Air Cleaner, Exhaust System.....	4
Blower Housing, Electric Starter, Flywheel, Rewind Starter.....	6
Blower Housing-Shrouds.....	10
Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves.....	12
Carburetor, Fuel Supply.....	18
Controls, Electrical, Flywheel Brake, Governor Spring, Ignition.....	20
Replacement Engine - US & Canada.....	24

Not For
Reproduction

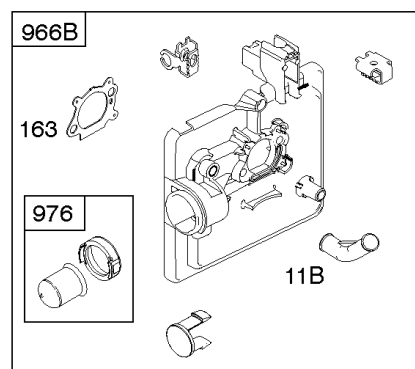
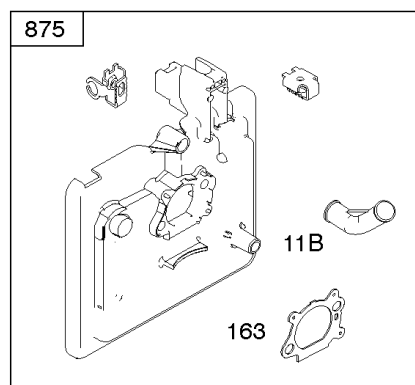
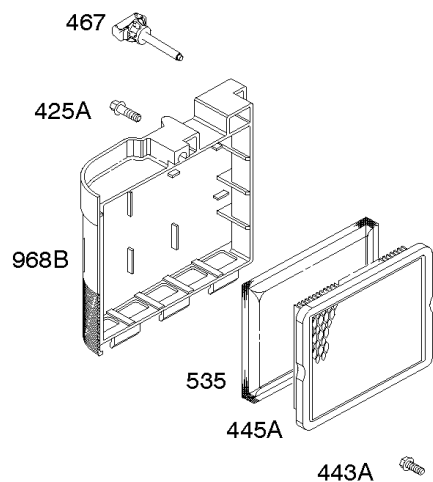


Not For
Reproduction

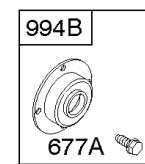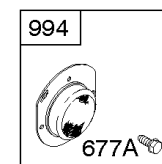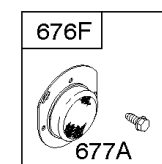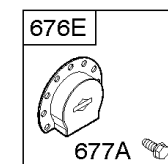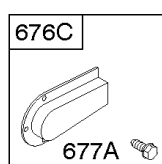
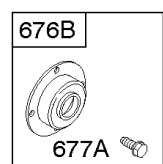
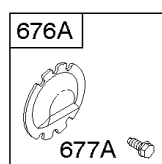
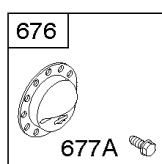
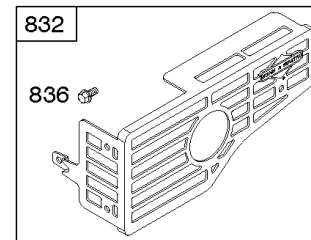
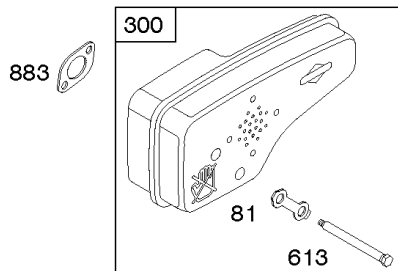
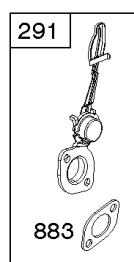


Air Cleaner, Exhaust System

REF NO	PART NO	QTY	DESCRIPTION
11B	691923		TUBE, Breather
81	691740		LOCK, Muffler Screw
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
291	593208		THERMOSTAT
300	593581		MUFFLER -Used After Code Date 13122200
300	790828		MUFFLER -Used Before Code Date 13122300
425A	690670		SCREW -(Air Cleaner Cover)
443A	692523		SCREW -(Air Cleaner Primer Base)
445A	491588S		FILTER, A/C Cartridge
467	790842		KNOB, Air Cleaner Cover
535	493537S		FILTER, Air Cleaner Foam
613	691340		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.25 Inch Shoulder Length)
613	790833		SCREW -(Muffler) (1/4-20 x 2.75 Inches Total Length, 2.08 Inch Shoulder Length)
676	396548		DEFLECTOR, Muffler
676A	393756		DEFLECTOR, Muffler -(Side Outlet)
676B	397931		DEFLECTOR, Muffler
676E	393760		DEFLECTOR, Muffler
676C	493871		DEFLECTOR, Muffler
676F	590745		DEFLECTOR, Muffler
677	690661		SCREW -(Muffler Deflector) (Thread Forming)
677A	593440		SCREW -(Muffler Deflector) (Self-Drilling & Tapping)
832	593875		GUARD, Muffler
836	690664		SCREW -(Muffler Guard)
875	593580		BASE, Air Cleaner -(Primer) -Used After Code Date 14012600
883	691881		GASKET, Exhaust
966B	795259		BASE-AIR CLEANER PRIM -(Primer) -Used Before Code Date 14012700
968B	692298		COVER, Air Cleaner
976	694395		PRIMER, Carburetor
994	398067		ARRESTOR-SPARK
994B	792245		ARRESTOR, Spark

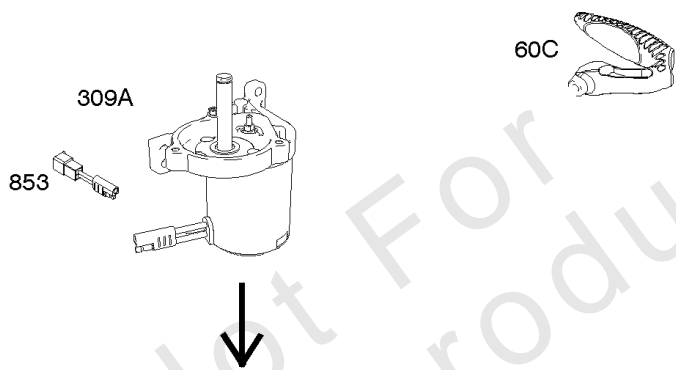
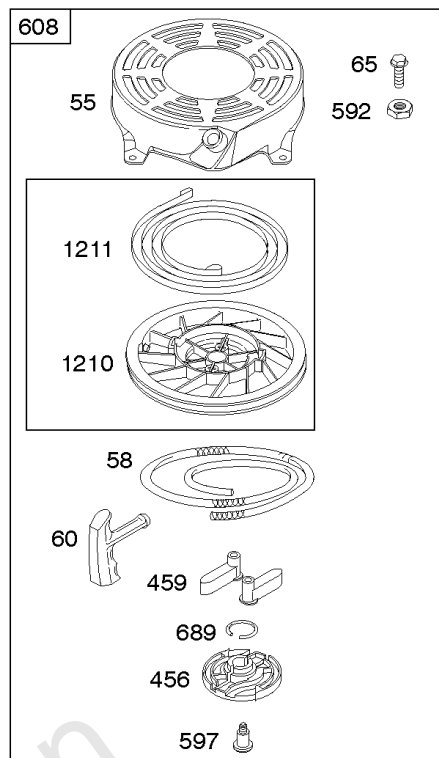
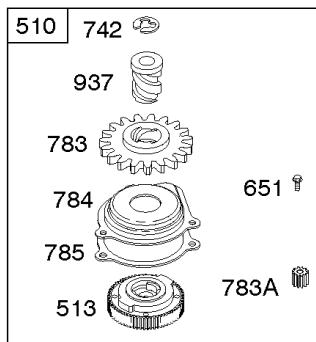


1036 EMISSIONS LABEL

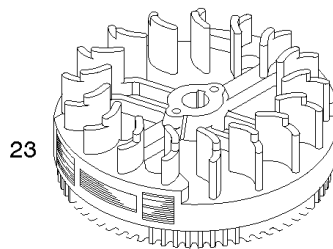
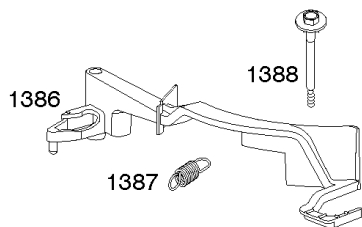
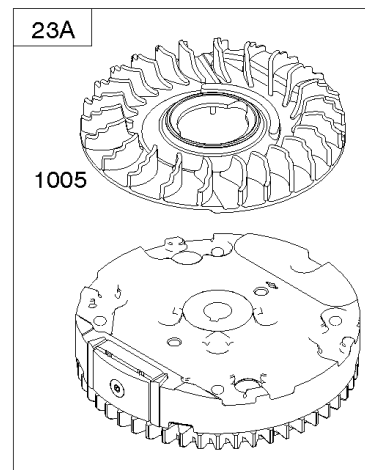
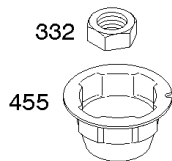
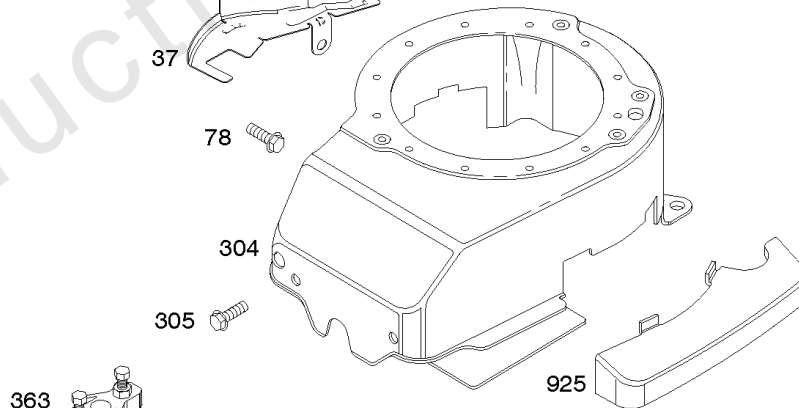
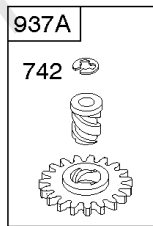
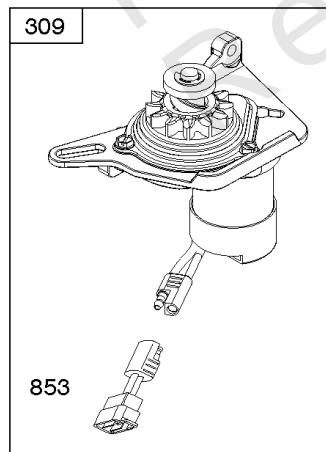


Blower Housing, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
23	691987		FLYWHEEL
37	793756		GUARD-FLYWHEEL
55	691421		HOUSING, Rewind Starter
58	697316		ROPE, Starter -(Cut To Required Length)
60	281434S		GRIP, Starter Rope
60C	799716		GRIP, Starter Rope
65	690837		SCREW -(Rewind Starter)
78	691108		SCREW -(Flywheel Guard)
304	790826		HOUSING, Blower
305	691108		SCREW -(Blower Housing)
309	799045		MOTOR-STARTER -Used After Code Date 10112700
309A	-----		Motor-Starter -(For Replacement Starter Motor, Order Reference 309) -Used Before Code Date 10112800
332	690662		NUT -(Flywheel)
363	19069		PULLER, Flywheel
455	791960		CUP, Flywheel
456	692299		PLATE-PAWL FRICTION
459	281505S		PAWL-RATCHET
510	795093		DRIVE, Starter
513	795100		CLUTCH-DRIVE
592	690800		NUT -(Rewind Starter)
597	691696		SCREW -(Pawl Friction Plate)
608	497680		STARTER, Rewind
651	691660		SCREW -(Starter Gear Cover)
689	691855		SPRING-FRICTION
697	691127		SCREW -(Starter Motor) (Drive Cap)
742	93941		RETAINER, E Ring
783	795099		GEAR-PINION
783A	795096		GEAR-PINION
784	795095		COVER, Starter Gear
785	692352		GASKET-STARTER COVER
853	695268		ADAPTER, Wire
925	795403		COVER-LINKAGE
937	795098		SPLINE-STARTER
937A	799420		SPLINE, Starter
1005	691346		FAN, Flywheel
1036	-----		Label-Emissions -(Available From A Briggs & Stratton Authorized Dealer)
1210	498144		PULLEY/SPRING ASSY -(Pulley)
1211	498144		PULLEY/SPRING ASSY -(Spring)
1386	790848		VANE, Air -(Autochoke System)
1387	790849		SPRING, Air Vane

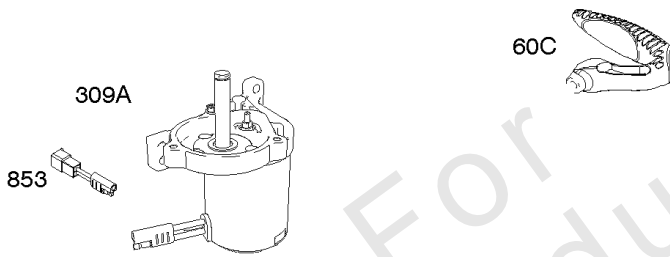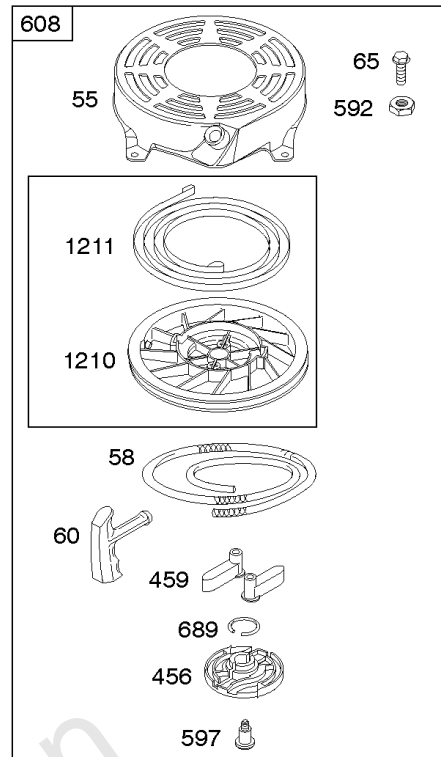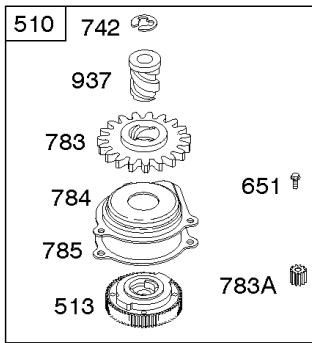










1036 EMISSIONS LABEL

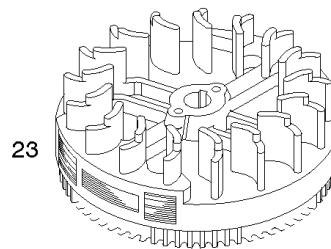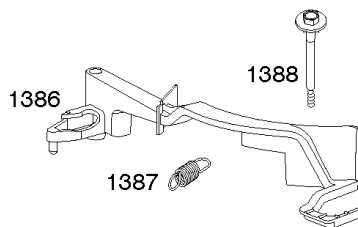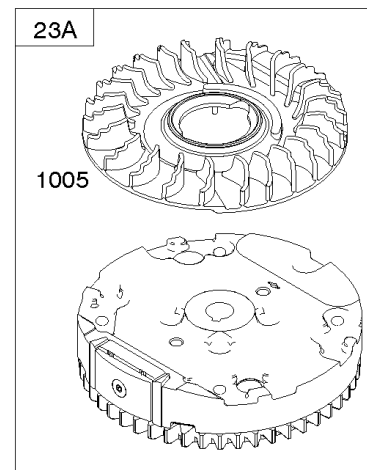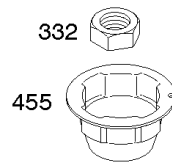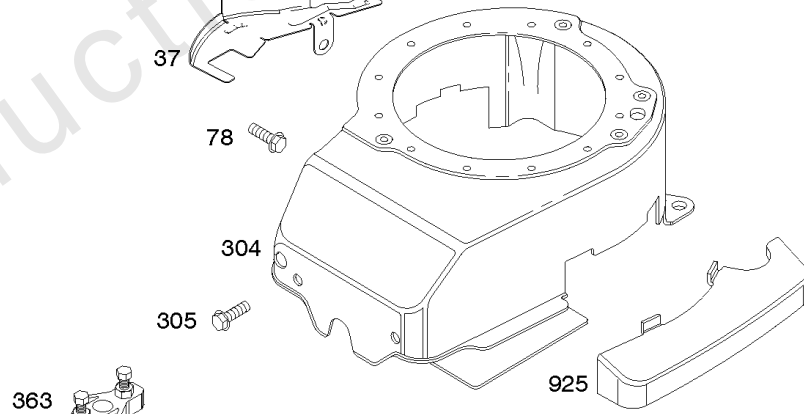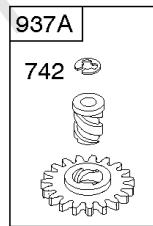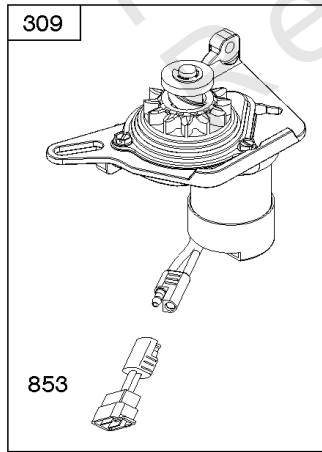

Blower Housing, Electric Starter, Flywheel, Rewind Starter

REF NO	PART NO	QTY	DESCRIPTION
1388	790850		SCREW -(Air Vane) (Auto Choke System)

Not For Reproduction

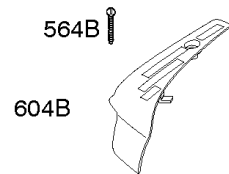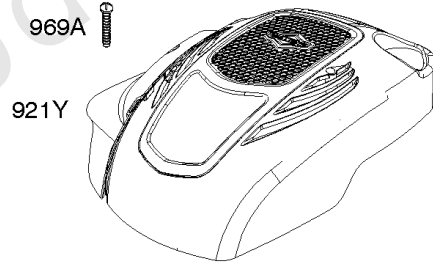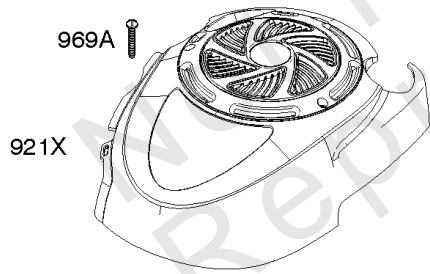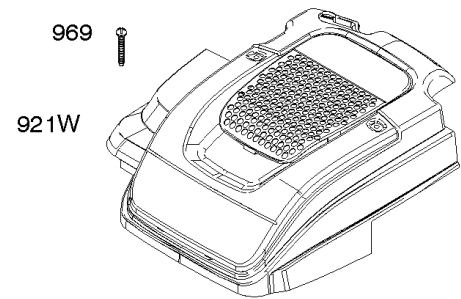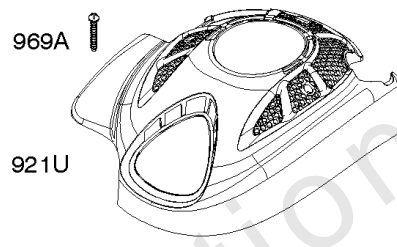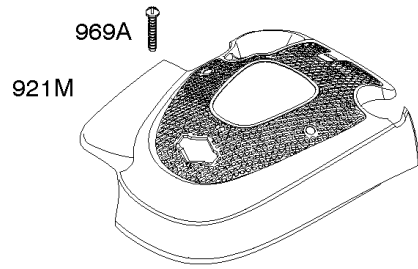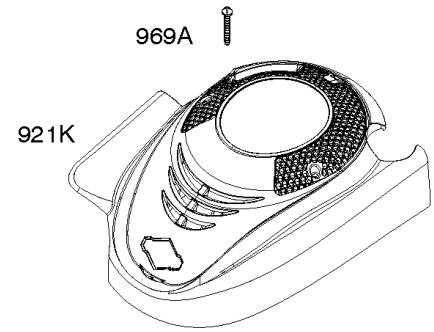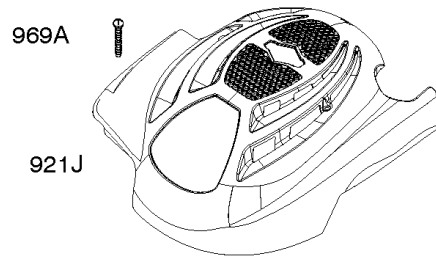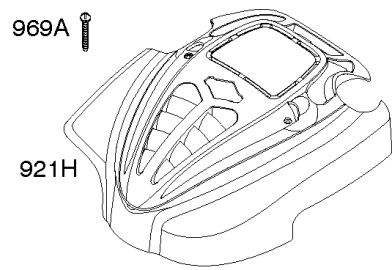


Blower Housing-Shrouds

REF NO	PART NO	QTY	DESCRIPTION
564B	698589		SCREW -(Control Cover)
604B	790703		COVER, Control
921H	790037		HOUSING, Blower
921J	790036		HOUSING, Blower
921K	699984		HOUSING, Blower
921Y	591955		HOUSING, Blower
921M	792652		HOUSING, Blower
921U	794355		HOUSING, Blower
921X	796706		HOUSING, Blower
921W	796921		HOUSING, Blower
969	690700		SCREW -(Blower Housing)
969A	691138		SCREW -(Blower Housing)

Not For Reproduction

1319 WARNING LABEL

1330 REPAIR MANUAL

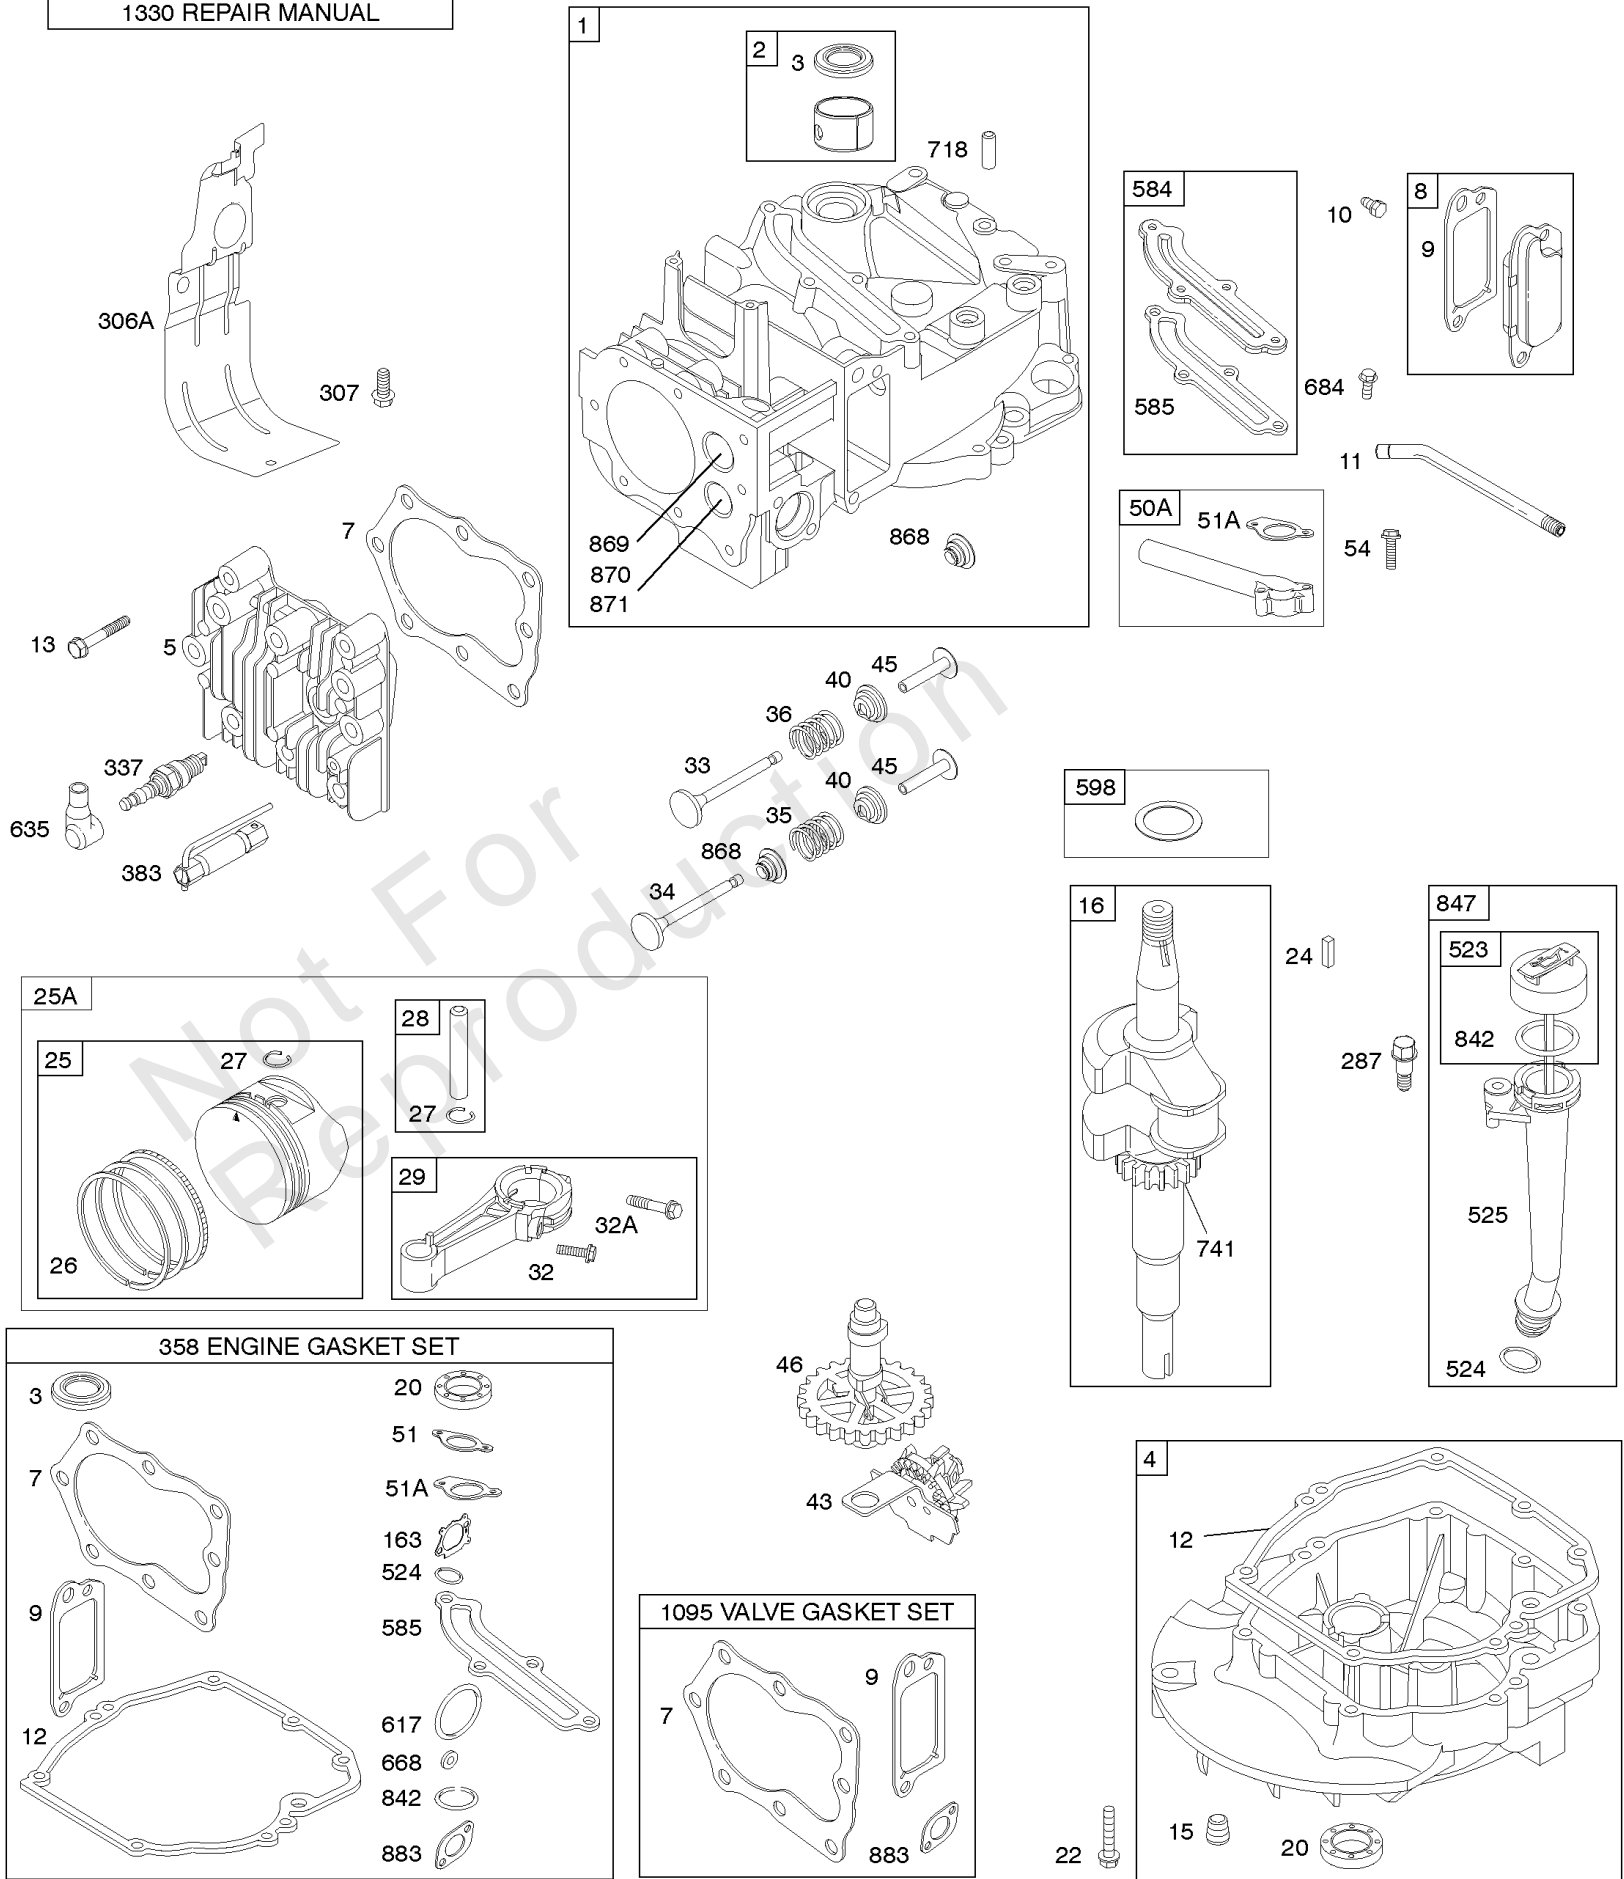


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves

REF NO	PART NO	QTY	DESCRIPTION
1	592645		CYLINDER ASSEMBLY
2	796961		KIT, Bushing/Seal -(Magneto Side)
3	299819S		SEAL, Oil -(Magneto Side)
4	493279		SUMP, Engine
5	594989		HEAD-CYLINDER -Used Before Code Date 11070100
5	590411		HEAD, Cylinder -Used After Code Date 11063000
7	692249		GASKET, Cylinder Head -Used Before Code Date 11070100
7	799875		GASKET, Cylinder Head -Used After Code Date 11063000
8	590395		BREATHER ASSEMBLY
9	699833		GASKET-BREATHER
10	691125		SCREW -(Breather Assembly)
11	691781		TUBE-BREATHER
12	692232		GASKET, Crankcase
13	690912		SCREW -(Cylinder Head) -Used Before Code Date 11070100
13	590422		SCREW -(Cylinder Head) -Used After Code Date 11063000
15	691680		PLUG, Oil Drain -(Square Socket)
16	797017		CRANKSHAFT
20	399781S		SEAL, Oil -(PTO Side)
22	691092		SCREW -(Crankcase Cover/Sump)
24	222698S		KEY, Flywheel
25	799064		PISTON ASSEMBLY -(.020 Oversize) -Used Before Code Date 09041700
25	590404		PISTON ASSEMBLY -(Standard) -Used After Code Date 07090300
25	590405		PISTON ASSEMBLY -(.020 Oversize) -Used After Code Date 09041600
25	799063		PISTON ASSEMBLY -(Standard) -Used Before Code Date 07090400
25A	590406		PISTON ASSEMBLY -Used Before Code Date 09041700
26	797304		SET, Ring -(Replacement, See Ref #25, 590404) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	797305		SET, Ring -(.020 Oversize) -Used After Code Date 09041600 -Used Before Code Date 11070100
26	590402		SET, Ring -(Standard) -Used After Code Date 11063000
26	590403		SET, Ring -(.020 Oversize) -Used After Code Date 11063000

1319 WARNING LABEL

1330 REPAIR MANUAL

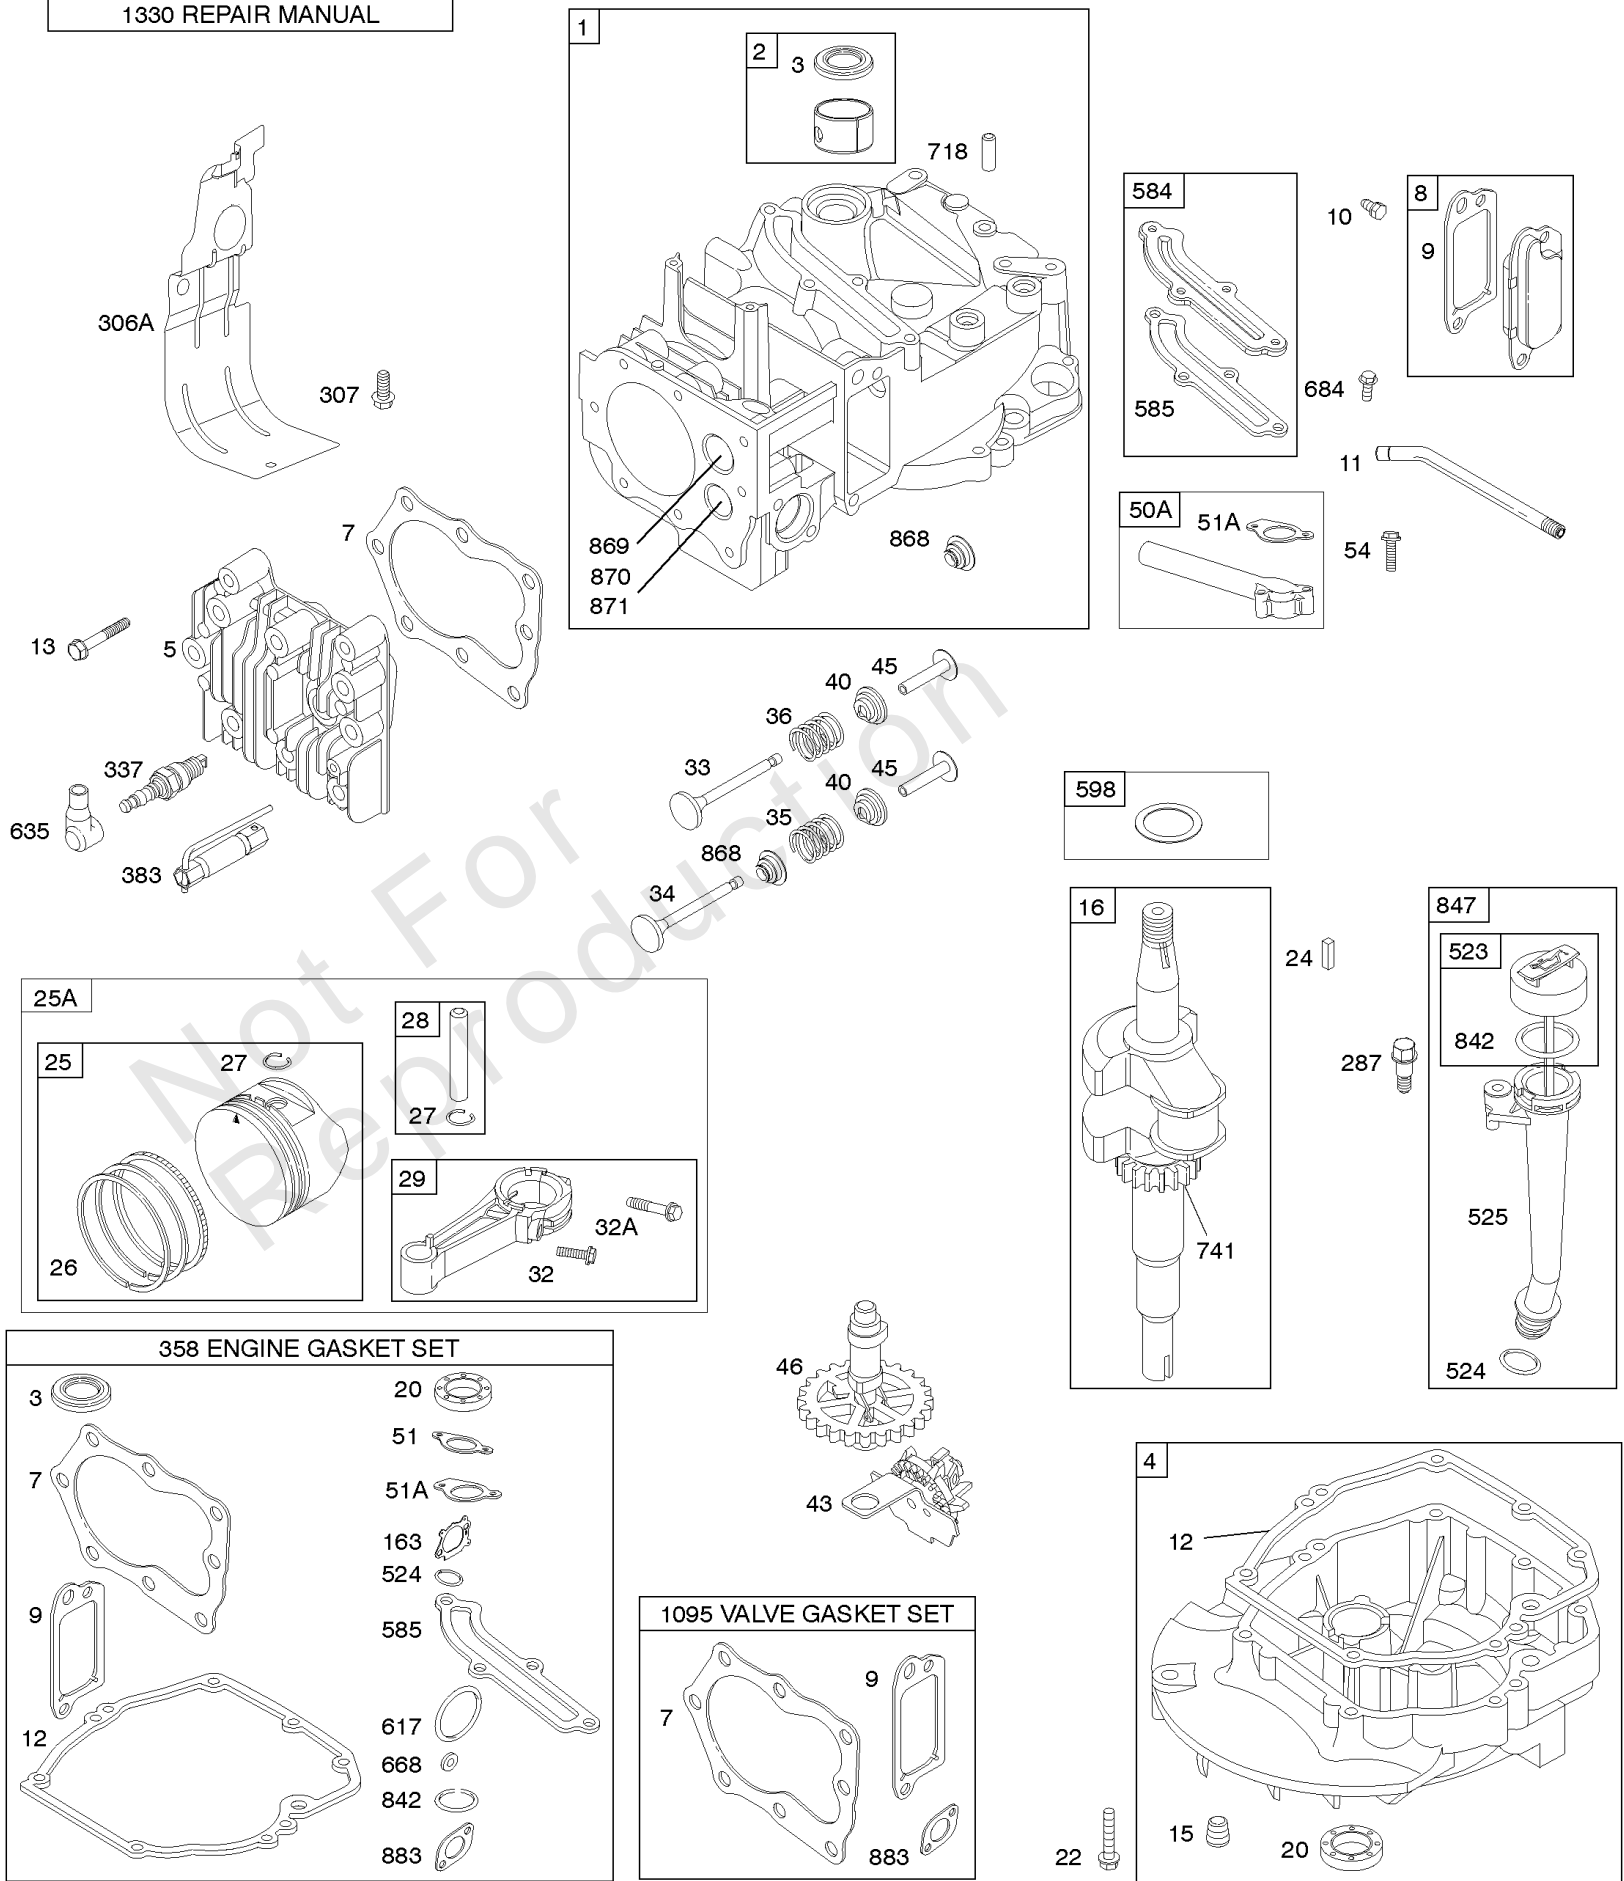


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves

REF NO	PART NO	QTY	DESCRIPTION
26	795431		RING SET -(Standard) -Used Before Code Date 09041700
26	795432		SET, Ring -(.020 Oversize) -Used Before Code Date 09041700
27	691588		LOCK, Piston Pin -Used After Code Date 09041600
27	691866		LOCK-PISTON PIN -Used Before Code Date 09041700
28	298909		PIN, Piston -(Standard) -Used After Code Date 09041600
28	499423		PIN-PISTON/STD -(Standard) -Used Before Code Date 09041700
29	797306		ROD, Connecting -(Standard) -Used After Code Date 09041600
29	499424		ROD, Connecting -(Replacement, See Ref #25, 590406) -Used Before Code Date 09041700
32	691664		SCREW -(Connecting Rod)
32A	695759		SCREW -(Connecting Rod)
33	590394		VALVE-EXHAUST -Used After Code Date 11063000
34	590393		VALVE-INTAKE -Used After Code Date 11063000
35	691270		SPRING, Valve -(Intake)
36	691270		SPRING, Valve -(Exhaust)
40	692194		RETAINER, Valve
43	691997		SLINGER, Governor/Oil
45	690548		TAPPET, Valve
46	691449		CAMSHAFT -Used Before Code Date 11051700
46	590463		CAMSHAFT -Used After Code Date 11051600
50A	796703		MANIFOLD, Intake
51	272199S		GASKET, Intake
51A	796704		GASKET, Intake
54	691650		SCREW -(Intake Manifold)
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
287	690940		SCREW -(Dipstick Tube)
306A	790836		SHIELD, Cylinder
307	690345		SCREW -(Cylinder Shield)
337	796112S		PLUG-SPARK -(Resistor)
358	590508		GASKET SET, Engine
383	89838S		WRENCH-SPARK PLUG
523	499621		DIPSTICK
524	692296		SEAL-DIPSTICK TUBE -(Dipstick Tube)








1319 WARNING LABEL

1330 REPAIR MANUAL

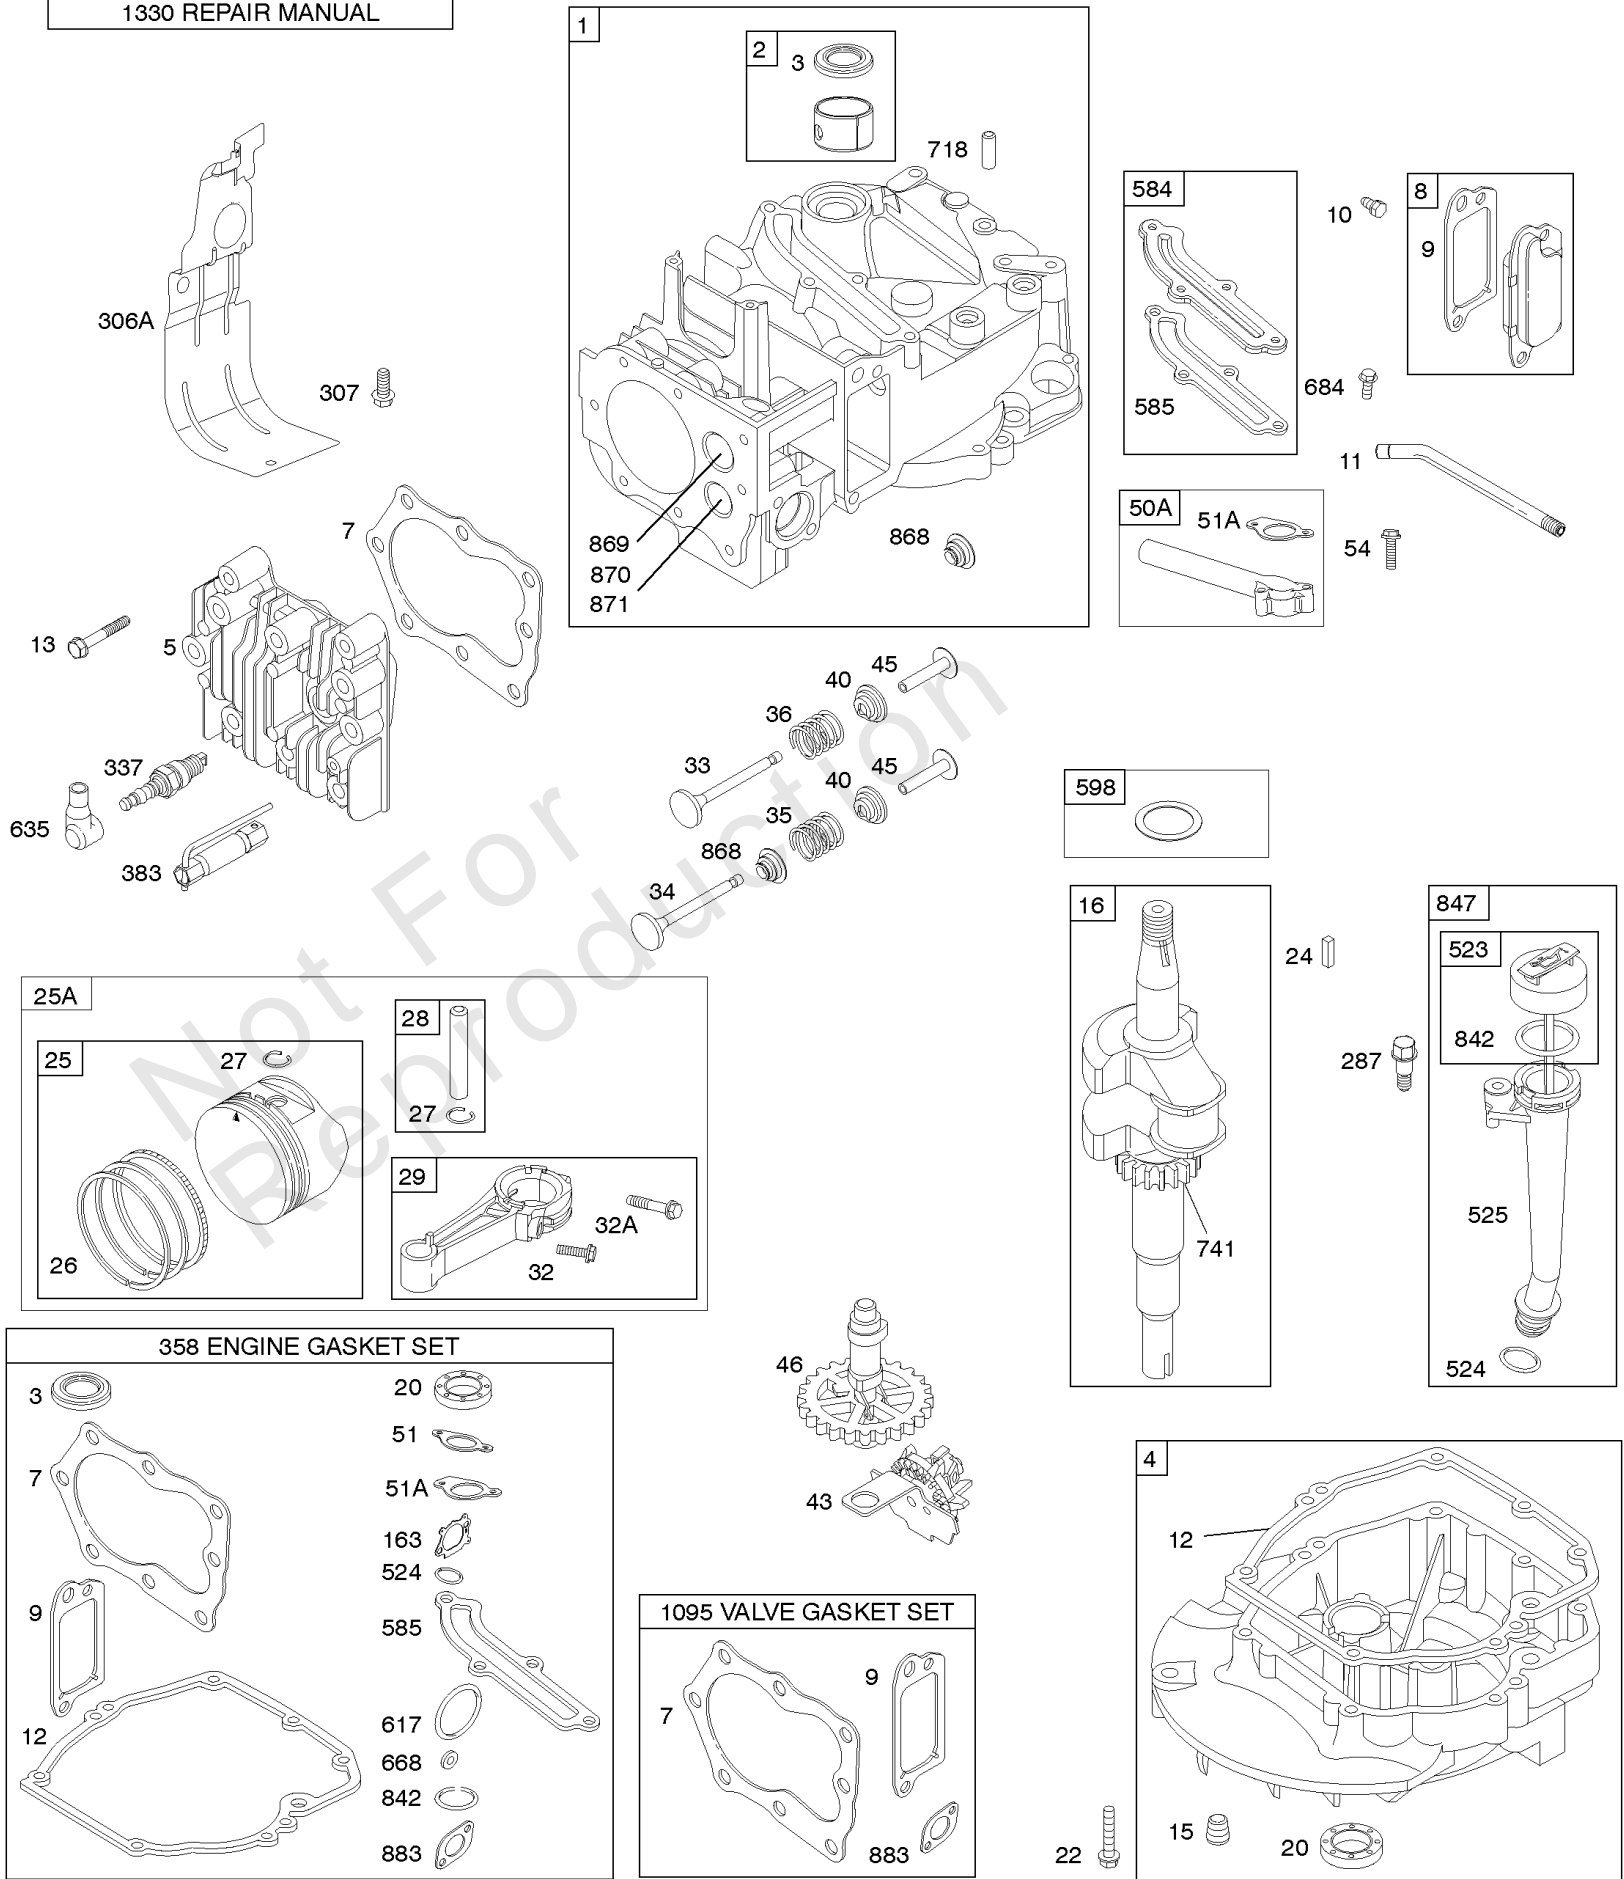


Camshaft, Crankshaft, Cylinder, Engine Sump, Lubrication, Piston Group, Valves

REF NO	PART NO	QTY	DESCRIPTION
525	495265		TUBE, Dipstick
584	697734		COVER-BREA PASSAGE
585	691879		GASKET-BREA PASSAGE
598	592587		SHIM, End Play -(Crankshaft or Camshaft Bearing) (0.012)
617	270344S		SEAL, O-Ring -(Intake Manifold)
635	66538S		BOOT, Spark PLug
668	493823		SPACER -(Includes 2)
684	690345		SCREW -(Breather Passage Cover)
718	690959		PIN, Locating
741	794388		GEAR, Timing -(Use Without Woodruff Key) -Used Before Code Date 08021800
741	797521		GEAR, Timing -(Metal) -Used After Code Date 08021700
842	691031		SEAL, O-Ring -(Dipstick Tube)
847	692047		DIPSTICK/TUBE ASSY
868	590410		SEAL, Valve -Used After Code Date 11063000
868	697338		SEAL, Valve -Used Before Code Date 11070100
869	691155		SEAT, Valve -(Intake)
870	690380		SEAT, Valve -(Exhaust)
871	262001		BUSHING-VALVE GUIDE -(Exhaust) -Used Before Code Date 11070100
871	590409		BUSHING, Valve Guide -Used After Code Date 11063000
871	63709		BUSHING, Valve Guide -(Intake) -Used Before Code Date 11070100
883	691881		GASKET, Exhaust
1095	590507		GASKET SET, Valve
1319	794467		LABEL, Warning
1330	270962		REP MAN-1 CYL L-HD

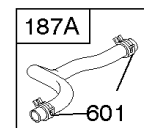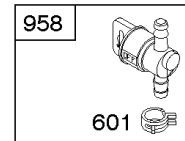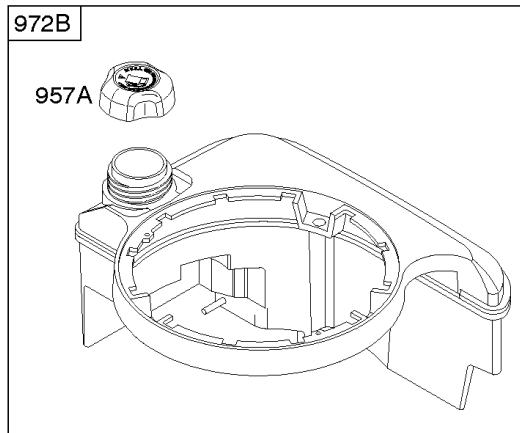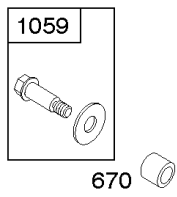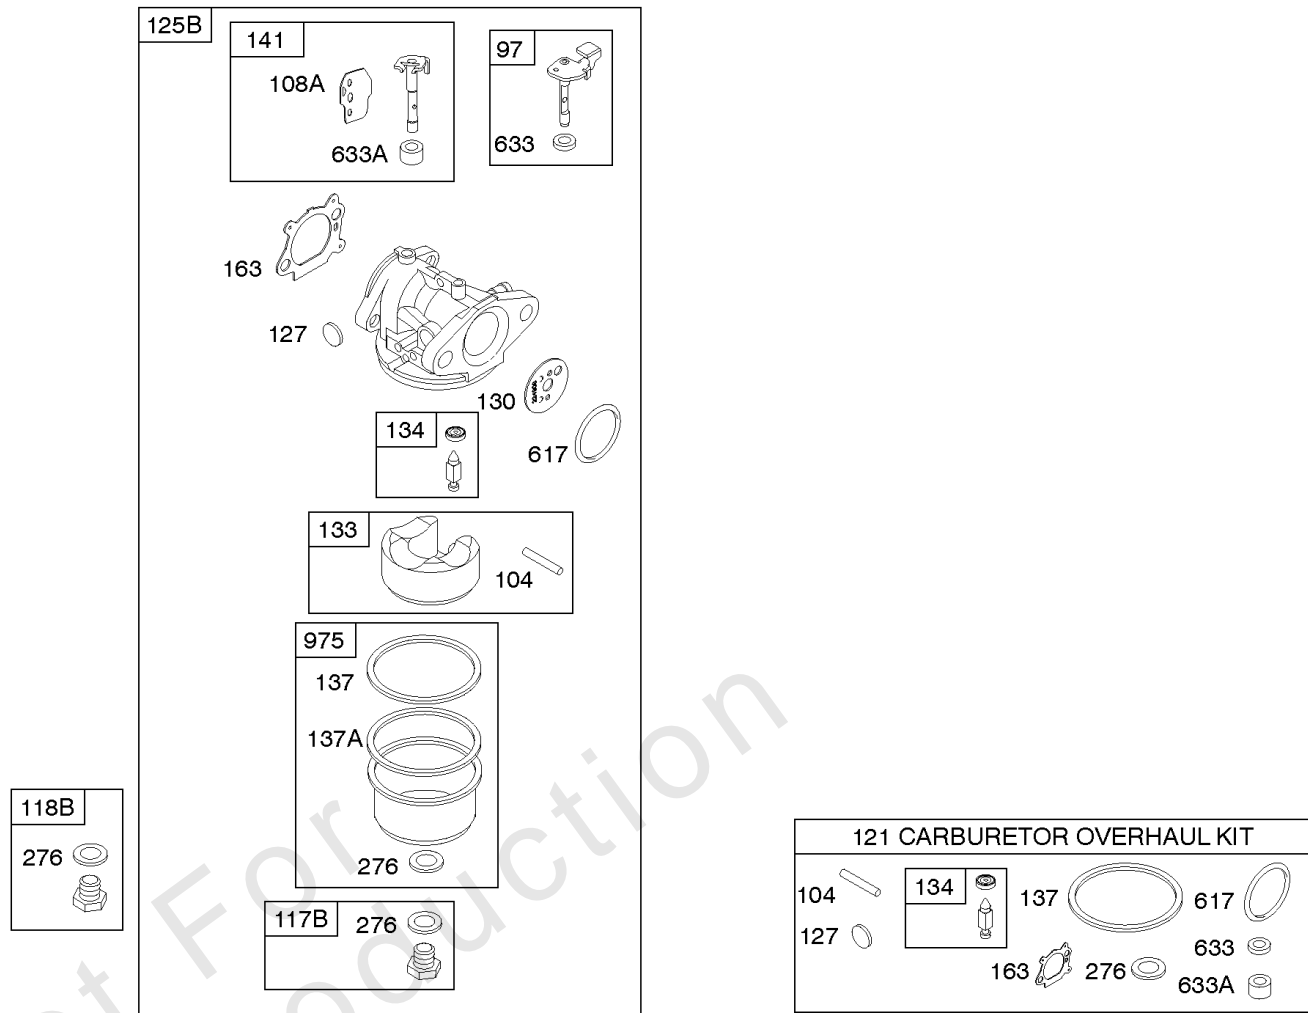


Carburetor, Fuel Supply

REF NO	PART NO	QTY	DESCRIPTION
97	696565		SHAFT, Throttle -(Plastic)
104	797622		PIN-FLOAT HINGE
108A	796708		VALVE, Choke -Used Before Code Date 11051700
108A	795935		VALVE, Choke -Used After Code Date 11051600
117B	695042		JET, Main -(Standard) -Used Before Code Date 11051700
117B	498977		JET, Main -(Standard) -Used After Code Date 11051600
118B	694250		JET, Main -(High Altitude) -Used After Code Date 11051600
118B	498977		JET, Main -(High Altitude) -Used Before Code Date 11051700
121	498260		KIT, Carburetor Overhaul
125B	799866		CARBURETOR -(Autochoke System)
127	694468		PLUG, Welch -(Bowl Vent)
130	696564		VALVE, Throttle
133	398187		FLOAT-CARBURETOR
134	398188		KIT-NEEDLE/SEAT
137	796610		GASKET, Float Bowl
137A	693981		GASKET-FLOAT BOWL -(1/16)
141	796193		KIT, Choke Shaft
163	795629		GASKET-AIR CLEANER -(Air Cleaner)
187	791766		LINE, Fuel -(Cut To Required Length)
187A	791873		LINE-FUEL -(Molded)
190	690940		SCREW -(Fuel Tank)
240	298090S		FILTER, Fuel
276	271716		WASHER-SEALING
601	791850		CLAMP, Hose
617	270344S		SEAL, O-Ring -(Intake Manifold)
633	691321		SEAL-CHOKE/THR SHAFT -(Throttle Shaft)
633A	693867		SEAL, Choke/Throttle Shaft
670	692294		SPACER, Fuel Tank
957A	692046		CAP, Fuel Tank
957B	796577		CAP-FUEL TANK
958	698183		VALVE, Fuel Shut Off
972B	699374		TANK, Fuel
975	796611		BOWL, Float
1059	692311		KIT, Screw/Washer

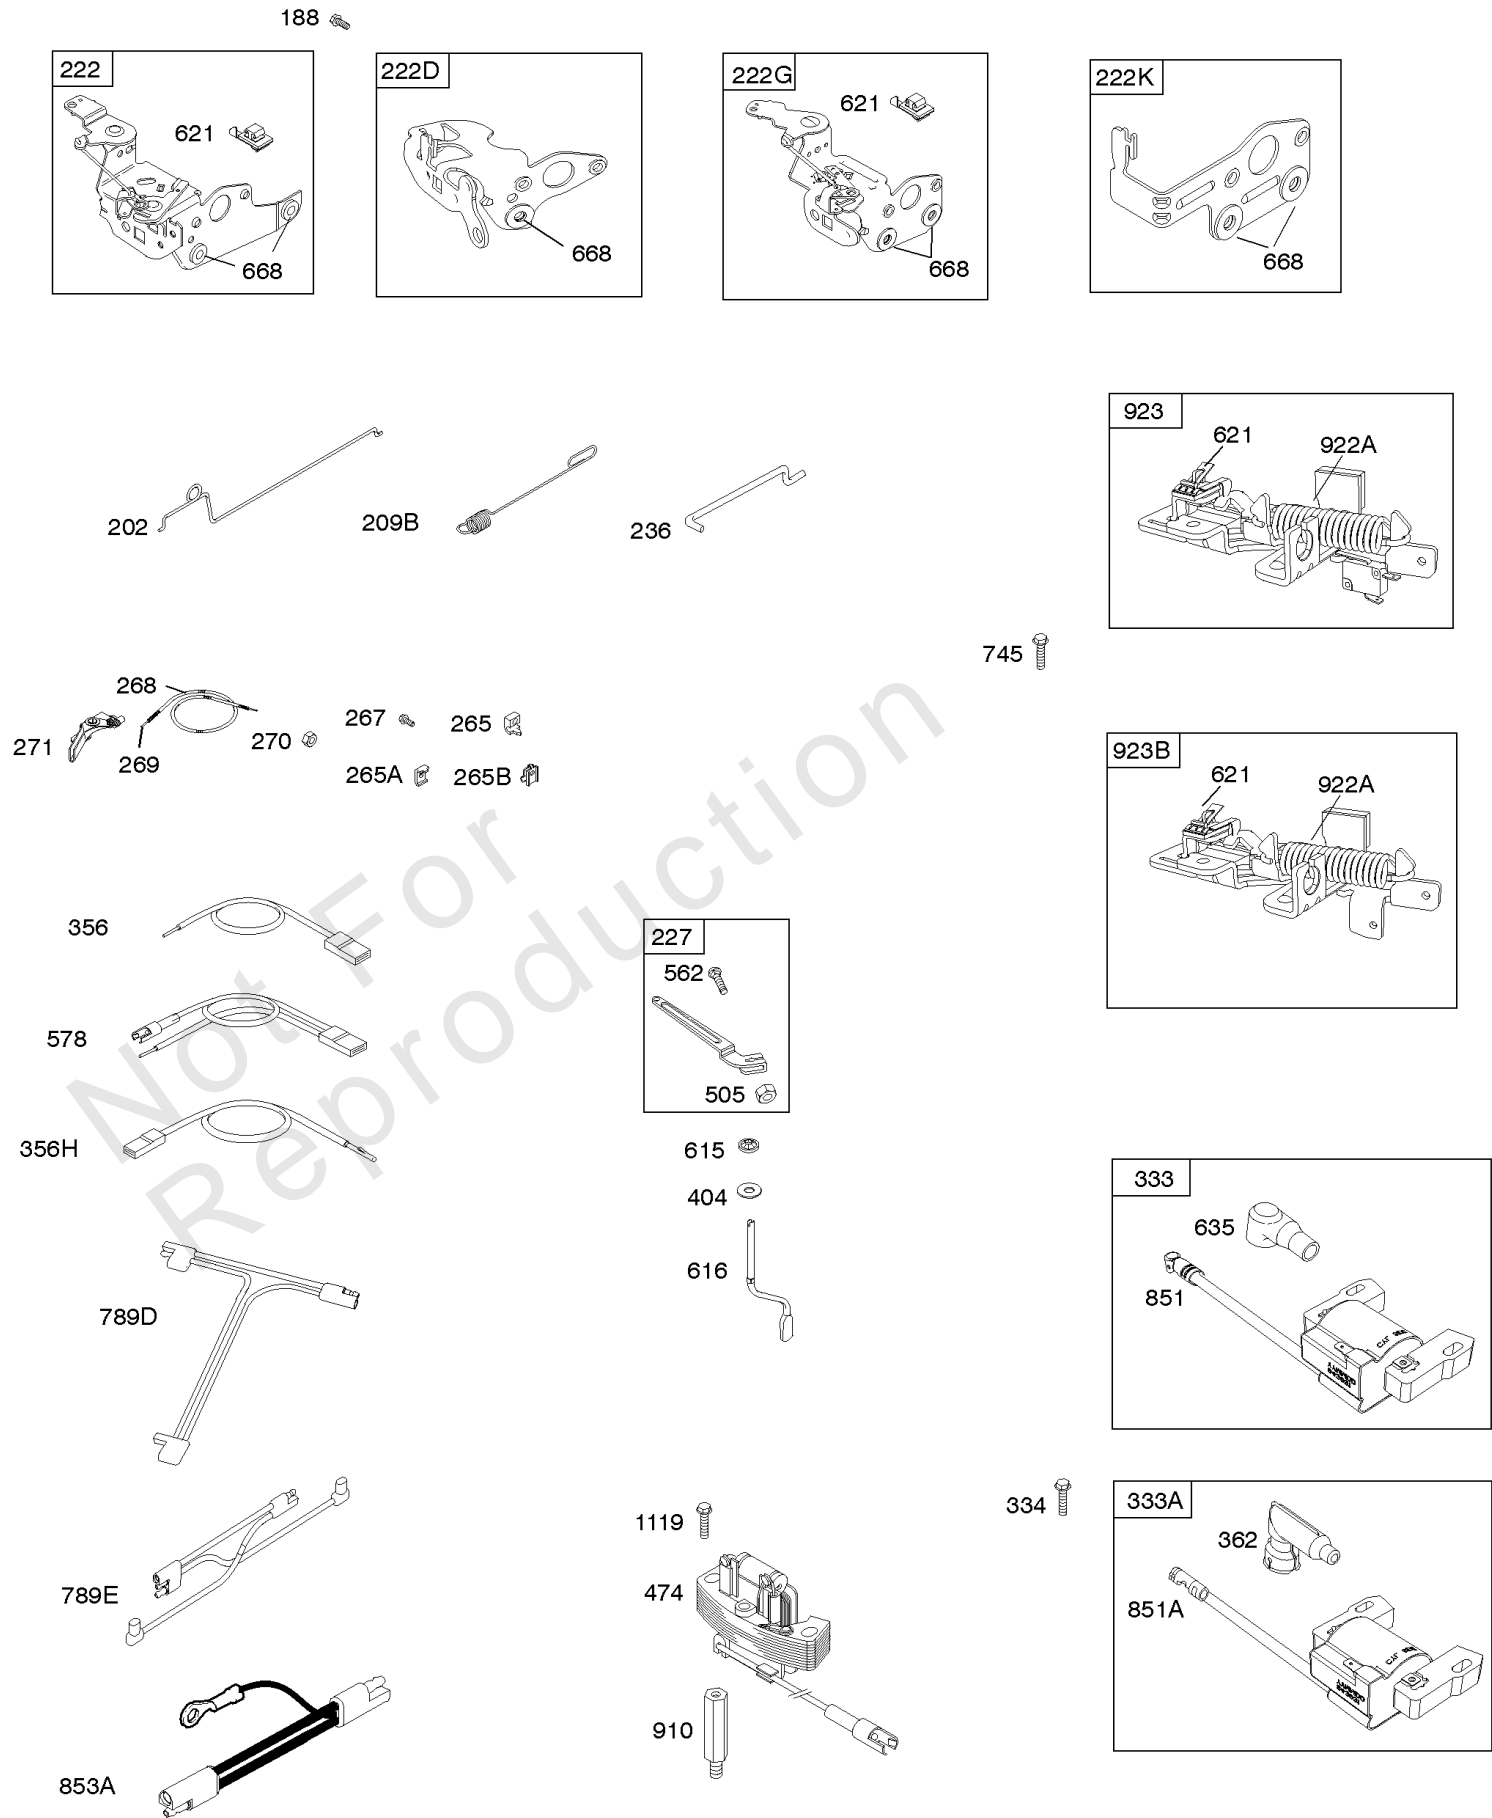

Controls, Electrical, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
188	693399		SCREW -(Control Bracket)
202	691829		LINK, Mechanical Governor
209B	699056		SPRING, Governor
222D	793754		BRACKET-CONTROL -(Fixed Speed) -Used Before Code Date 14012700
222K	593582		BRACKET-CONTROL -Used After Code Date 14012600
227	690783		LEVER-GOV CONTROL
236	691826		LINK, Lockout
265	690798		CLAMP, Casing
265A	691024		CLAMP, Casing
265B	692179		CLAMP-CASING
267	691044		SCREW -(Casing Clamp)
268	691025		CASING, Control Wire -(Cut To Required Length)
269	691026		WIRE, Control -(Cut To Required Length)
270	691027		NUT -(Control Wire Casing)
271	691028		LEVER, Control
333	590454		ARMATURE-MAGNETO
334	691061		SCREW -(Magneto Armature)
356	692390		WIRE, Stop
356H	690791		WIRE, Stop
362	793351		SHIELD-SPARK PLUG
404	690272		WASHER -(Governor Crank)
474	691991		ALTERNATOR
505	691251		NUT -(Governor Control Lever)
562	691119		BOLT -(Governor Control Lever)
578	695283		WIRE ASSEMBLY
615	690340		RETAINER, Governor Shaft
616	698801		CRANK-GOVERNOR
621	692310		SWITCH, Stop
635	66538S		BOOT, Spark PLug
668	493823		SPACER -(Includes 2)
745	691648		SCREW -(Brake)
789D	796574		HARNESS, Wiring
789E	594392		HARNESS, Wiring
851	493880S		TERMINAL-SPARK PLUG
851A	692424		TERMINAL, Spark Plug
853A	695897		ADAPTER, Wire
910	691094		STUD -(Alternator)
922A	692135		SPRING, Brake
923	796387		BRAKE -(Electric Start)
923B	796136		BRAKE -(Rewind Starter)

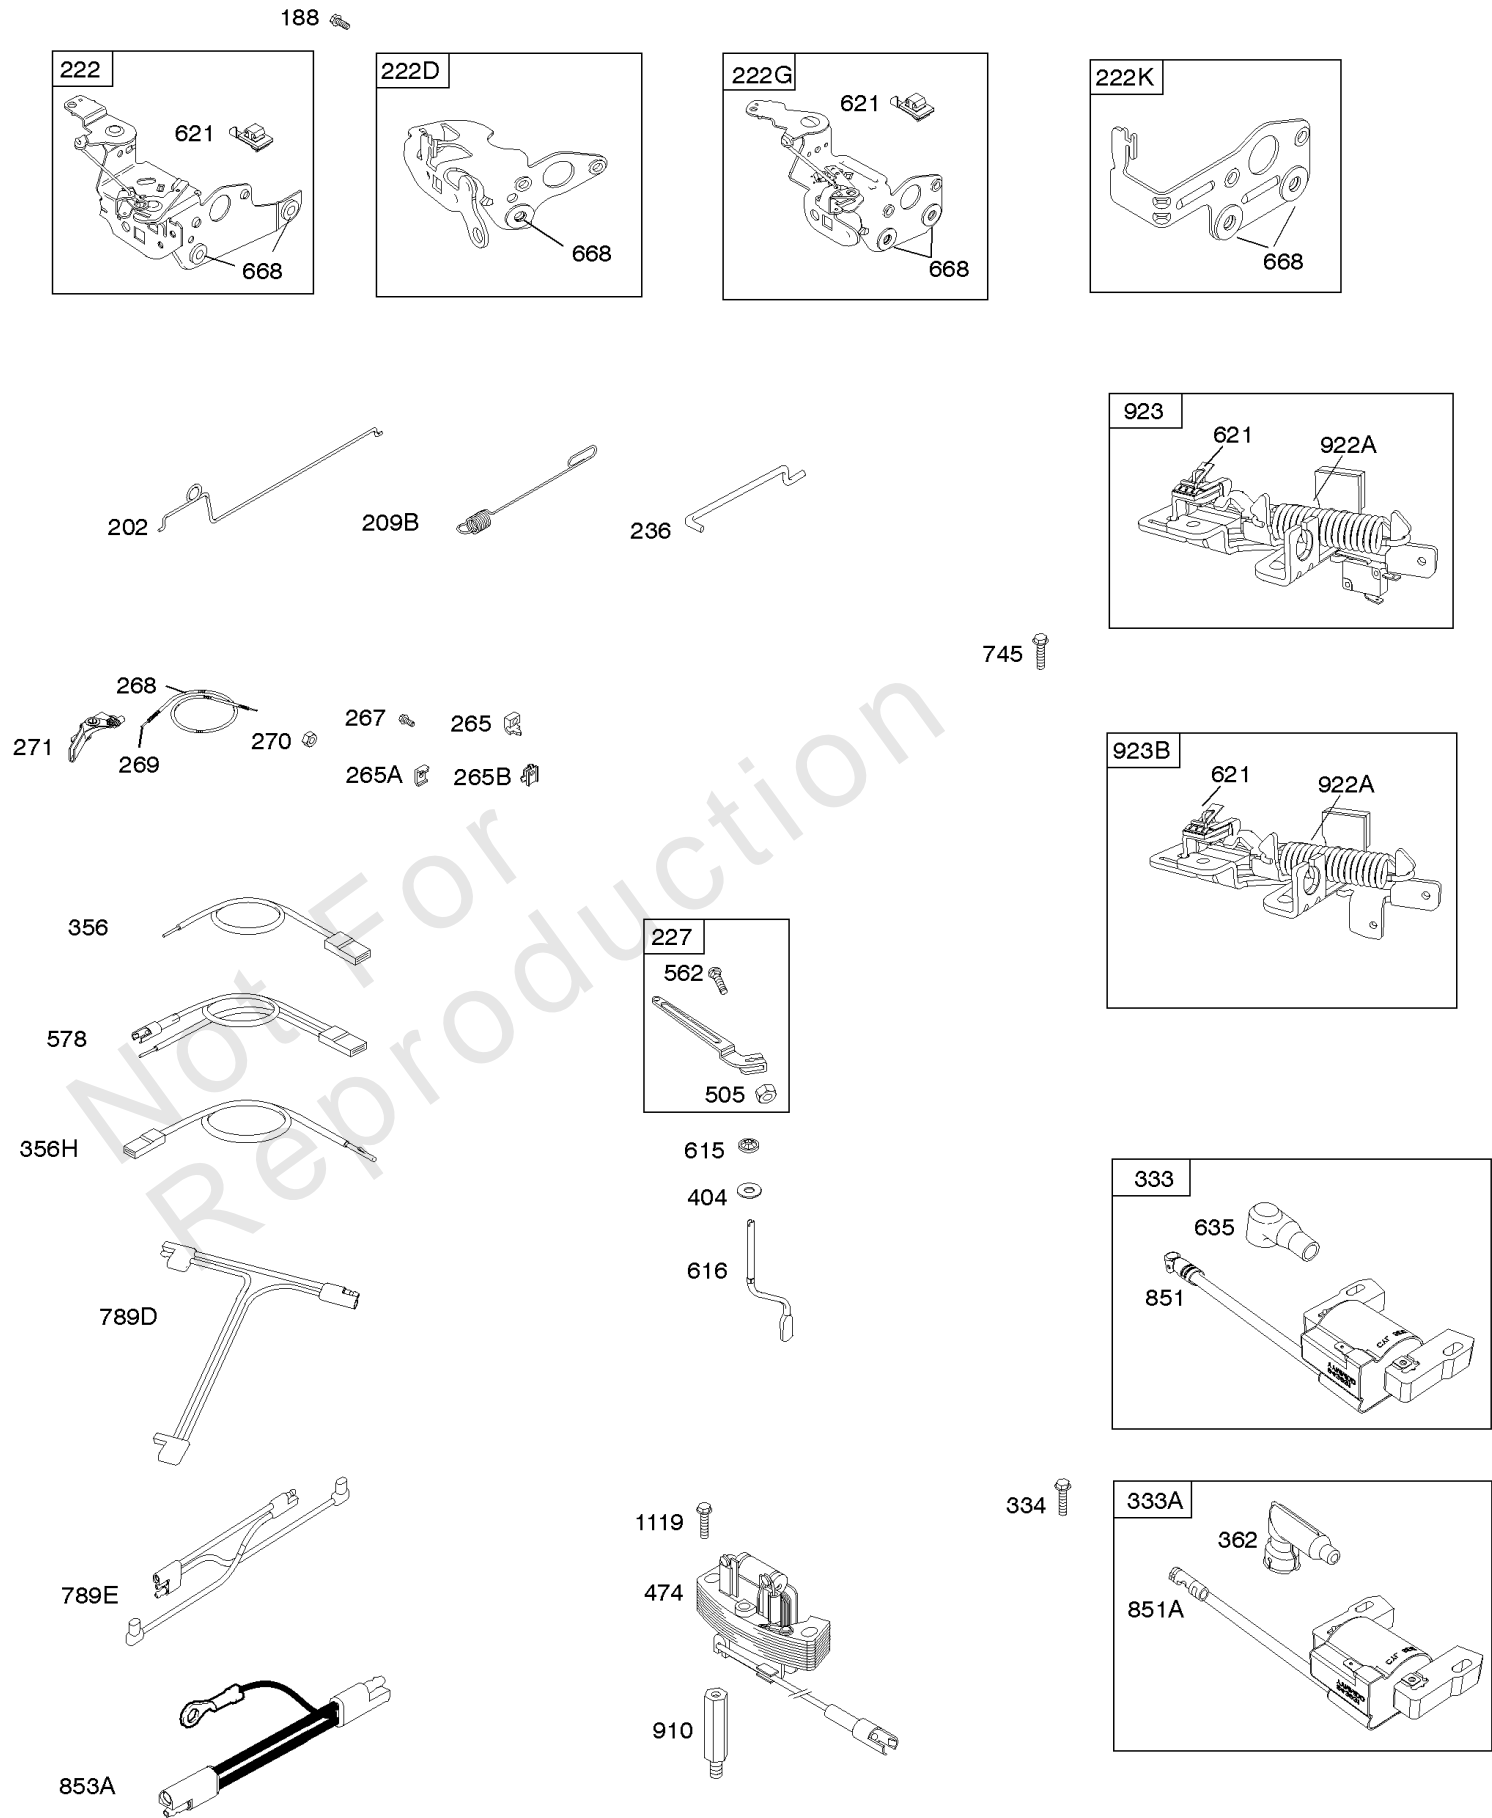

Controls, Electrical, Flywheel Brake, Governor Spring, Ignition

REF NO	PART NO	QTY	DESCRIPTION
1119	692979		SCREW -(Alternator)

Not For Reproduction

Replacement Engine - US & Canada

REF NO	PART NO	QTY	DESCRIPTION
	128M020025	1	Replacement Engine
	799984	1	Replacement Short Block
	-----		Top No-Load Speed: 3100 -Trim: ALL
	-----		Service Note: This Service Engine is NLA. Contact Your Engine Distributor For a Replacement

Not For Reproduction

